

<u>36V Battery Pack – Battery Change Instructions</u>



Battery Specs:

12 Volt, 12 Amp-hour lead acid sealed, Type AGM

Magline part number 61075

1. Remove battery pack from machine and set on hard level surface with clear cover facing up.





- 2. Remove the four corner screws that hold the clear cover on, and slide the cover off.
- 3. Remove the four screws that hold the battery pack end cap OPPOSITE battery box connector bracket, and set it aside.
- 4. Remove the white spade terminals from each of the 3 batteries, and then slide them out.



- 5. Slide in the new batteries, terminals facing the battery box connector bracket, and connect them exactly as they were originally connected.
- 6. Reassemble side cover. Remember to put back the foam spacer between the end cap and last battery.
- 7. Slide on clear cover, and reattach to battery box. BE VERY CARFUL NOT TO OVERTIGHTEN THE 4 CORNER SCREWS. IF YOU OVERTIGHTEN THEM, THE COVER COULD CRACK.
- 8. Dispose of your dead batteries properly by taking them to any store or garage that sells batteries. They are required to take them back for recycling at no charge to you.

