## PANELLIFT® Cradle Tilt Memory Control Installation Guide




Tilt Adjustment Set Screw

**Clamp Set Screw** 



## FIG 1

Tilt the PANELLIFT® Cradle into the loading position and set the Cradle Tilt Memory Control inside the Mounting Head Assembly (FIG 1).

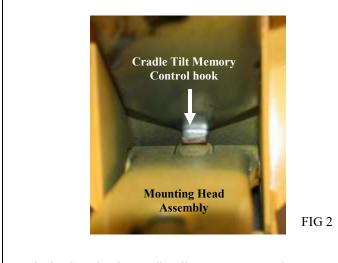

Set the hook under the Cradle Tilt Memory Control to engage inside the Mounting Head Assembly (FIG 2).




FIG 3



## FIG 4

The Cradle Tilt Memory Control body should lay flat on the PANELLIFT® Cradle Mounting Head Assembly (FIG 3).

Tighten the Clamp Set Screw (FIG 3 & 4)

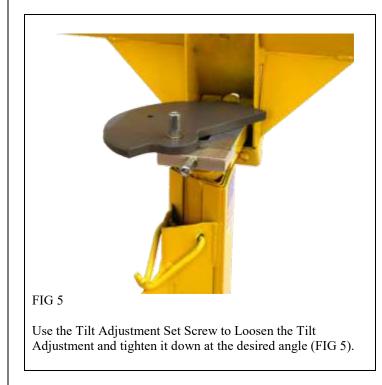

M021-21-00-00/08-05-2013



www.industrialproducts.com | 888-243-3339 | sales@industrialproducts.com