

## **PANELIFT® 01-22 HVAC Cross Arm Installation and Use Guide**

For lifting round or square ductwork.



The PANELIFT® 01-22 HVAC ductwork cross arms are sold as individual pieces. Two are required for proper use.

Each cross arm comes with two adjustable bracket clips. Attach and secure the clips at points along the cross arm to best fit and hold the ductwork you are lifting and center it on the cradle.



Remove the original PANELIFT® drywall lift cross arms and attach the HVAC cross arms as shown.




The PANELIFT® cradle is shown tilted for illustrative purposes only. Load ductwork only when the cradle is locked in the horizontal position.

Do not exceed the PANELIFT weight capacity limit of 200 lbs. for model 439 (shown here), or 150 lbs. for model 138-2.



Extend the PANELLIFT® cradle outriggers to support longer sections of ductwork.

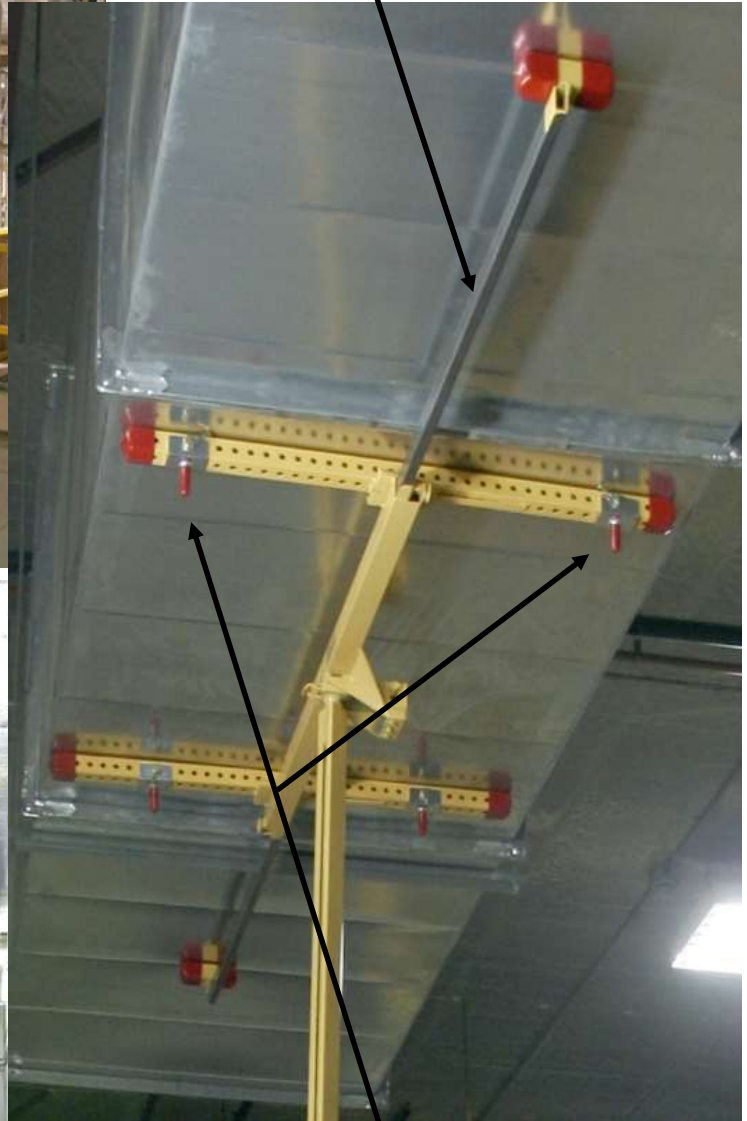

Where the ductwork is too wide to properly position the adjustable bracket clips, simply remove them or attach them so the pins are out of the way.

