



PRIME DESIGN™

A Safe Fleet Brand

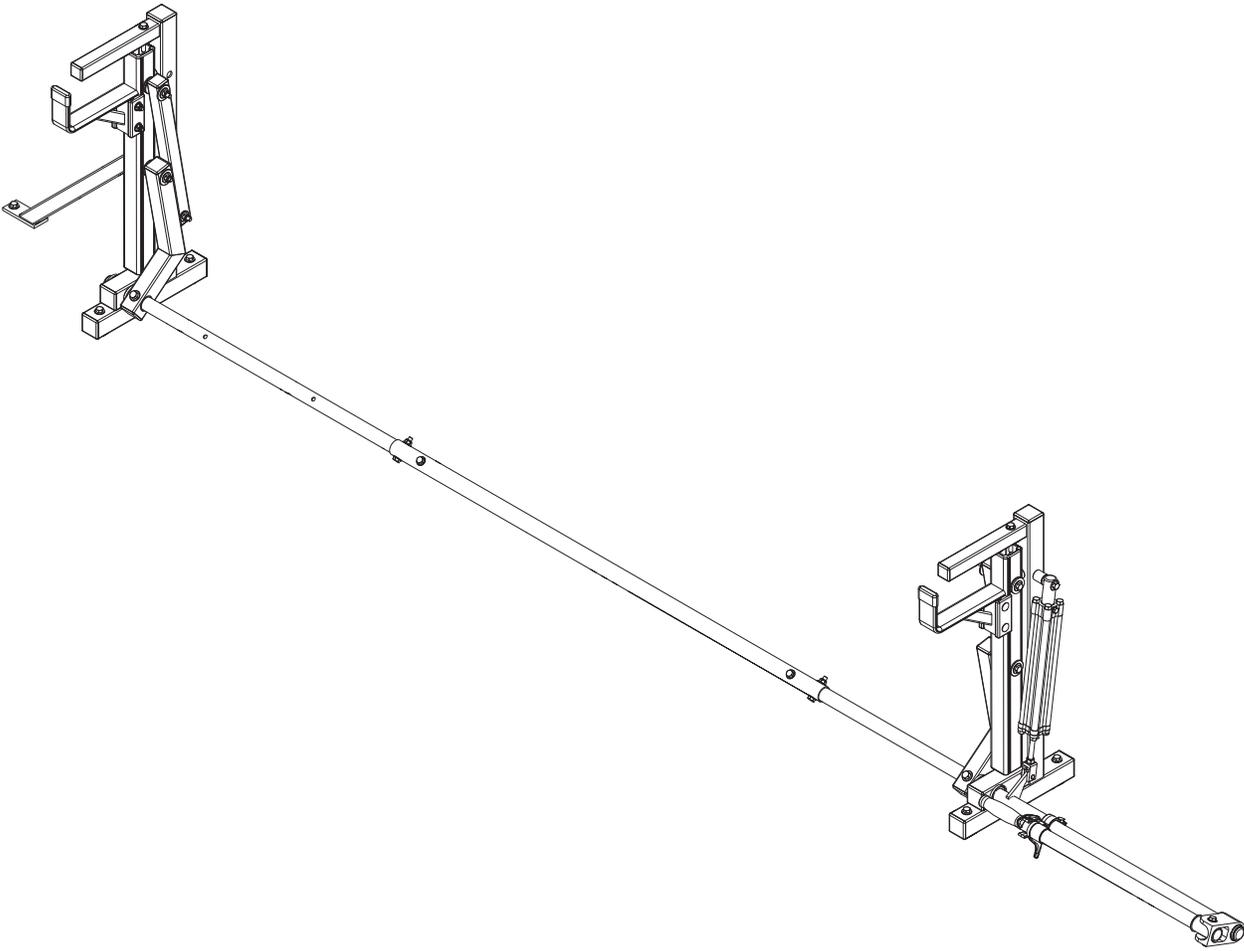


UVX 201


CONTENTS OVERVIEW

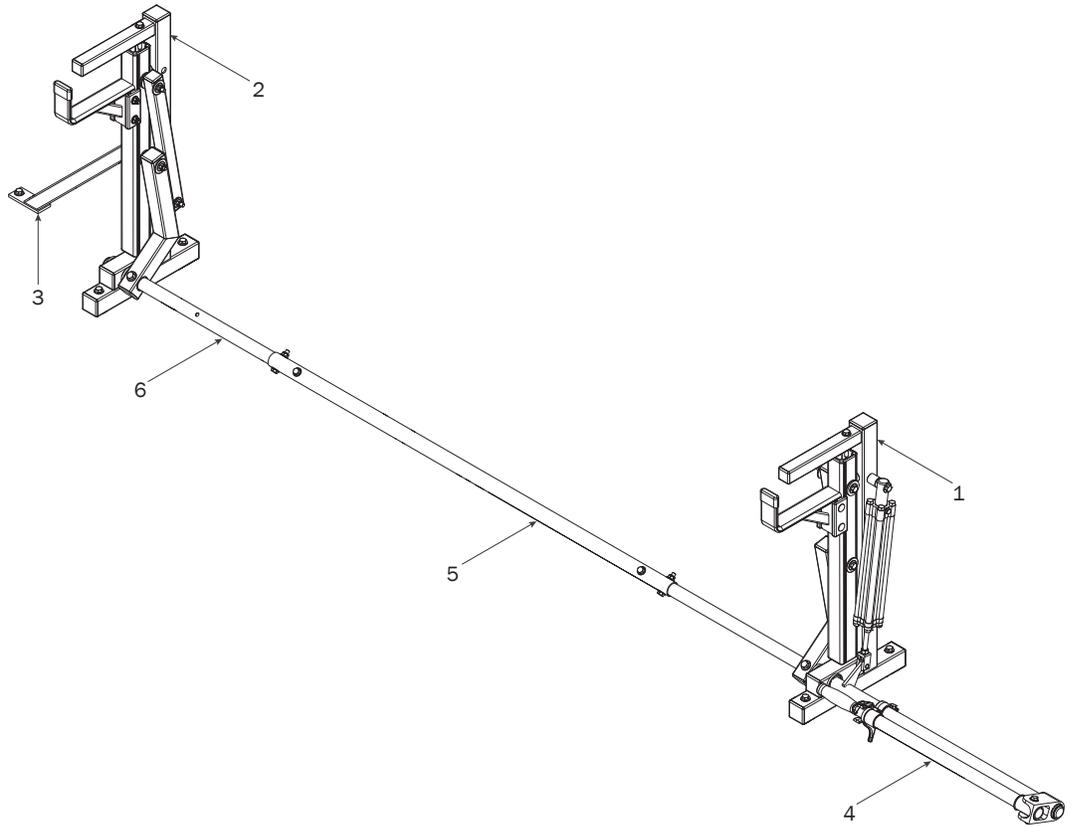

1—Rear Rotation Assembly..... (Qty 1)

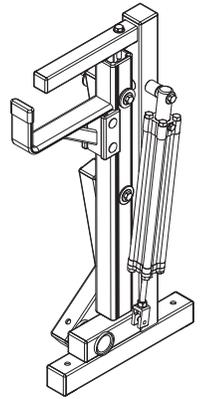


2—Front Rotation Assembly..... (Qty 1)

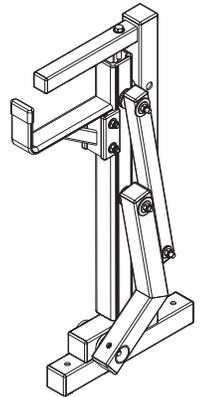

3—Mount Brace..... (Qty 1)
20.00"



4—Rear Drive Shaft..... (Qty 1)
Left Hand, 50.00"




5—Connecting Bar..... (Qty 1)
48.00"




6—Front Drive Shaft..... (Qty 1)
B Version, 35.75"




HKT-8162-Rotation Hardware Kit



Cotter Pin (1X)




Clevis Pin (1X)




M8 Lock Nut (4X)




3/8" Lock Nut (2X)

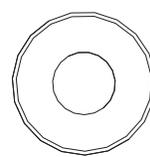

5/16" Flat Washer (8X)

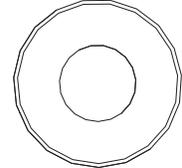


3/8" Flat Washer (4X)

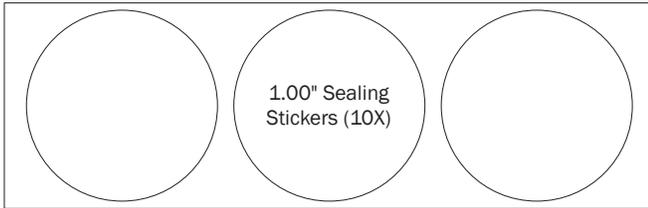

1.00" Sealing Stickers (10X)




Anti-Seize (1X)




Lubricant (1X)


HKT-0055-Rotation Hardware Kit

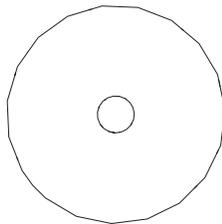


Neoprene Washer (5X)

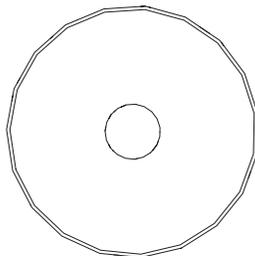


Fender Washer (5X)

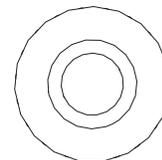

5/16" Seal Washer (5X)

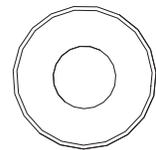

5/16" Flat Washer (2X)



M8 x 65MM (1X)



M8 x 70MM (4X)



M8 Lock Nut (6X)



M8 x 30MM (1X)




Anti-Seize (1X)

MOUNTING DIMENSIONS




Mounting to Service Body: dimensions are dependent upon Crossbar distances of 6'-8' plus allowance for the Mount Brace from the front of the Utility Rack.


Allow spacing for the Mount Brace, but do not drill or install until Step 9.

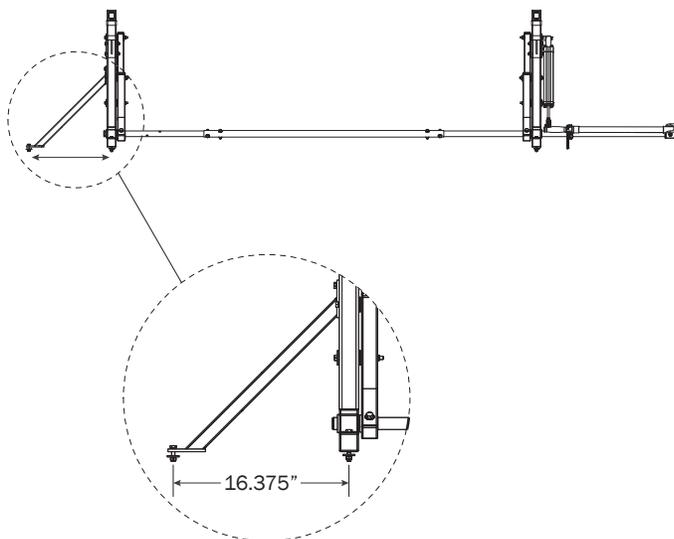


0.1 6.00 Ft: Drill holes into the Service Body mounting location according to dimensions shown.

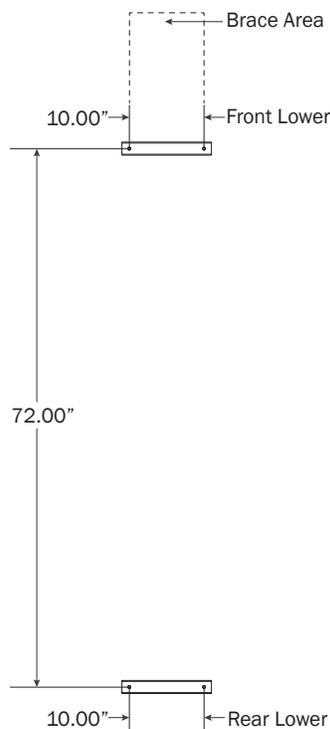


0.2 7.00 Ft: Drill holes into the Service Body mounting location according to dimensions shown.

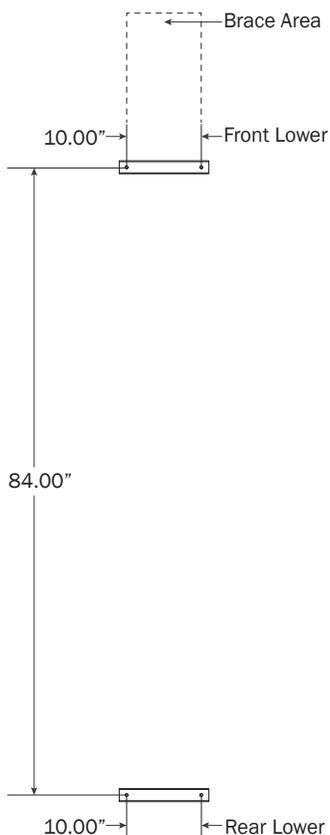


0.3 8.00 Ft: Drill holes into the Service Body mounting location according to dimensions shown.

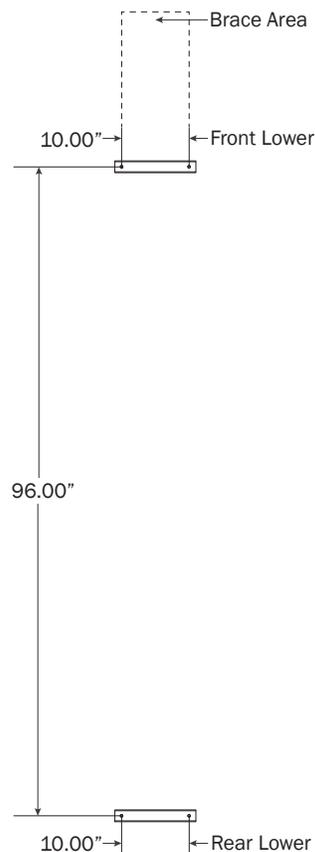


LEFT ROTATION ASSEMBLY SEQUENCE

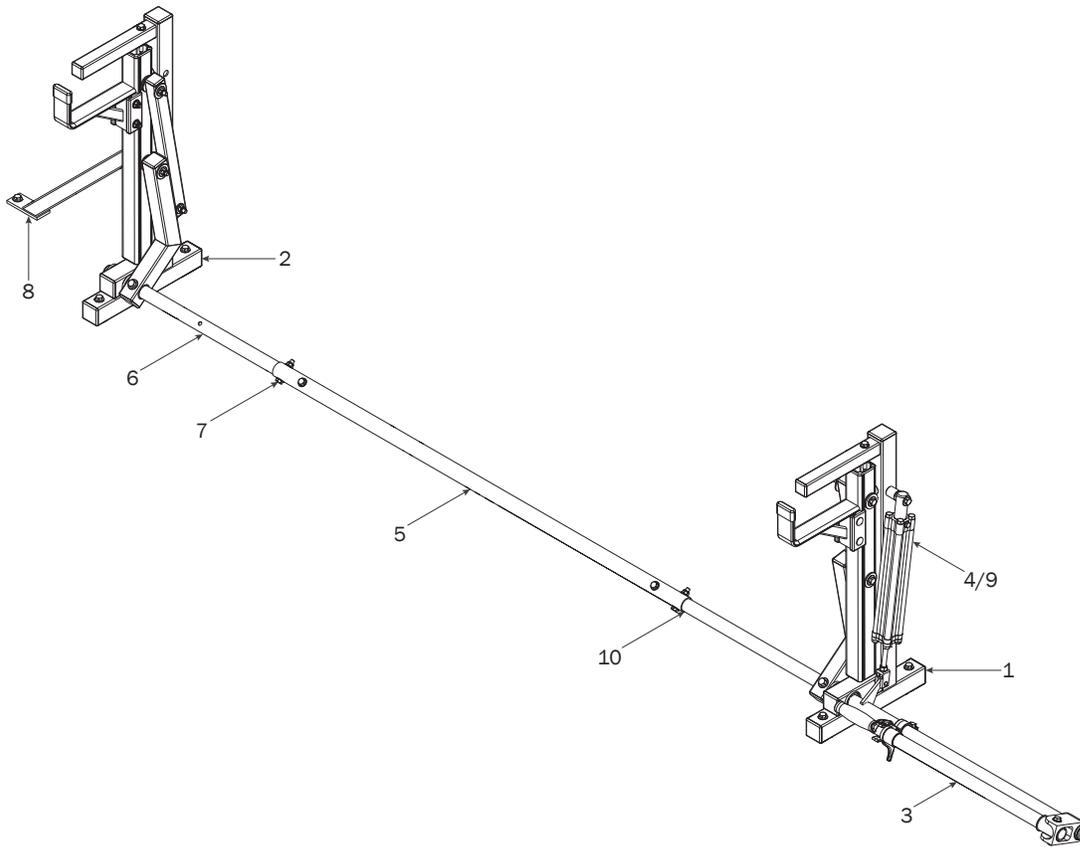



REAR ROTATION ASSEMBLY

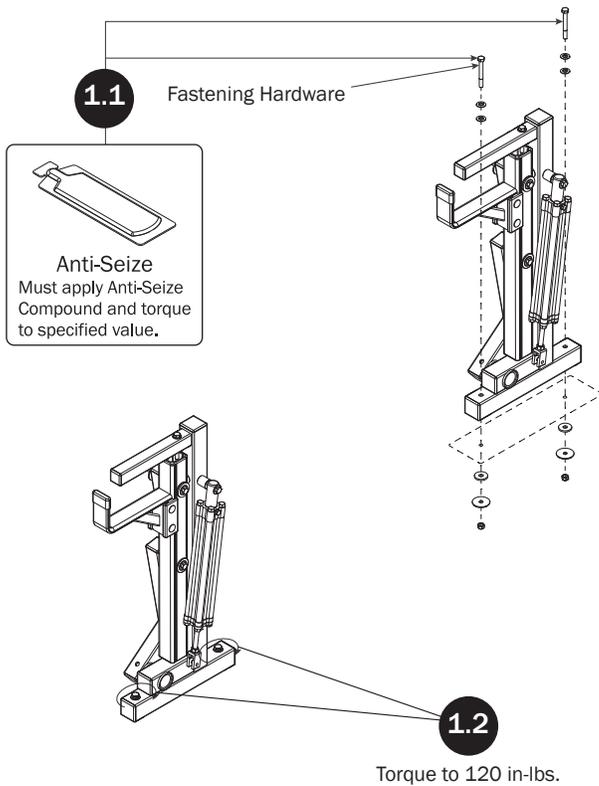


FRONT ROTATION ASSEMBLY

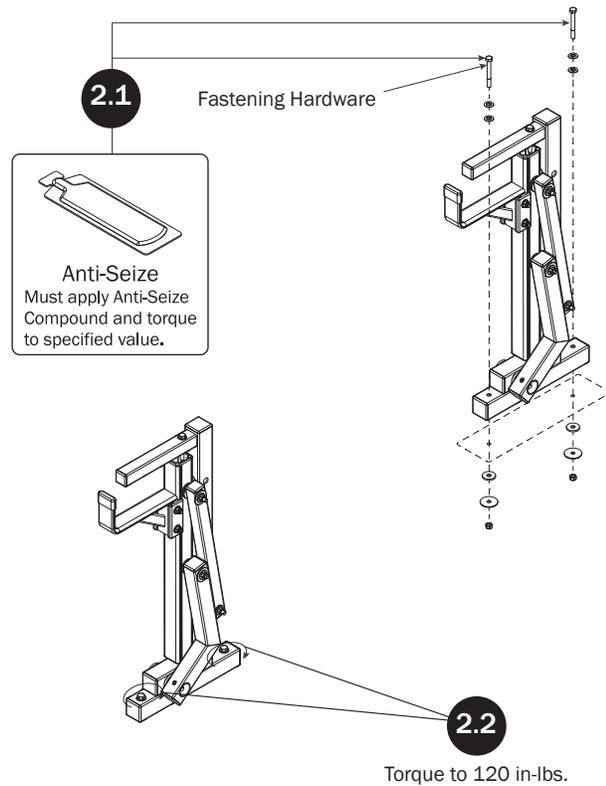


REAR DRIVE SHAFT

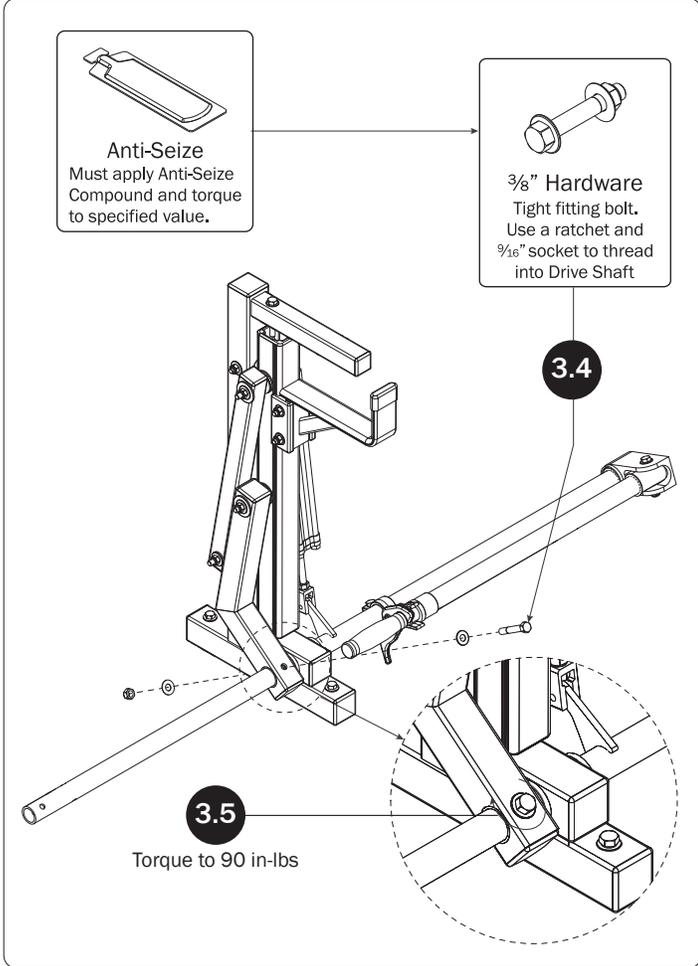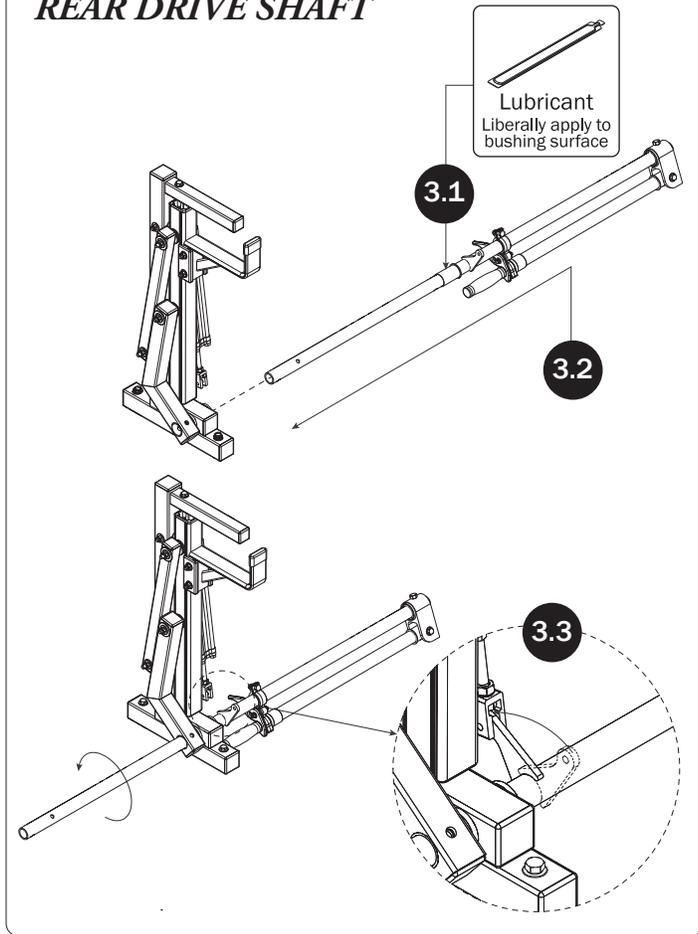


CYLINDER HARDWARE

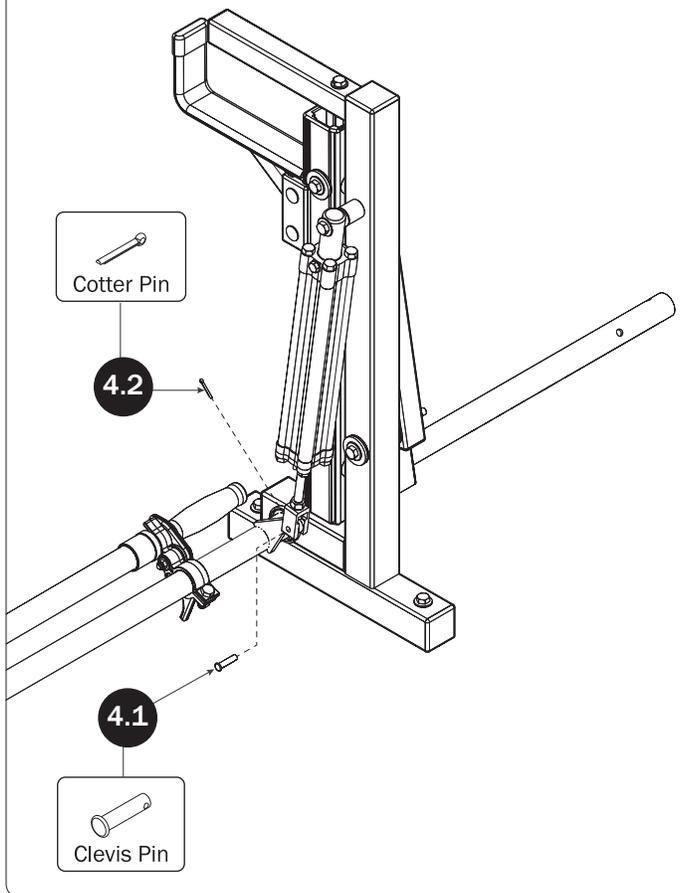


CONNECTING BAR

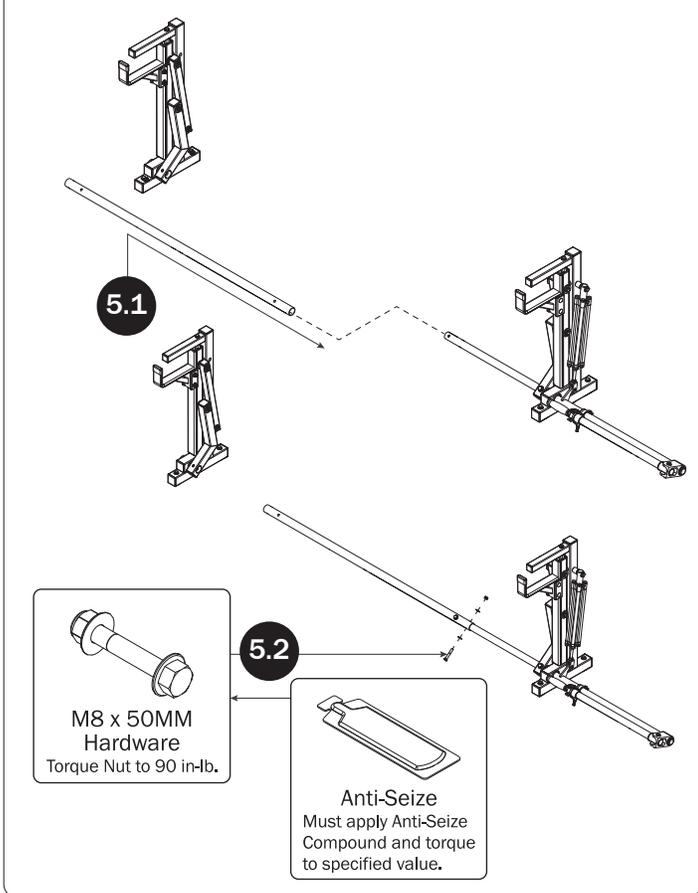


FRONT DRIVE SHAFT

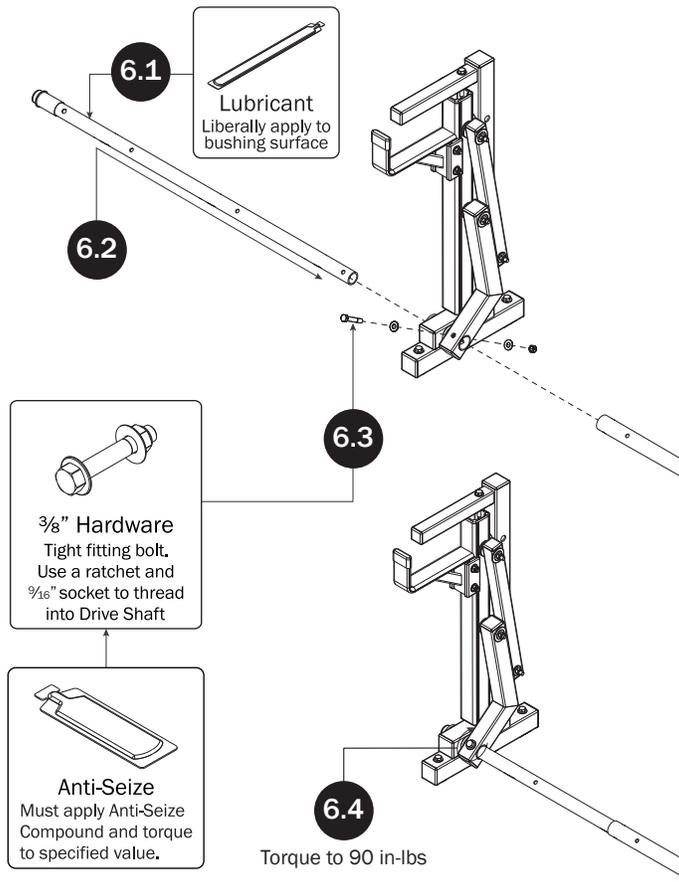


CONNECTING BAR FASTENERS




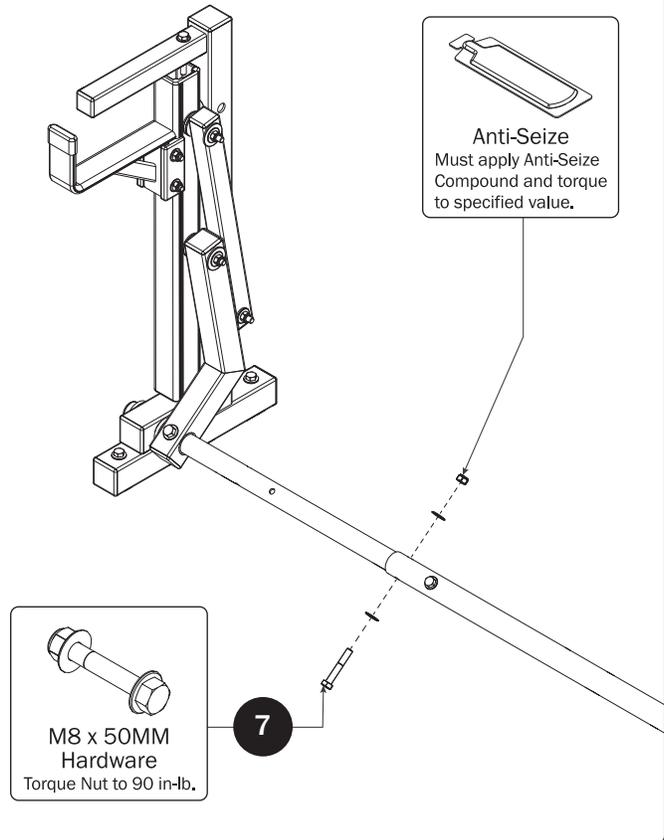


MOUNT BRACE INSTALLATION

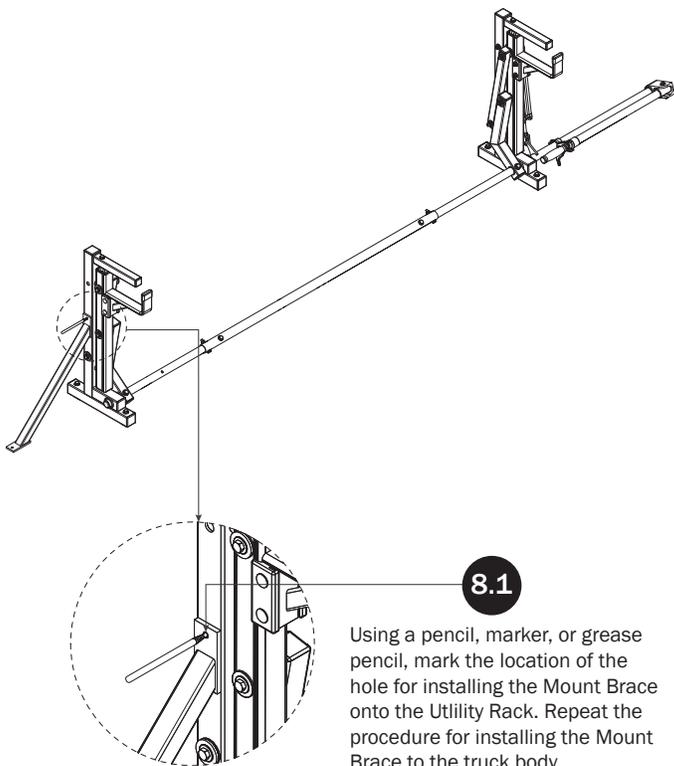

8.2 Remove the Mount Brace to expose the bolt hole markings. Using a 9MM, 23/64", or T size bit, drill a hole into the Utility Rack at the marked bolt hole location created during Step 8.1.

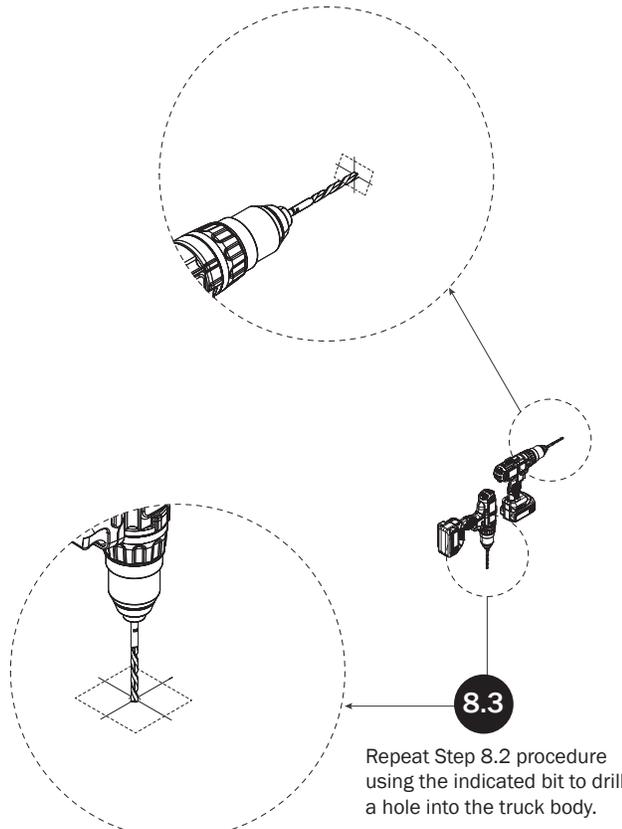

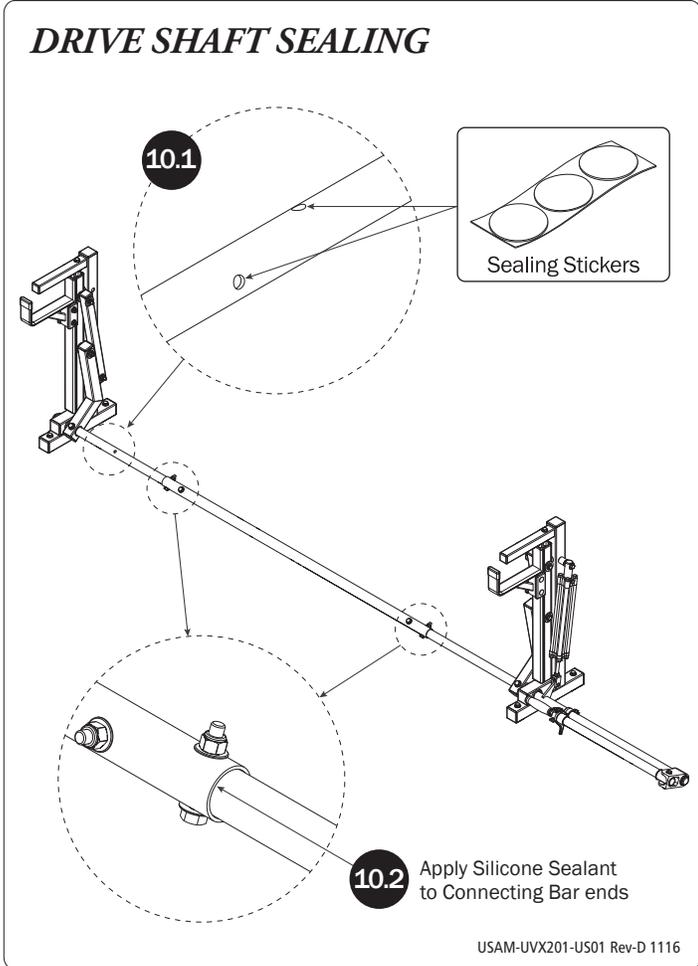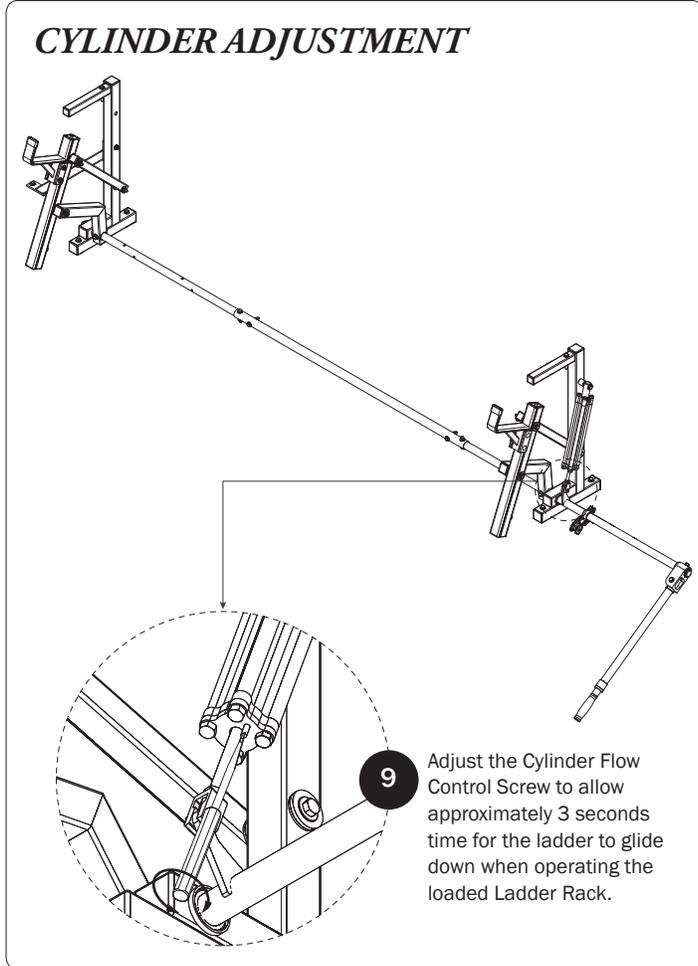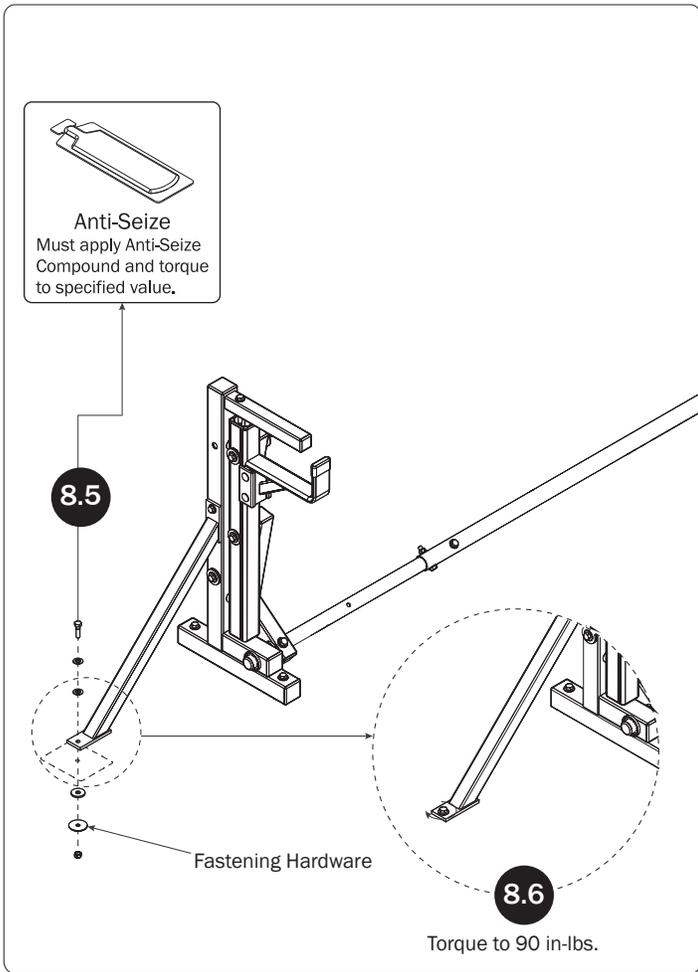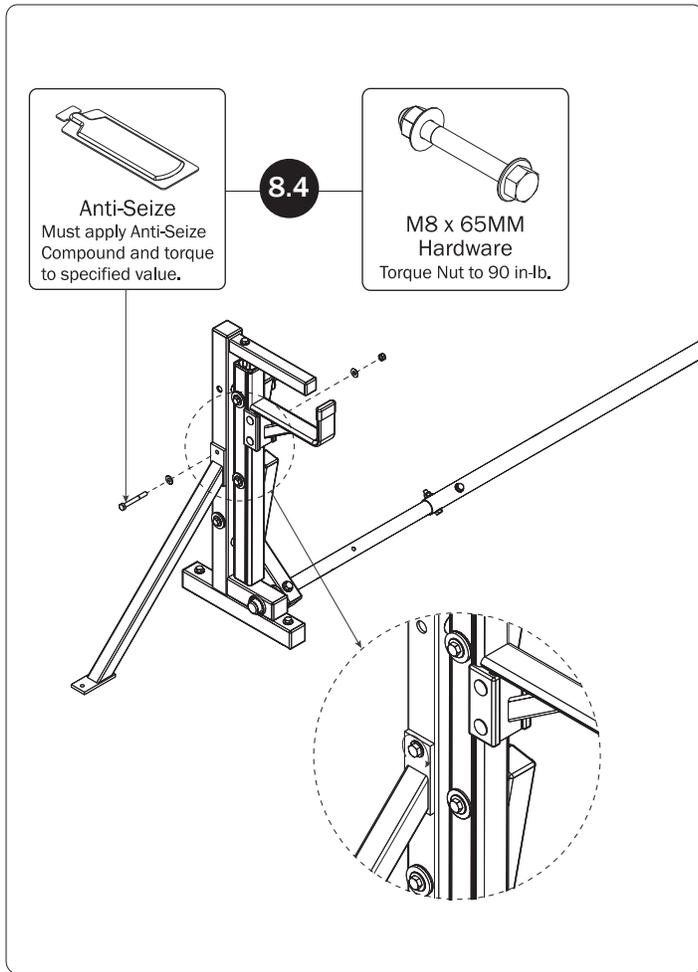

USAM-UVX201-US01 Rev-D 1116