

Assembly Manual

PATHWAY® 3G Modular Access System

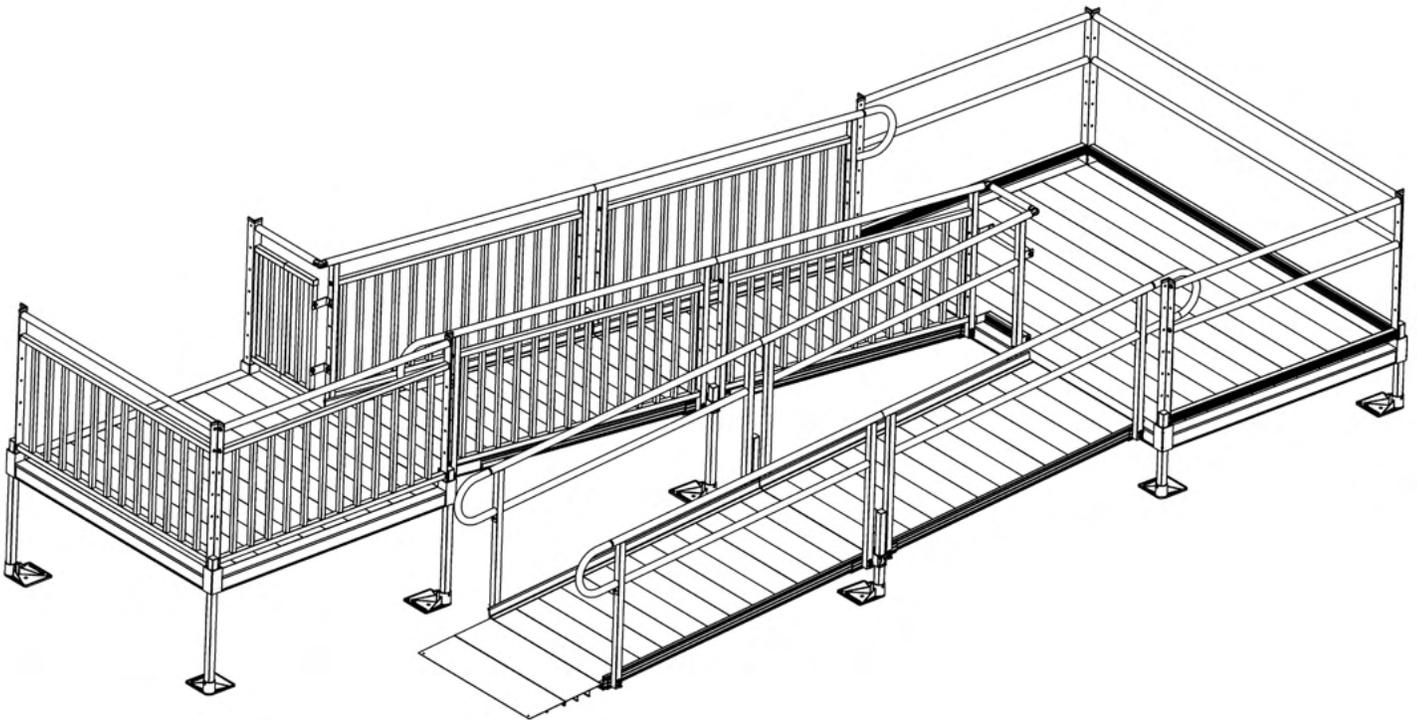


Image shown with multiple ramp and platform handrail options.

LIFETIME WARRANTY. Please register at www.ezaccess.com/warranty-satisfaction.
© EZ-ACCESS®, a division of Homecare Products, Inc. *All rights reserved.*

All text and images contained in this document are proprietary and may not be shared, modified, distributed, reproduced, or reused without the express written permission of EZ-ACCESS.



Manufactured in the USA

16397 REV 04-18-2022



ATTENTION INSTALLER and END USER

- For residential use only!
- 1,000 lb. rated load; never exceed rated load.
- Read this manual in its entirety, ensuring you understand all instructions and warnings prior to ramp assembly and use.
- Please read and become familiar with the 'MAINTENANCE AND SAFETY' section of this manual.
- Fill out online warranty registration.
- INSTALLER: Please leave this ASSEMBLY MANUAL with the end user.

IMPORTANT SHIPPING INFORMATION

- Immediately open shipping boxes and inspect for damage or missing parts. If damaged or missing parts are noted, DO NOT INSTALL OR USE.
- Each system is shipped with a packing list. Confirm all items are present before starting installation. Also check for shipping damage immediately upon receipt and note any freight damage on freight bill while driver is still present. Contact shipper right away with any freight damage concerns. In most cases, freight damage claims will not be allowed unless noted on the freight bill. Pictures of damage before the unit is unpacked can be very helpful.

TOOLS TYPICALLY REQUIRED

- | | |
|--------------------------------|--|
| ✓ 1/2" SOCKET OR 1/2" WRENCH | ✓ BOX KNIFE |
| ✓ 9/16" SOCKET OR 9/16" WRENCH | ✓ HAMMER |
| ✓ 5/16" SOCKET OR 5/16" WRENCH | ✓ LEVEL |
| ✓ POWER DRILL | ✓ FILE |
| ✓ #2 PHILLIPS SCREW DRIVE | ✓ RUBBER MALLET |
| ✓ PLIERS | ✓ 1/4" MASONRY DRILL BIT (IF INSTALLING TO CONCRETE) |
| ✓ 1/8" DRILL BIT | ✓ DIGGING TOOLS (IF AN OBSTACLE NEEDS TO BE REMOVED) |
| ✓ 5/16" DRILL BIT | ✓ HACKSAW (FOR OPTIONAL HANDRAIL KITS) |
| ✓ 5/32" ALLEN WRENCH | ✓ 25' TAPE MEASURE |
| ✓ 3/16" ALLEN WRENCH | ✓ CONSTRUCTION ADHESIVE |

INTRODUCTION

Throughout this manual, the term “system” refers to the entire PATHWAY 3G Modular Access System, including any gates, stairs, ramps, platforms, risers, handrails, supports, transition plates, landing pads, and any/all hardware and components which are intended to be assembled on the PATHWAY® 3G Modular Access System.

SYMBOLS

- ⚠ The **WARNING** symbol indicates a potentially hazardous condition/situation. The safety warnings throughout this manual, and on your equipment, if any, are for the protection of people and property. Failure by any operator to abide by safety warnings will result in a waiver of all liabilities, loss of your warranty, and could result in equipment damage and or failure, property damage, risk of serious bodily injury, and or death. The symbol may appear in various colors and in conjunction with other symbols and with or without the written word “WARNING”.
- 👉 The **NOTE** symbol indicates important information. Failure to obey all notes could result in improper operation, less-than-optimum equipment performance, and at the sole discretion of the equipment manufacturer, may void your warranty. The symbol may appear in various colors and in conjunction with other symbols and with or without the written word “NOTE”.

WARNINGS

- ⚠ Maximum weight capacity is 1,000 lbs.; never exceed weight capacity.
- ⚠ Prior to assembly and use, read and follow all instructions, warnings, and labels. Following all instructions and obeying all warnings before and during use is necessary for safe operation. For additional information or to obtain replacement copies of instructions or labels, call 1-800-451-1903.
- ⚠ For people and mobility equipment only; not for commercial use.
- ⚠ Consult local building codes regarding securing the system for wind loads.
- ⚠ Before use with mobility equipment, refer to your mobility equipment's owner guide for acceptable ramp usage, including proper slope/incline, chair direction, etc.; never exceed its recommendations.
- ⚠ Only use the system with a qualified helper.
- ⚠ Always use a lap belt if using the system with mobility equipment.
- ⚠ If walking on the system, handrails are required and must be installed.
- ⚠ Before each use, check the system for worn, loose, or damaged parts. If you find any of these conditions, do not use the system and contact your dealer for service or repairs; failure to do so may result in serious injury.
- ⚠ Do not use the system if it is damaged or unstable.
- ⚠ Do not tamper with, attempt to repair, or modify any portion of the system.
- ⚠ Ensure that the landings the system will be placed on are substantial and of sound construction.
- ⚠ Use only if the secure, unobstructed, level landings can support, at minimum, the same weight capacity as the system (1,000 lbs.).
- ⚠ Ensure that the system is securely anchored before each use.
- ⚠ Use only if sufficient maneuvering room is available at both ends of the system to assure safe travel when entering and exiting the system.
- ⚠ Do not walk, sit, stand, etc. on the system until the installation is complete.
- ⚠ Consult local building codes regarding securing system for wind loads.
- ⚠ Keep the system clear of debris and clutter. Do not use if walking surface is unsafe.
- ⚠ Confirm the system is correctly leveled and positioned securely. Periodically check for ground shifts.
- ⚠ Never place anything on, under, or attach anything to system.
- ⚠ Only use components supplied or approved by manufacturer with system.
- ⚠ Do not sit, stand, or climb on guards, gates, or handrails.
- ⚠ Do not use any part of the system to support planters, lights, decorations, etc.

WARNINGS, CONT'D.

- ⚠ Do not run, jump, or play on or around the system, including climbing on or between the handrails.
- ⚠ Improper use of the system could result in serious injury.
- ⚠ Properly support and restrain system in transit or storage.
- ⚠ Do not use the system if its surface is covered with ice, snow, dirt, leaves, or other debris. Remove all accumulations and sweep the surface clean before use.
- ⚠ The system may be slippery in wet conditions; use caution as traction may be reduced.
- ⚠ Before each use, check the system for worn, loose, or damaged parts. If you find any of these conditions, do not use the system and contact your dealer for service or repairs; failure to do so may result in serious injury.
- ⚠ Always exercise caution when handling, installing, and or using the system.
- ⚠ For additional care, usage, or general safety information, please call 1-800-451-1903.
- ⚠ Aluminum conducts electricity. Do not use or handle the system around live wiring or during electrical storms.

TABLE OF CONTENTS

SECTION 1: BASIC SYSTEM COMPONENTS

IDENTIFYING COMPONENTS	6-12
------------------------------	------

SECTION 2: PLATFORMS

INSTALL PLATFORMS	13
INSTALL SUPPORT TUBES AND FEET AND ADJUST PLATFORM HEIGHT	14-15
CONNECT TWO PLATFORMS TOGETHER	15-16
45-DEGREE ANGLE PLATFORM.....	17
8' X 5' TURN BACK PLATFORM	17
LOW PROFILE PLATFORM.....	18-24
INSTALL UNIVERSAL ANGLE BRACE - PLATFORMS	24
INSTALL UNIVERSAL CROSS BRACE	25

SECTION 3: RAMPS

CONNECT RAMP SECTIONS	26
INSTALL RAMPS ON PLATFORMS	27
ATTACH SUPPORT LEG BRACKETS AND LEGS TO RAMPS:.....	28-30
INSTALL UNIVERSAL ANGLE BRACE - RAMPS	30
INSTALL GROUND TRANSITION RAMP	31
INSTALL A SINGLE RAMP RUN TO AN EXISTING STRUCTURE	32
ANCHOR RAMP UPPER TRANSITION	33
ANGLE RAMPS WITH RESPECT TO PLATFORMS, PORCHES, OR DECKS	34

SECTION 4: HANDRAILS

RAMP WITHOUT HANDRAILS	35
RAMP HANDRAILS	35-36
ASSEMBLE STANDARD PLATFORM HANDRAILS	37
INSTALL STANDARD PLATFORM HANDRAILS	38-39
8' X 5' TURN BACK PLATFORM HANDRAILS (OPTIONAL EQUIPMENT)	39-40
45-DEGREE ANGLE PLATFORM HANDRAILS	40-47

SECTION 5: CLOSURES

TOP RAIL AND CURB.....	48-51
TWO-LINE CLOSURE LOWER RAIL	52
VERTICAL PICKET CLOSURE	53-54
TWO-LINE TURN BACK CLOSURE.....	55-57

SECTION 6: FINAL PLATFORM/RAMP STEPS AND CHECKS

SECURE RAMPS TO PLATFORM	58
INSTALL RAMP HANDRAIL END LOOPS	59
INSTALL RAMP HANDRAIL END CAPS	60
INSTALL RAMP CORNER PROTECTORS	60
TOUCH-UP ARCHITECTURALLY FINISHED HANDRAILS	60
FINAL CHECKS.....	60

SECTION 7: OPTIONAL EQUIPMENT

RAMP SUPPORT TOP	61
RAMP LOWER TRANSITION	62
SINGLE BRIDGE PLATE	62
LANDING PAD.....	63-64
PLATFORM TIE STRAPS.....	64
LIGHTNING GROUND ROD	65
TIE DOWN	66-67
GATE.....	68-69
CONNECT 45-DEGREE ANGLE PLATFORM WITH TWO-LINE RAILS TO STANDARD PLATFORM.....	70-73

SECTION 8: MAINTENANCE & SAFETY



PERIODIC MAINTENANCE & SAFETY	74
-------------------------------------	----




SECTION 9: DEICING

.....	74
-------	----

1. **BASIC SYSTEM COMPONENTS**

Because each ramp configuration will differ from one another, your system may or may not contain all these basic system components. Identify your system components before you begin.

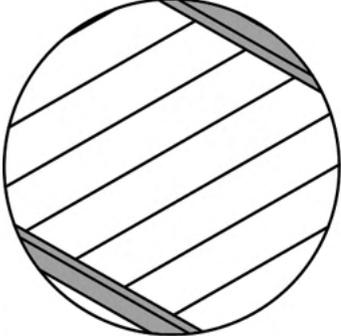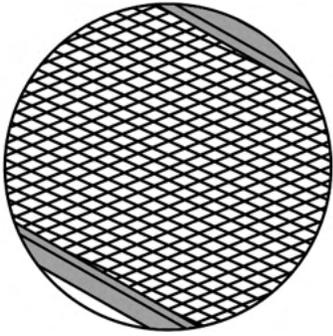
SURFACE OPTIONS	
SOLID SURFACE	EXPANDED METAL SURFACE
	

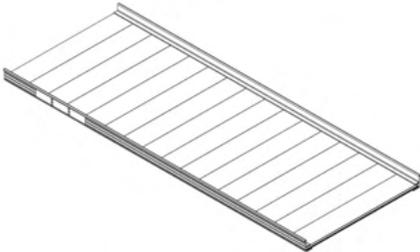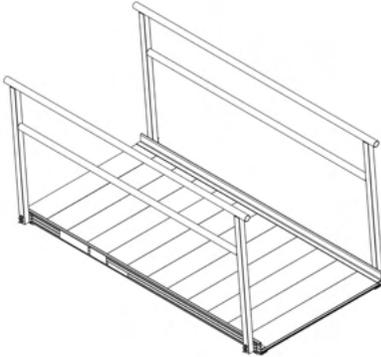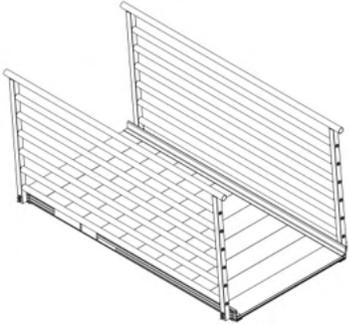RAMP AND RAMP HANDRAIL OPTIONS	
RAMP W/O HANDRAILS	RAMP W/ TWO-LINE HANDRAIL
	
RAMP W/ VERTICAL PICKETS	RAMP W/ HORIZONTAL PICKETS
	


KEY RAMP COMPONENTS

PSLXXPR – SUPPORT LEG PAIRS

XX DENOTES USABLE LENGTH (LENGTHS AVAILABLE 10" THROUGH 100" IN 6" INCREMENTS)

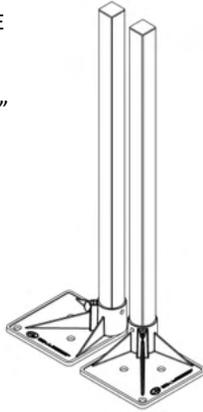


PRGT & PRGT48 RAMP GROUND TRANSITION 18" X 36" and 18" X 48"

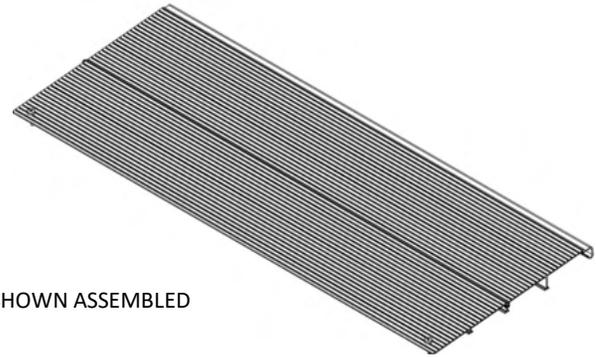


SHOWN ASSEMBLED

PRHBPR – RAMP HANDRAIL END BRACKET (PAIR)

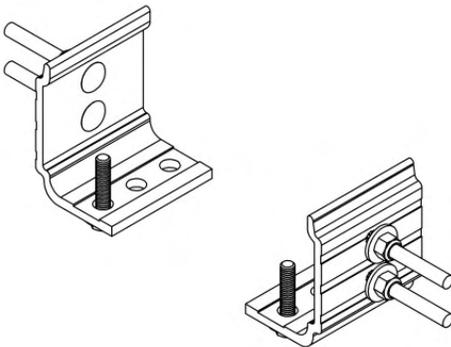


PRRUC – UNIVERSAL CONNECTOR – RAMP TO RAMP

INCLUDES COMPONENTS TO CONNECT RAMPS AND RAMP HANDRAILS

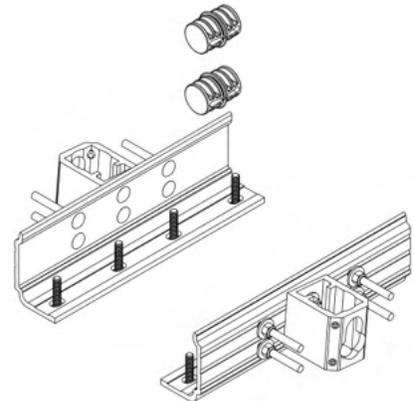


PRSUT – UNIVERSAL RAMP SUPPORT - TOP




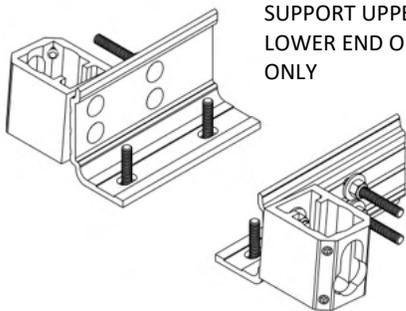


USED WHEN LEGS SUPPORT UPPER OR LOWER END OF RAMP ONLY

RAMP HANGER PAIR

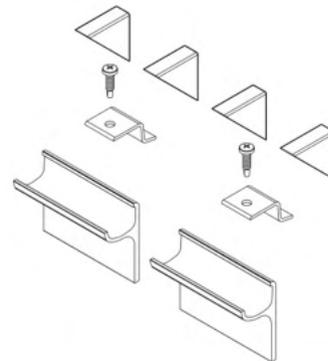


KEY RAMP COMPONENTS, CONT'D.

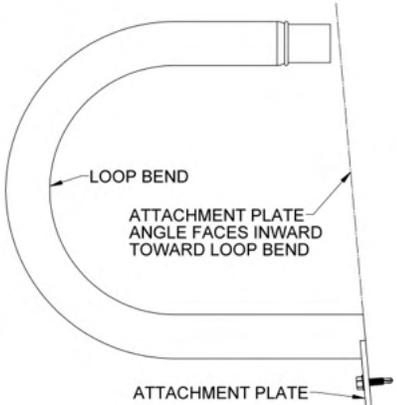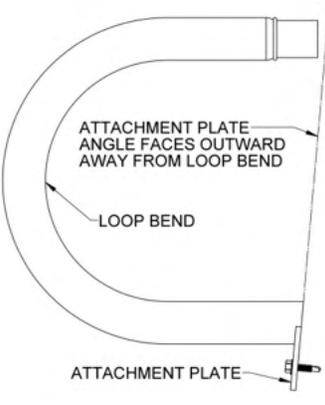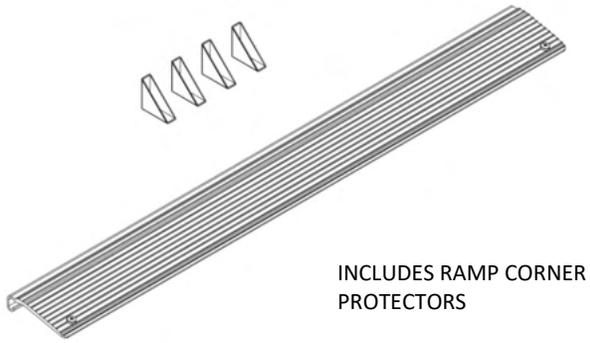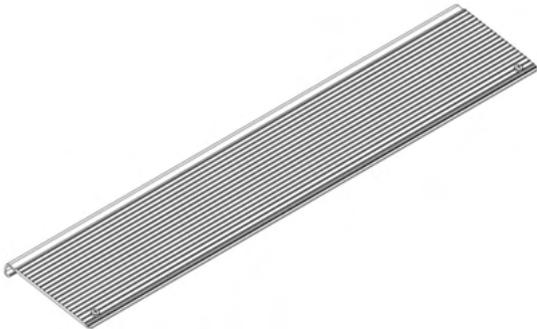
<p>PRHRLU- UPPER HANDRAIL END LOOP</p>	<p>PRHRL - LOWER HANDRAIL END LOOP</p>	<p>PHREC - HANDRAIL END CAP</p>
		
<p>PRUT – RAMP UPPER TRANSITION</p>		<p>PRLT – RAMP LOWER TRANSITION</p>
		

PLATFORMS AND PLATFORM HANDRAIL OPTIONS


**PLATFORM (STRAIGHT CONFIGURATION)
W/TWO-LINE HANDRAILS**

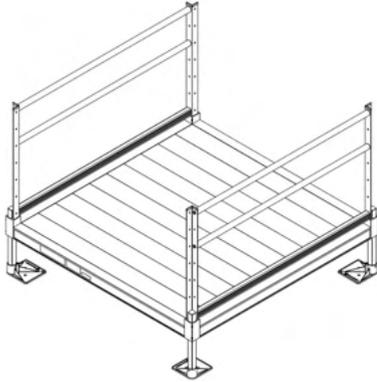


**PLATFORM (TURN CONFIGURATION)
W/TWO-LINE HANDRAILS**

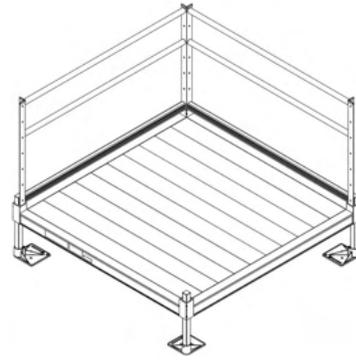


PLATFORM W/ HORIZONTAL PICKET HANDRAILS

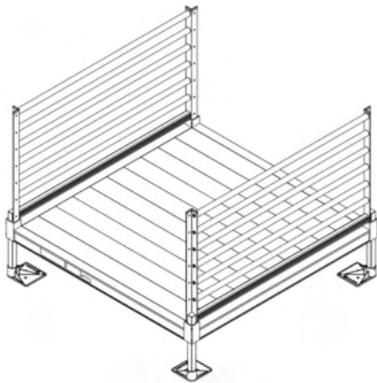

PLATFORM W/ VERTICAL PICKET HANDRAILS

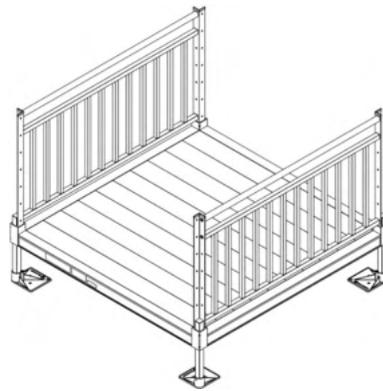


**PLATFORM (8' X 5' TURN BACK)
W/TWO-LINE HANDRAILS**

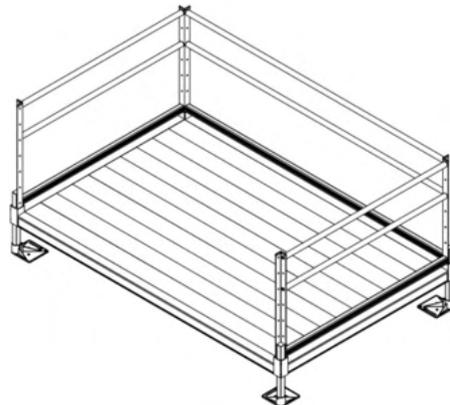


PLATFORM AND PLATFORM HANDRAIL OPTIONS, CONT'D.


**PLATFORM 45-DEGREE ANGLE
W/ TWO-LINE HANDRAILS**
NOT AVAILABLE WITH HORIZONTAL PICKET HANDRAILS

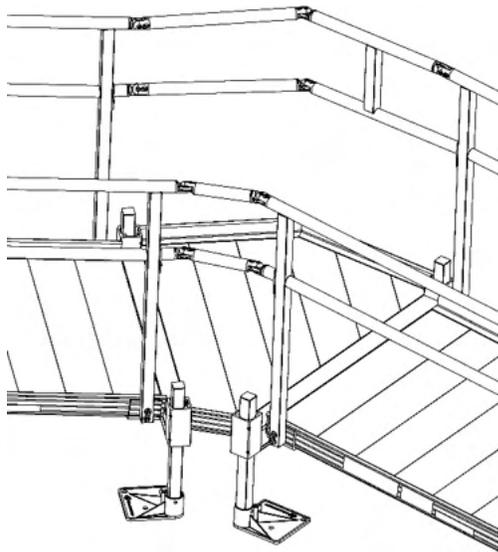


**PLATFORM 45-DEGREE ANGLE
W/ VERTICAL PICKET HANDRAILS**
NOT AVAILABLE WITH HORIZONTAL PICKET HANDRAILS

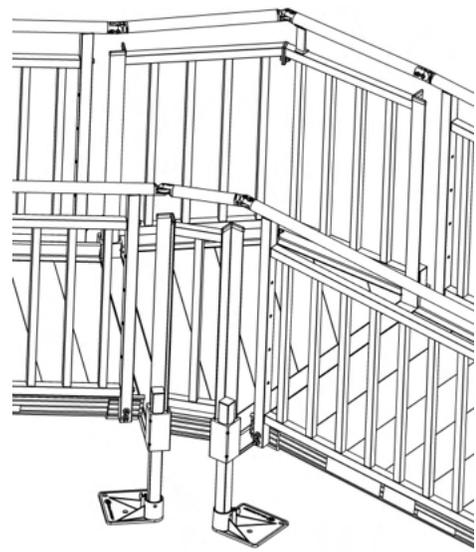

LOW PROFILE PLATFORM W/TWO-LINE HANDRAILS

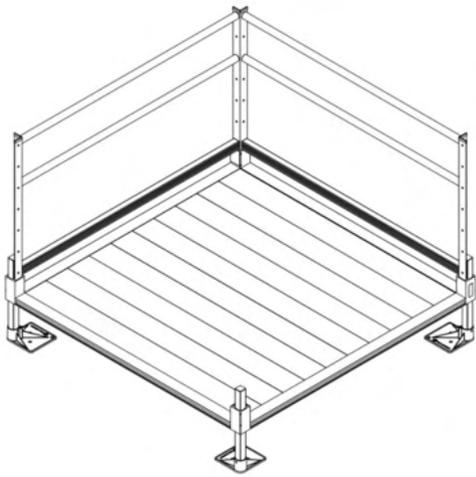


LOW PROFILE PLATFORM W/TWO-LINE HANDRAILS
USED AS A LANDING PAD

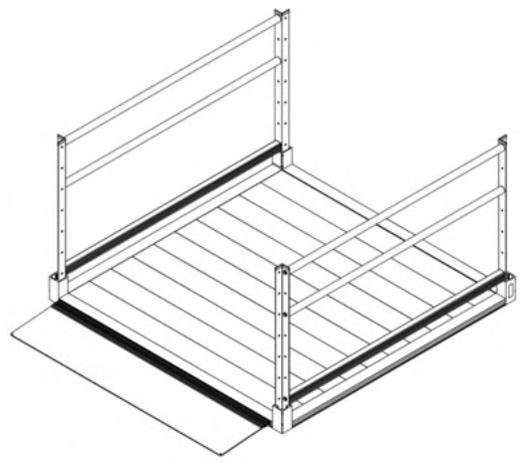


KEY PLATFORM COMPONENTS


PPPC – CONNECTOR – PLATFORM TO PLATFORM

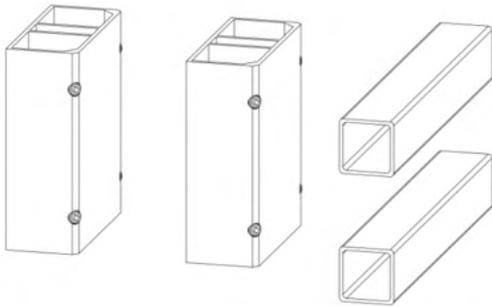


PPTS – PLATFORM TIE STRAP

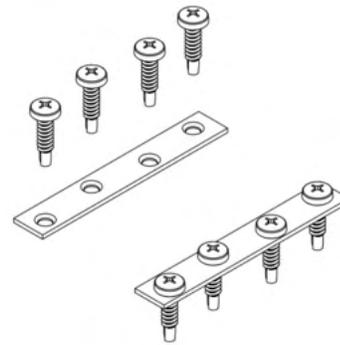

PBP36, PBP48, PBP60 – BRIDGE PLATE

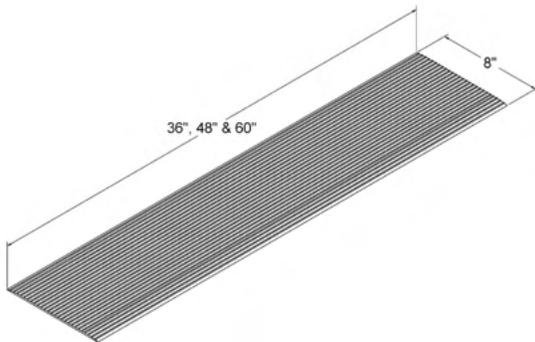

PRLWALP – RAMP LEG WELDED ALUMINUM – LOW PROFILE PAIR

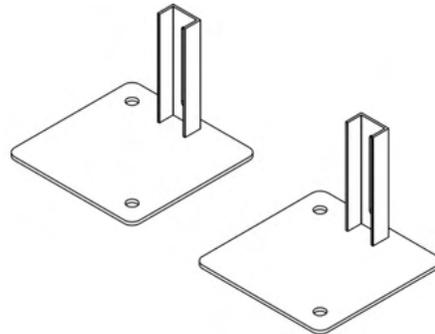


**PPLPGT06, PPLPGT08, PPLPGT10, PPLPGT12, PPLPBT48
LOW PROFILE GROUND TRANSITION OR BRIDGE TRANSITION**




CLOSURE OPTIONS

PPCTL – TWO-LINE CLOSURE HANDRAIL

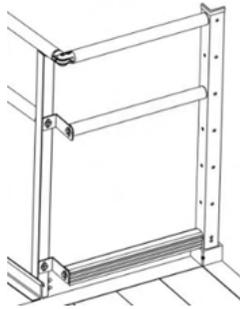

**PPCVP4, PPCVP5, PPCVP5
VERTICAL PICKET CLOSURE HANDRAIL**

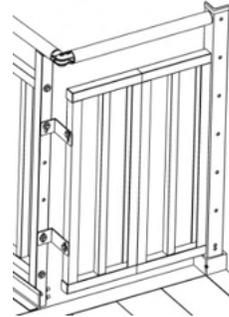

ADDITIONAL OPTIONS

PTDK – TIE DOWN KIT



PUAB – ANGLE BRACE




PUCB4, PUCB5 & PUCB8 – UNIVERSAL CROSS BRACE


- PUCB4 USED ON 4' PLATFORM SIDE
- PUCB5 USED ON 5' & 6' PLATFORM SIDES
- PUCB8 USED ON 8' PLATFORM SIDE



PLP – LANDING PAD

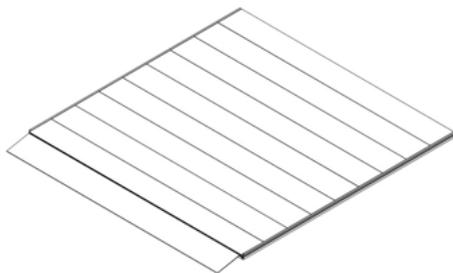

PUG36 – PATHWAY 3G GATE 36"

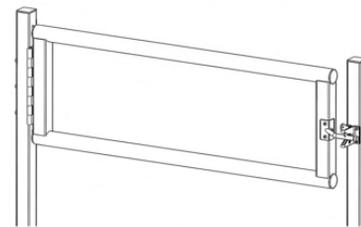

2. PLATFORMS

2.1. INSTALL PLATFORMS

- ✎ If your system does not include a platform, skip to 'CONNECT RAMP SECTIONS'.
- ✎ Platform handrails are shown for clarity of how to orient platforms in various configurations. It is strongly suggested that all platforms and ramps be installed before installing handrails (see 'HANDRAILS').





2.1.1. There are four basic platform arrangements (one or more of these arrangements may be used in an installation). All four require the same procedure for assembly except for FIG.2.3 which requires an additional PPPC (PLATFORM TO PLATFORM CONNECTOR).

FIG. 2.1 Straight configuration

FIG. 2.2 Turn configuration


FIG. 2.3 Turn back configuration (two 5' x 4' platforms shown combined to make 5' x 8' turn back)

FIG. 2.4 8' x 5' turn back

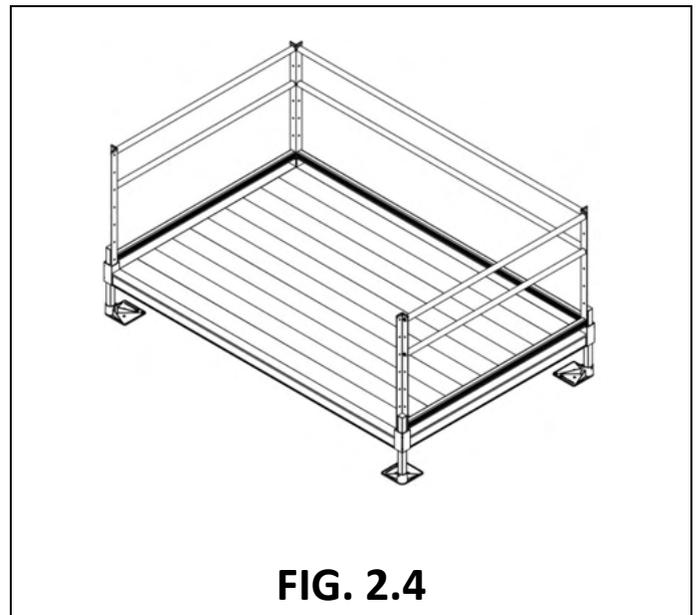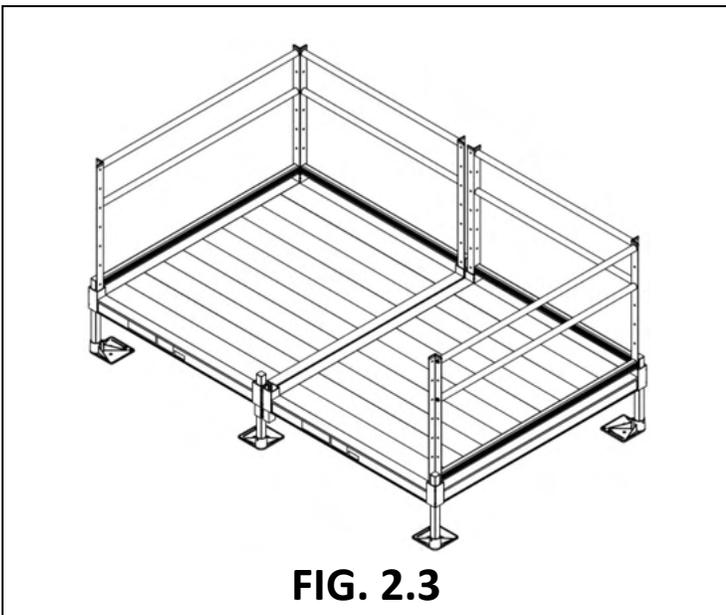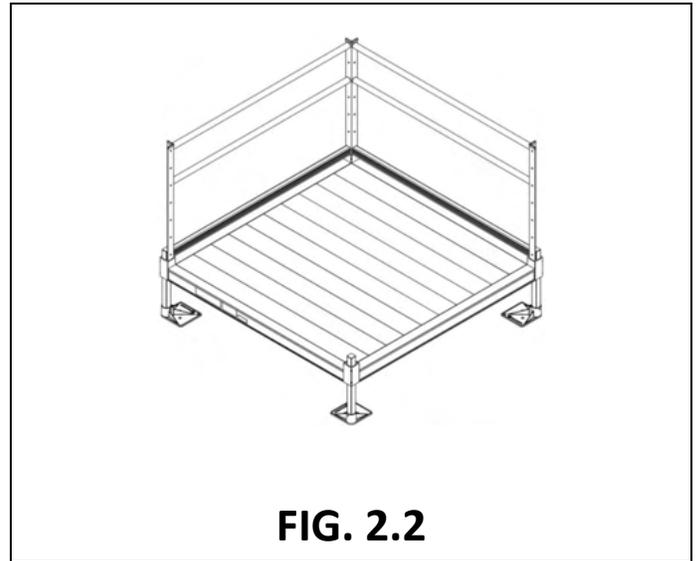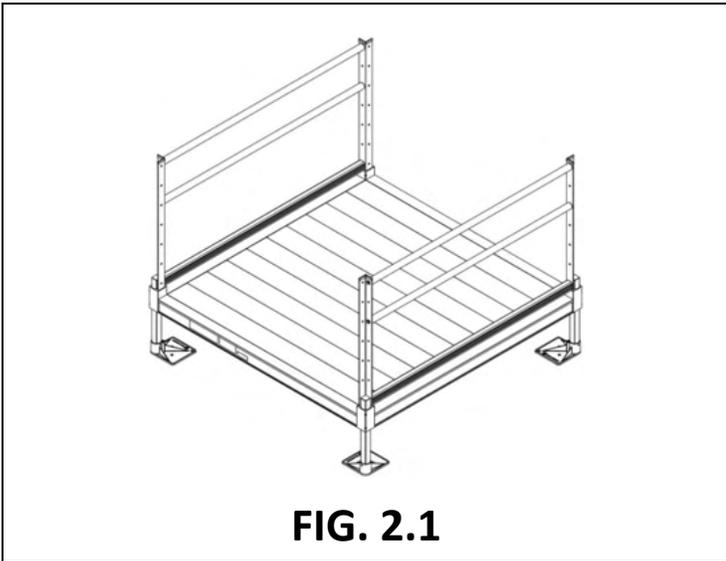

2.2. INSTALL SUPPORT TUBES AND FEET, THEN ADJUST PLATFORM HEIGHT



- 2.2.1. Support tubes, plugs, and feet come in pairs. Support tubes will come in lengths sufficient for the heights at specific locations.
- 2.2.2. Loosen all set screws in the platform corner pockets.
 - 2.2.2.1 The set screws on the outside of the platform are for the platform support tubes.
 - 2.2.2.2. The set screws on the inside of the platform (one above the deck and one below the deck) are for the handrail posts.
- 2.2.3. Tip the platform on its side, then slide the support tubes into the four platform corner pockets (FIG.2.5). Adjust the support tubes to the approximate platform height needed.
- 2.2.4. Use a 3/16" Allen wrench to tighten the upper of the two set screws in the corner pocket, just enough to hold the support tube in place but do not over tighten (the second set screw will be tightened after final height adjustments are complete).
 - 👉 Platforms configured as a turn back platform (FIG. 2.3) will have six tubes to adjust.
 - ⚠ Do not attempt to walk on the platform until all support tube set screws have been tightened securely.
- 2.2.5. Place the platform (with support tubes attached) into the upright position.
 - ⚠ Do not let the weight of the platform bear on the support tubes while tipping the platform upright.

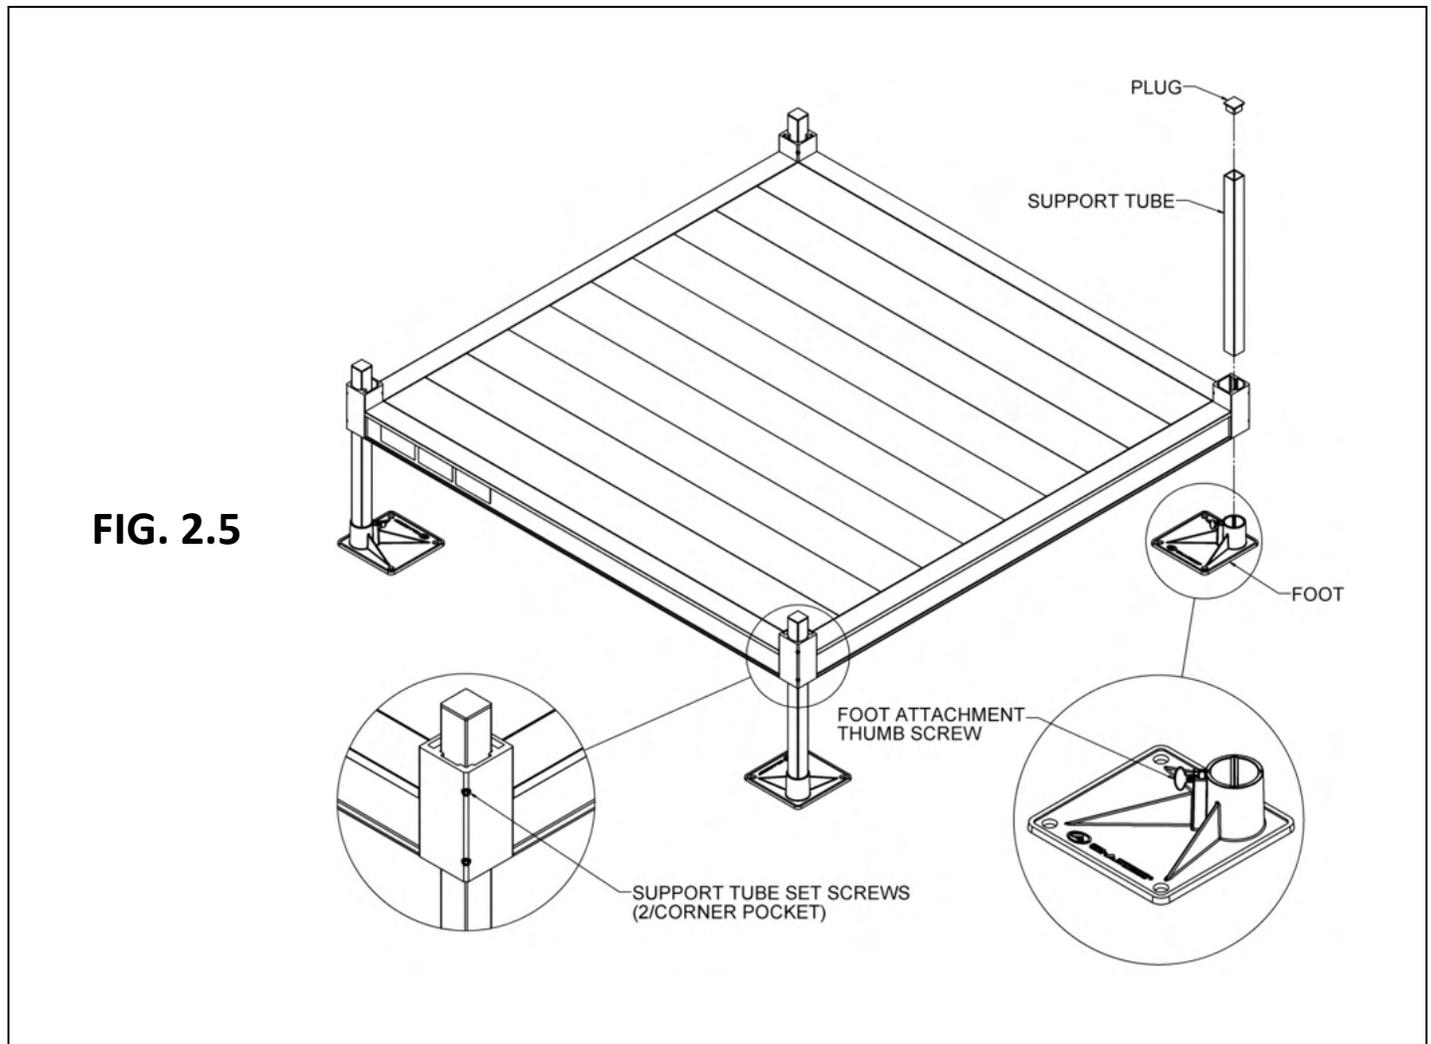

- 2.2.6. Lift each corner of the platform and install a base foot on each support tube oriented so that the foot extends under the platform (FIG. 2.5).
- ✎ The feet can be oriented in other directions if necessary due to site conditions but may present a tripping hazard if not oriented under the platform.
 - ⚠ It is the installer's responsibility to install the system in a manner which is safe for the persons on and around the system and clearly mark any hazards created by the installation.
- 2.2.7. Make sure each foot is fully engaged on the tube and tighten the thumb screw securely.
- ✎ If installing on soft soil it may be necessary to set the base foot on a concrete pad.
- 2.2.8. Adjust the final height of the platform by adjusting legs, one at a time, by loosening the outer set screws in the platform corner pockets. Using a level, adjust the platform height and re-tighten.
- 2.2.9. Once the final height has been adjusted, tighten the second, lower set screw in each platform corner pocket.
- 2.2.10. To allow access to the lowermost hole in the platform post, the support tubes must not extend more than 1/2" above the platform corner pockets. Trim the support tubes as needed before installing plugs.
- 2.2.11. Insert a plug into the top of each support tube. Use a rubber mallet or similar tool as needed (FIG.2.5).
- 2.2.12. Ensure all set screws are tightened securely.

2.3. CONNECT TWO PLATFORMS TOGETHER

- 2.3.1. Assemble the first platform as described in the previous steps except on the side where the second platform will connect, install two PPC (CONNECTOR – PLATFORM TO PLATFORM) before installing feet onto the support tubes.
- 2.3.2. Make sure the platform connector set screws are oriented outward so they will be accessible.
- ✎ Any two platforms of the same width can be connected. However, two 5' x 4' platforms are usually connected to make a turn back platform.
- 2.3.3. Slide the platform connectors up until they contact the bottom of the platform and tighten the set screws securely (FIG. 2.6).
- 2.3.4. Install a support tube stub into the open pocket in each connector until the bottom of the stub is flush with the bottom of the connector and tighten the set screws securely.
- 2.3.5. Install a plug in the top of each support tube stub (FIG. 2.6).
- 2.3.6. Assemble the second platform as described in the previous section except only install support tubes, plugs, and feet on the opposite side of where the platforms will connect (FIG. 2.7).
- 2.3.7. Lift the second platform and slide the open corner pockets over the support tube stubs extending up from the platform connectors. Tighten the set screws in the platform corner pockets securely.
- 2.3.8. Adjust the platform heights and level as needed.
- ⚠ Make sure all the set screws in both the platform corner pockets and the platform connectors are tightened securely before proceeding with the installation.

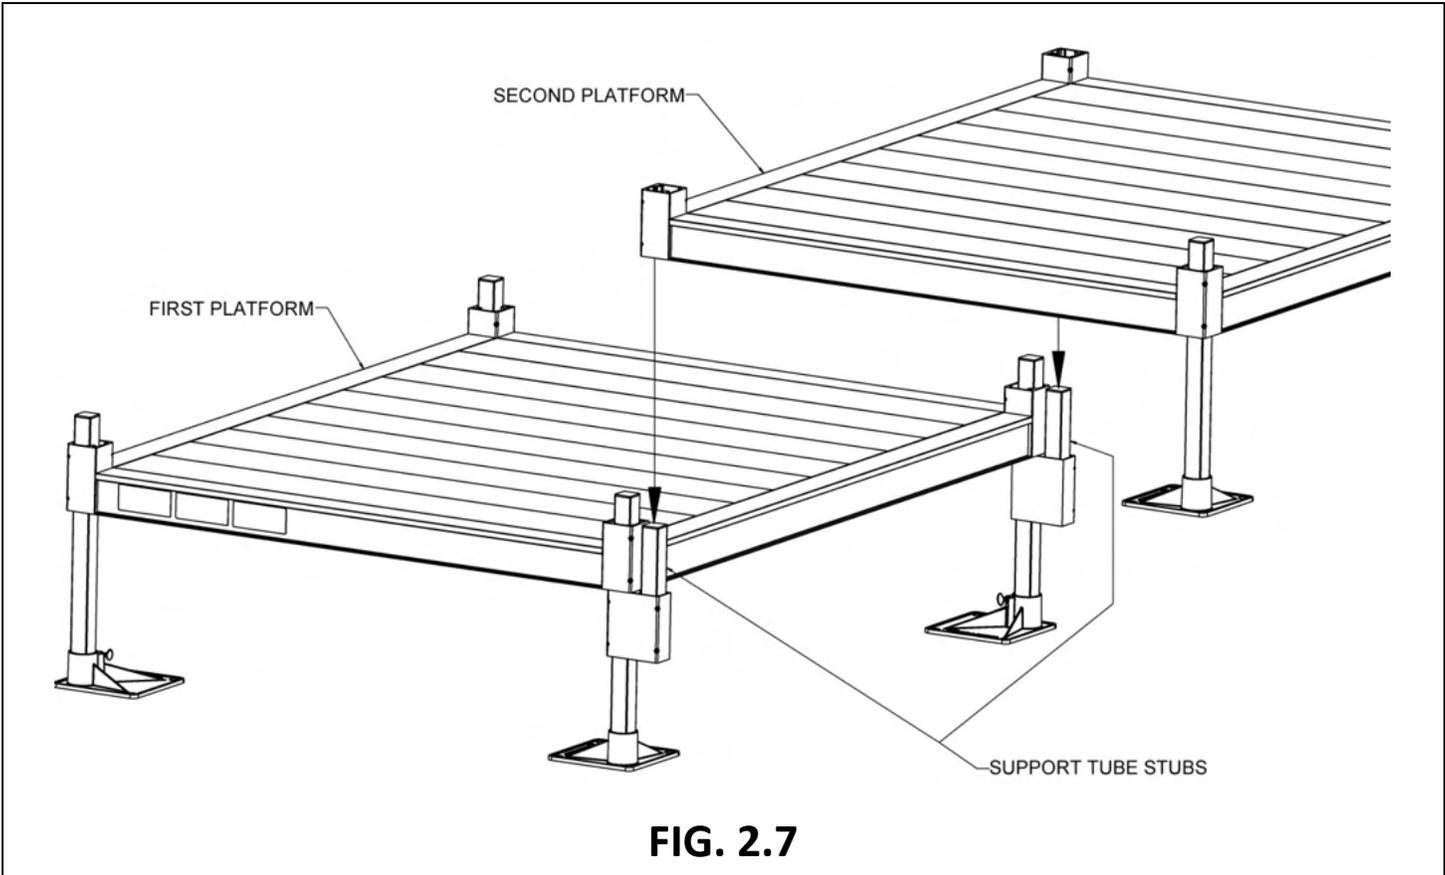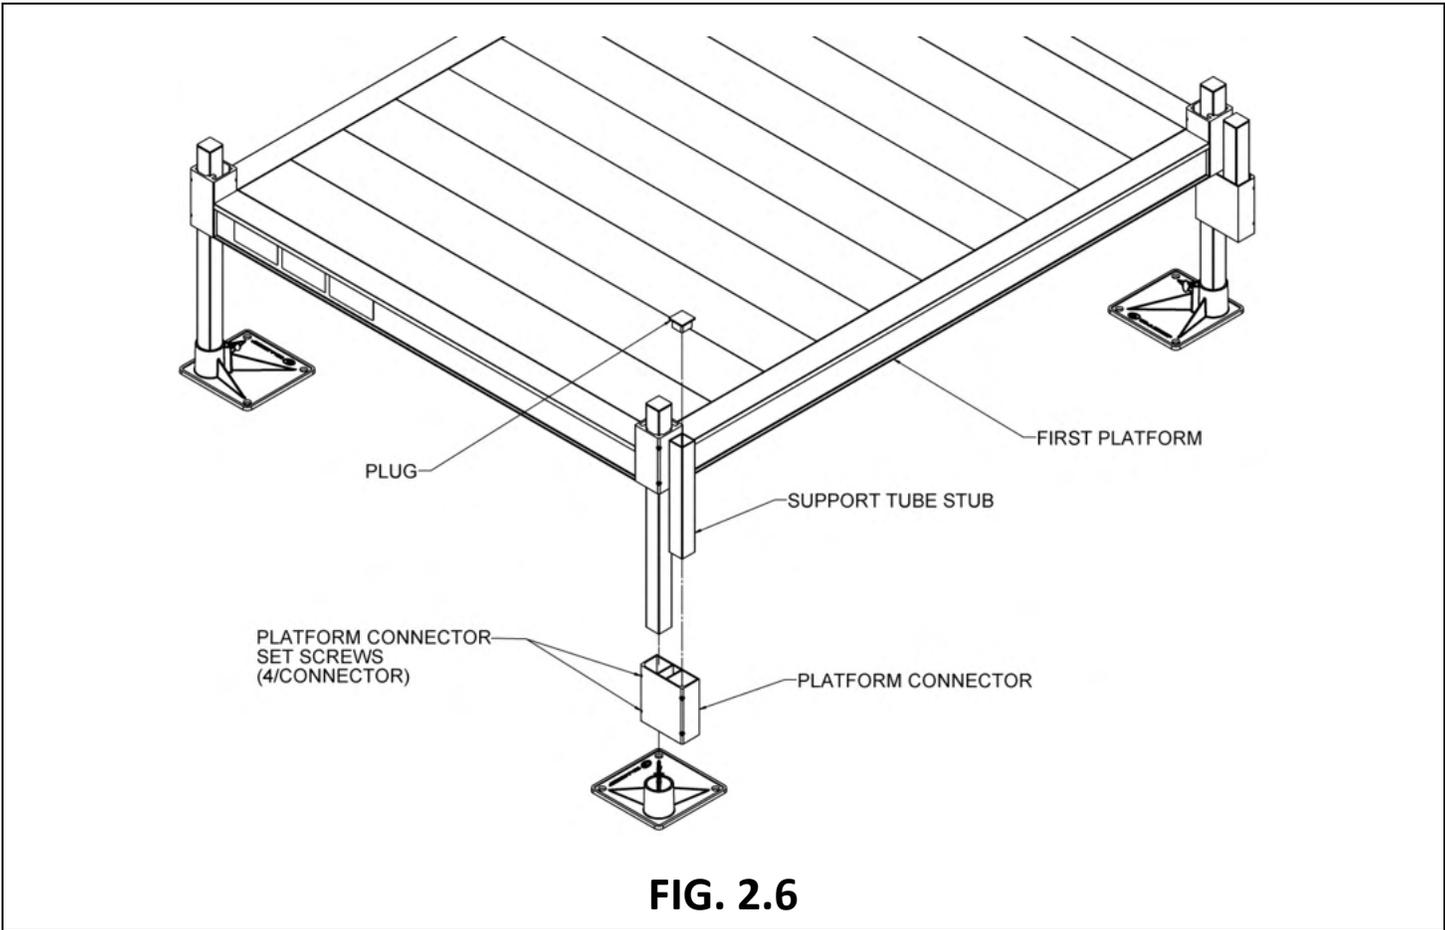

2.4. 45-DEGREE ANGLE PLATFORM

This platform is used between two ramps to make a 45-degree turn and features a symmetrical design, making it usable in either direction.

- 2.4.1. There are two options for 45-degree Angle Platform handrails, Two-Line and Vertical Pickets. The platform includes the handrail components needed for the option ordered.
 - ✎ Platform handrails are shown for clarity of how to orient platforms in various configurations. It is strongly suggested that all platforms and ramps be installed before installing handrails (see 'HANDRAILS').
- 2.4.2. Set platform on one of the sides where the ramp will attach and install legs and feet, then adjust height as described previously in this section. The two legs on the short side must be installed in the orientation shown (FIG. 2.8).
 - ✎ Use "low profile foot" for platform heights under 4".
 - ✎ It is sometimes helpful to lay the platform on its side when inserting the legs.

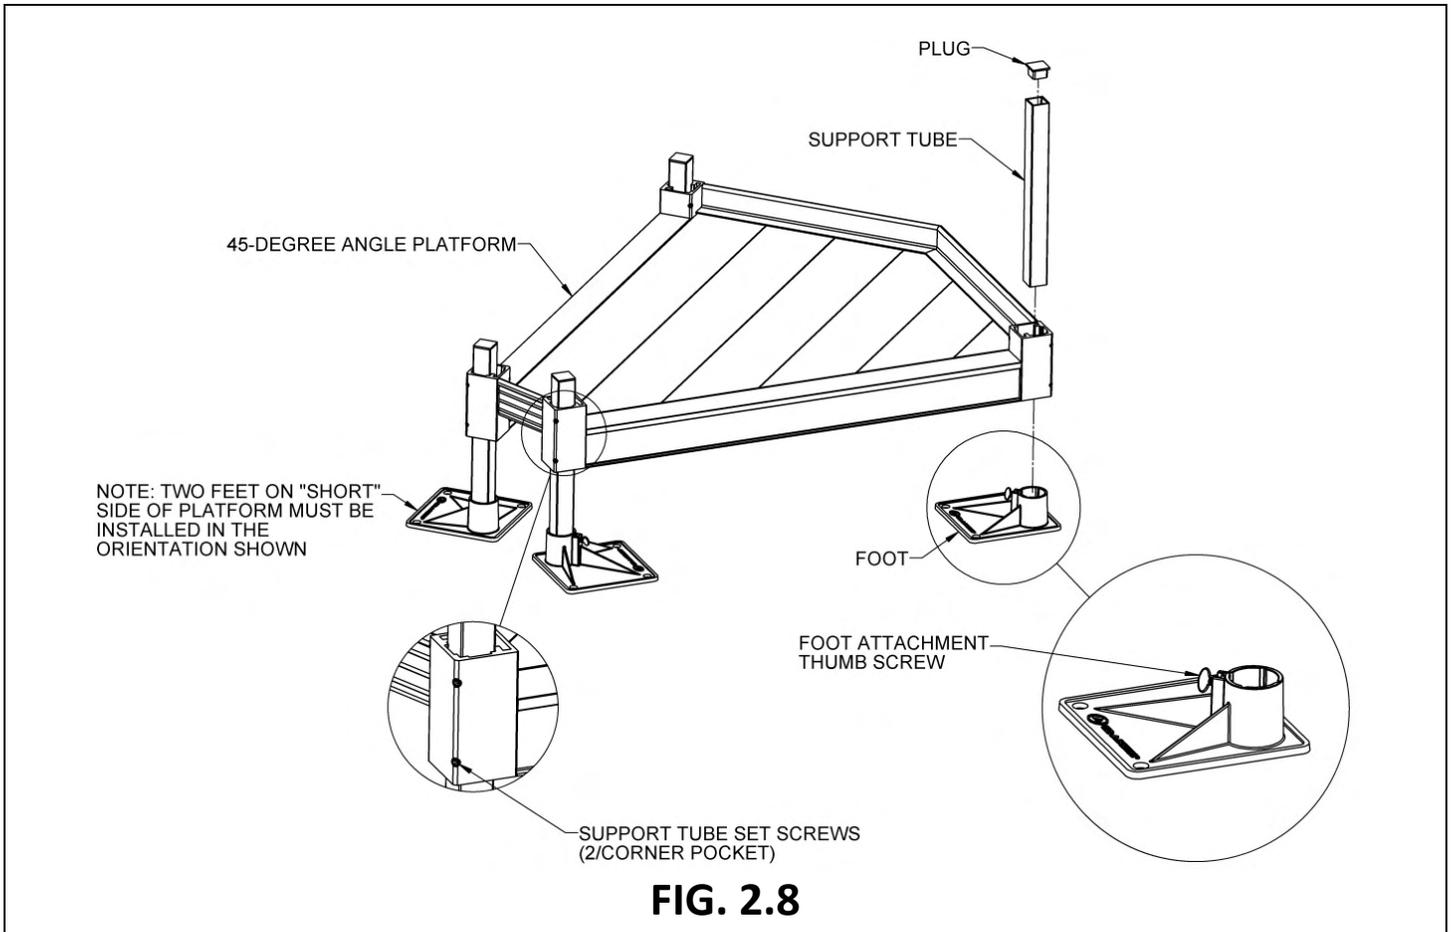


FIG. 2.8

2.5. 8' X 5' TURN BACK PLATFORM

This platform is used to create a turn back (or switchback) instead of connecting two 5' x 4' platforms. It includes two standard 5' platform handrails and handrails for the 8' side with a curb (FIG. 2.4).

2.6. LOW PROFILE PLATFORM

2.6.1. Low profile Platforms are 1-9/16" thick (tall) as compared to standard platforms which are approximately 3-1/2" thick (tall).

2.6.2. There are three types of low profile platforms (one or more of these platform arrangements may be used in an installation).

FIG. 2.9 Low profile platform straight configuration

FIG. 2.10 Low profile platform turn configuration

FIG. 2.11 Low profile platform turn back configuration (two 5' x 4' platforms shown combined to make 5' x 8' turn back platform)

2.6.3. All three require the same procedure for assembly except for the turn back (FIG. 2.11), which requires an additional PPC (PLATFORM TO PLATFORM CONNECTOR).

2.6.4. Low profile platforms can be elevated when used with support tubes and feet or set directly on the ground and used as a landing pad (FIG. 2.12). When used as a landing pad, it may be used with or without handrails and will require a low profile ground transition.

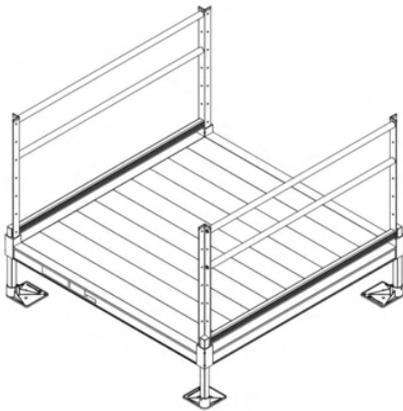


FIG. 2.9

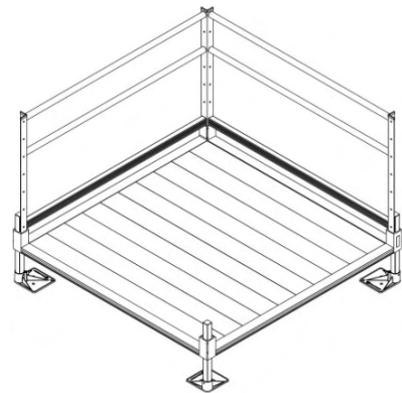


FIG. 2.10

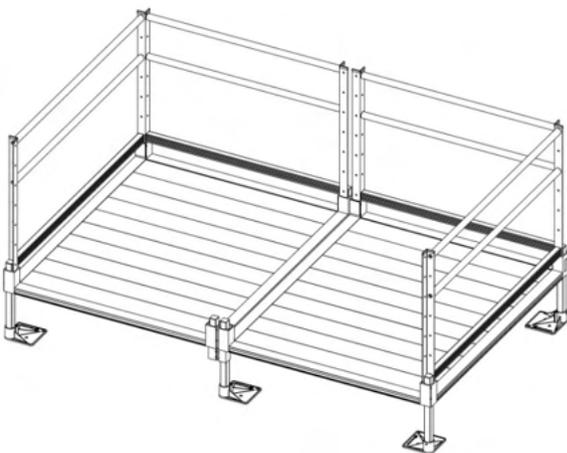


FIG. 2.11

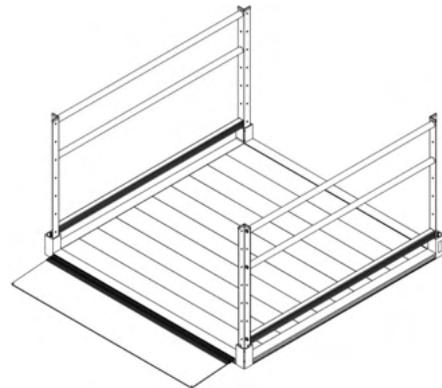


FIG. 2.12

2.6.5. INSTALL RAMPS ON LOW PROFILE PLATFORMS

☞ This section addresses the attachment of a ramp (or ramp run) to a platform. If the ramp needs to be angled with respect to the platform section.

- 2.6.5.1. Locate the PRHPLP (RAMP HANGER PAIR LOW PROFILE). Install two hangers onto the side of the platform where the ramp will be attached.
- 2.6.5.2. Hold the hanger perpendicular to the platform side rail, then bring the hanger upward until it is against the side rail lip. Rotate the hanger and continue pushing upward in such a manner that the "hook" at the top of the hanger goes behind and catches on the lip in the top of the platform side rail and the hanger sits on the ledge at the bottom (FIG. 2.13).

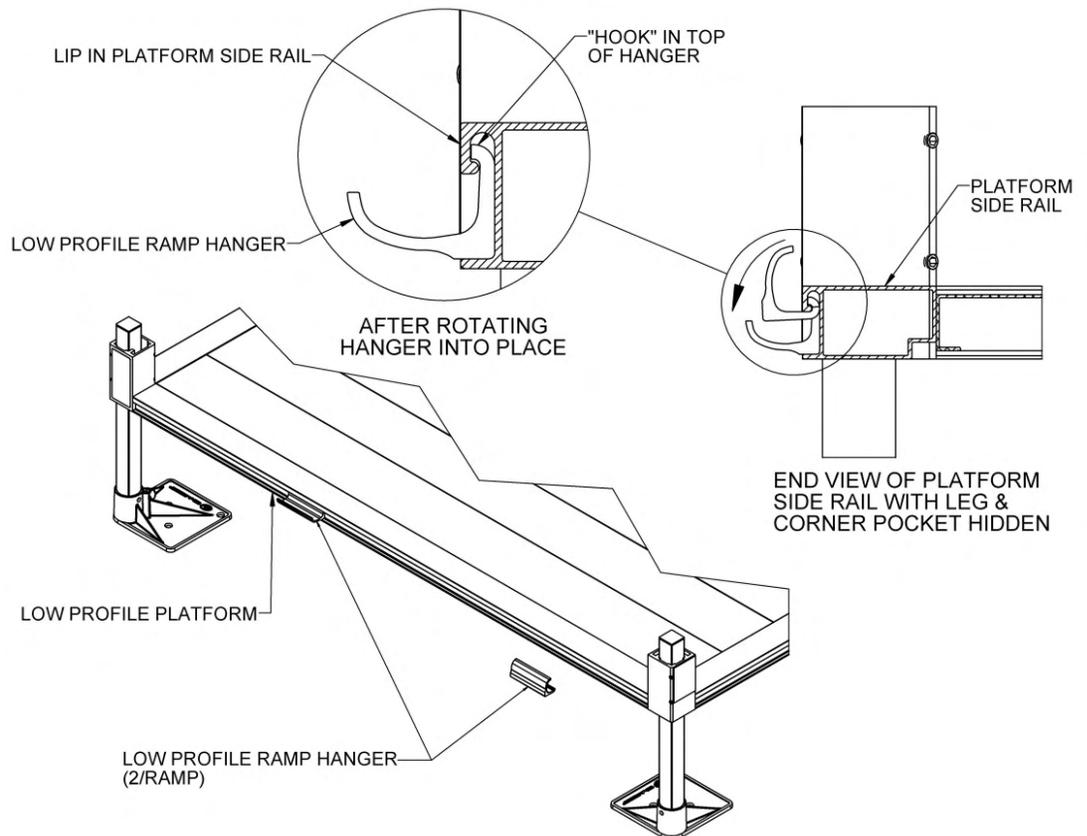



FIG. 2.13

- 2.6.5.3. Set the ramp on the hangers, ensuring that the hangers are positioned as close as possible to the ramp side rails (FIG. 2.14). The procedure is the same at both the top and bottom of ramp runs which end at a platform unless a low profile ground or bridge transition is used.

⚠ Do not attempt to walk on system until installation is complete.

- 2.6.5.4. Proceed with the system installation. Secure all ramps to platforms as described in the 'SECURE RAMPS TO PLATFORMS' as part of the final steps and checks.

FIG. 2.14

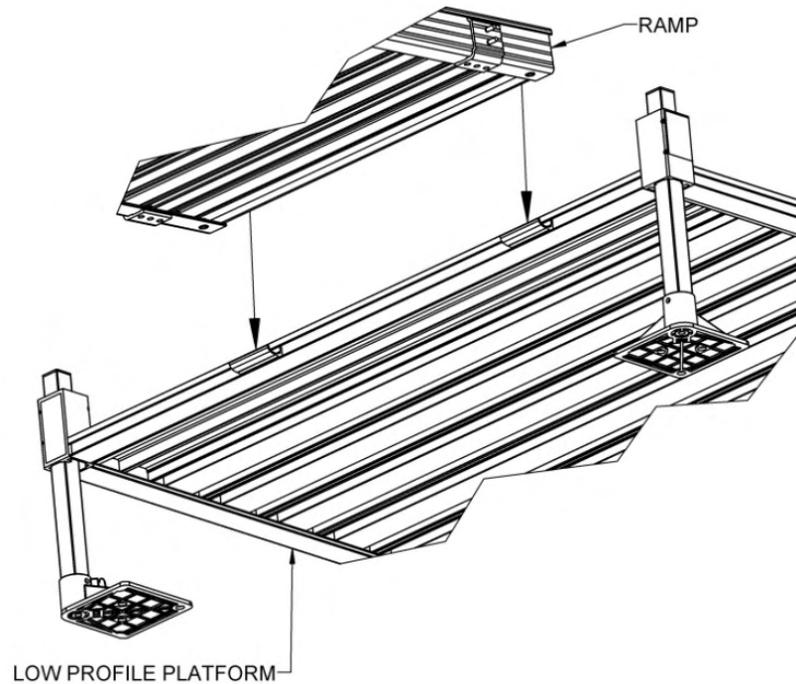


2.6.6. INSTALL LOW PROFILE PLATFORM HANDRAILS

2.6.6.1. Handrail assembly for low profile platforms is the same as standard platforms. Refer to 'HANDRAILS' and assemble for desired configuration.

✎ The only installation difference between low profile platforms and standard platforms is where the handrail inserts into the platform corner pockets. On the low profile platform, both handrail set screws are above the platform walking surface (FIG. 2.15) instead of having one underneath the deck as they are on a standard platform.

2.6.6.2. Tighten two set screws per handrail post on the inside of each corner pocket.

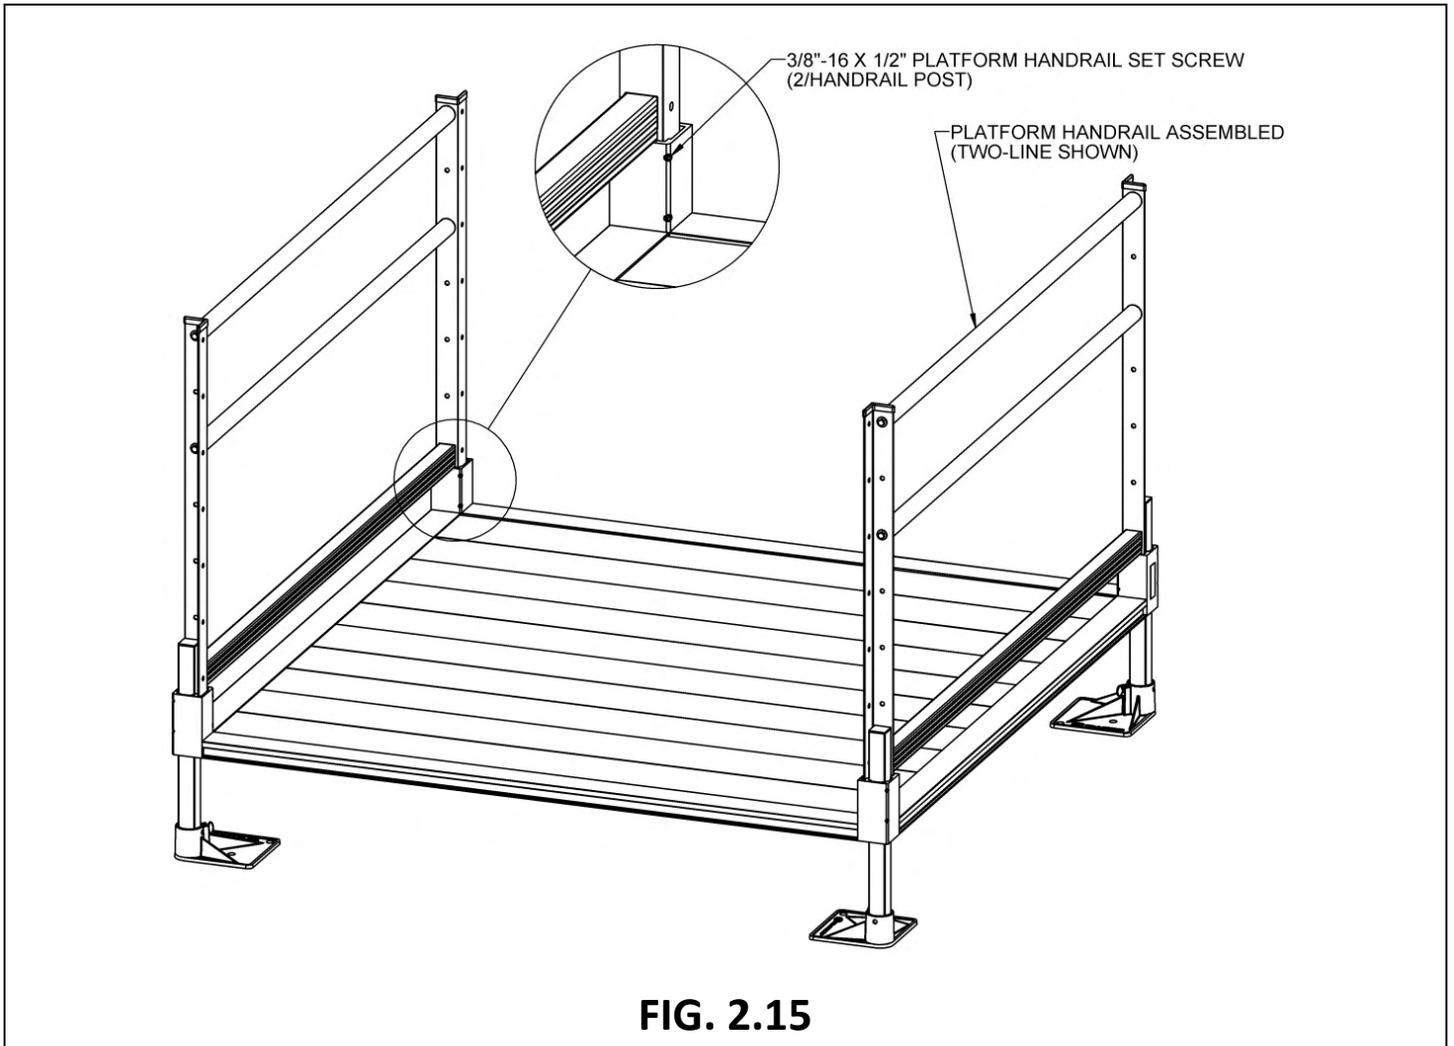

2.6.7. INSTALL LOW PROFILE GROUND TRANSITION OR BRIDGE TRANSITION

2.6.7.1. Low profile ground transitions for the 5' side of the low profile platform are available in four slope options:

- 1:6 slope at 59-1/8" x 7.32"
- 1:8 slope at 59-1/8" x 9.70"
- 1:10 slope at 59-1/8" x 11.95"
- 1:12 slope at 59-1/8" x 14.13"

⚠ Only use the 1:6 slope 59-1/8" x 7.32" low profile ground transition as a bridge transition for the 5' side of a low profile platform. A bridge transition is a level transition from the low profile platform to another level surface. The other slope options for the 5' side of a low profile platform are only for use as a transition from the low profile platform to the ground.

- ⚠ Bridge transitions must be level, extend onto the adjacent landing or platform a minimum of 1", and have a 6" maximum gap between the low profile platform and the adjacent landing or platform.
 - ⚠ Bridge transitions must be secured to the adjacent landing or platform. It is the installer's responsibility to choose the appropriate fastener based on the landing material and ensure the landing is structurally sufficient to support all applied loads.
- 2.6.7.2. For the 4' side of a low profile platform, only a bridge transition at 47-1/8" x 7.32" is available.
 - 2.6.7.3. The low profile ground transition hanger is factory assembled to the low profile ground transition or bridge transition. First, disassemble the two components so the hanger can be installed in the platform side rail.
 - 2.6.7.4. Hold the low profile ground transition hanger as shown (FIG. 2.16), then rotate the hanger and continue pushing upward in such a manner that the hook at the top of the hanger goes behind and catches on the lip in the platform side rail and the hanger sits on the lower ledge of the side rail (FIG. 2.16).



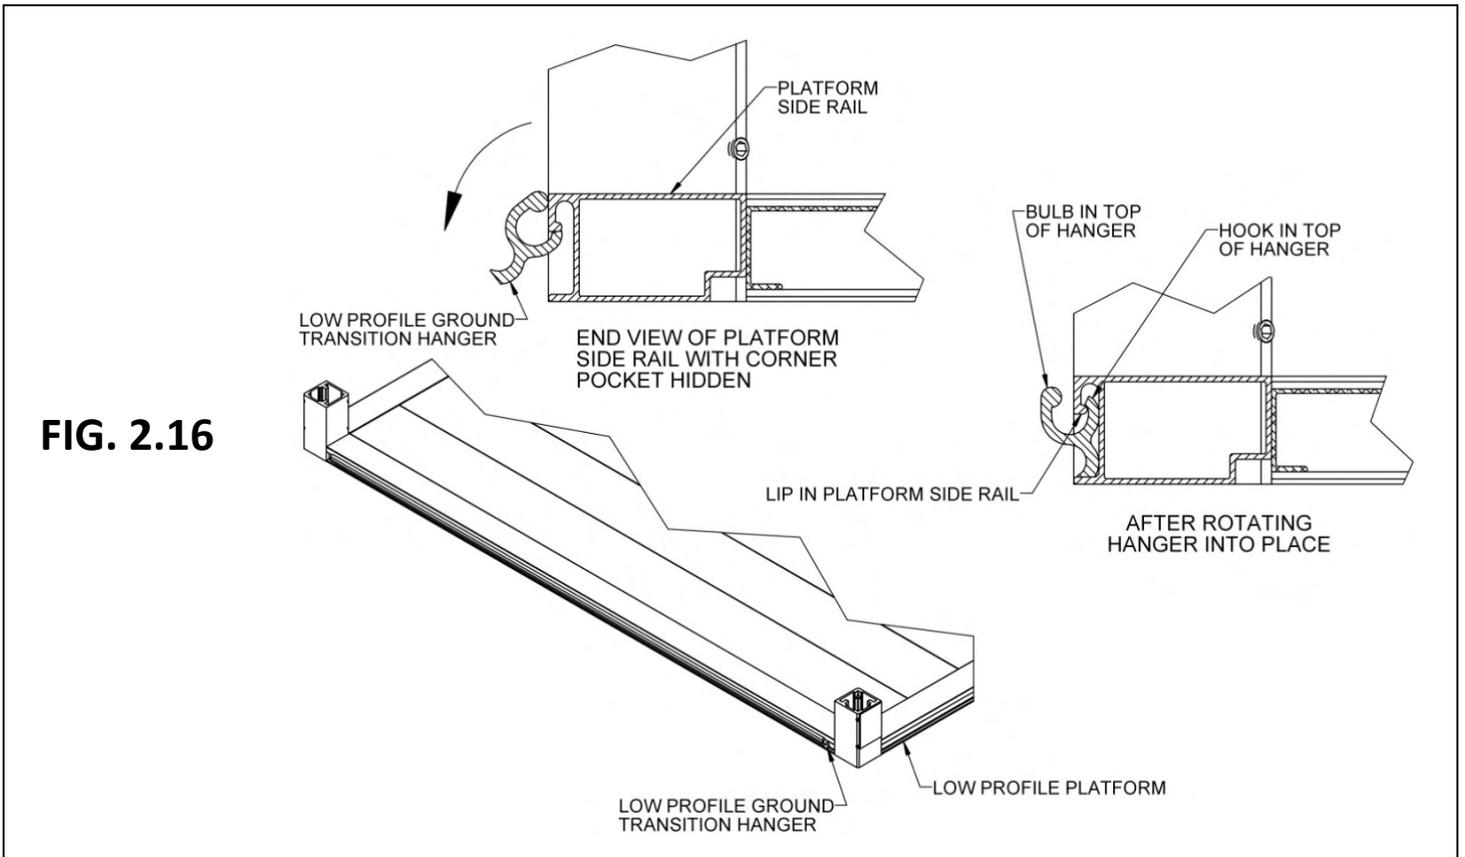


FIG. 2.16


- 2.6.7.5. Set the low profile platform on its side in such a manner that the low profile ground transition hanger extends up from the ground and the low profile ground transition or bridge transition can be held at approximately 90-degrees to the platform (FIG. 2.16).
 - ⚠ Do not attempt to walk on system until installation is complete.
 - 👉 When installing a low profile bridge transition, install the legs and set the low profile platform height before installing the bridge transition.
- 2.6.7.6. Rotate the low profile ground or bridge transition until hook in transition is captured between the bulb in the top of the low profile ground transition hanger and the platform side rail and the ground or bridge transition is parallel with the platform (FIGs. 2.17 and 2.18).

2.6.7.7. Continue holding the low profile ground or bridge transition in place while setting the low profile platform onto the ground (if being used as a ground transition) or back on its legs (if being used as a bridge transition) in the desired position, then allow the ground or bridge transition to rotate down onto the surface where it will rest.

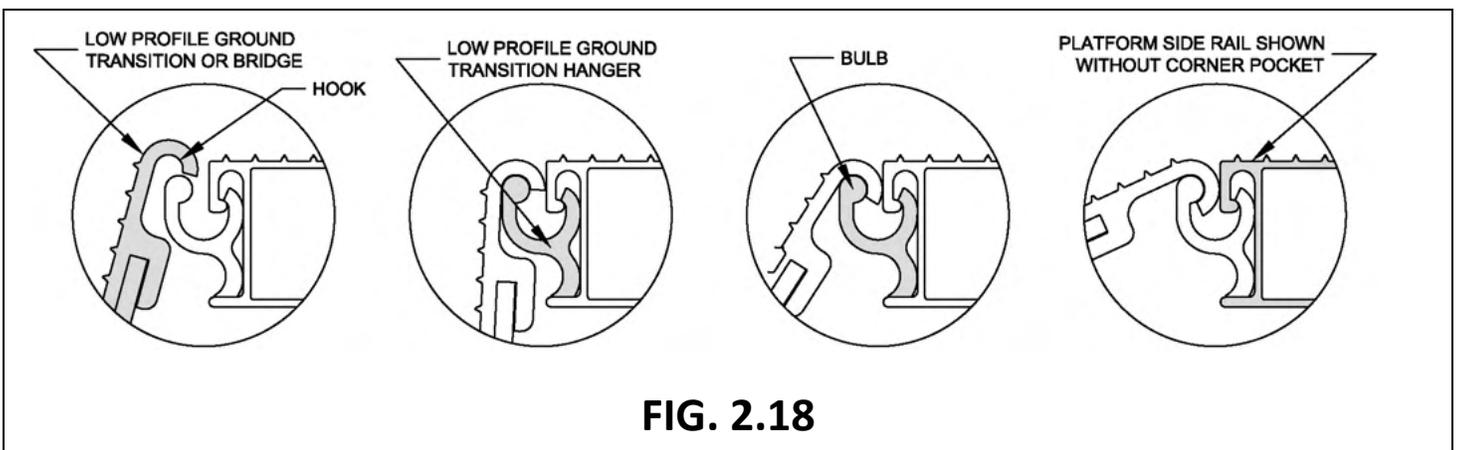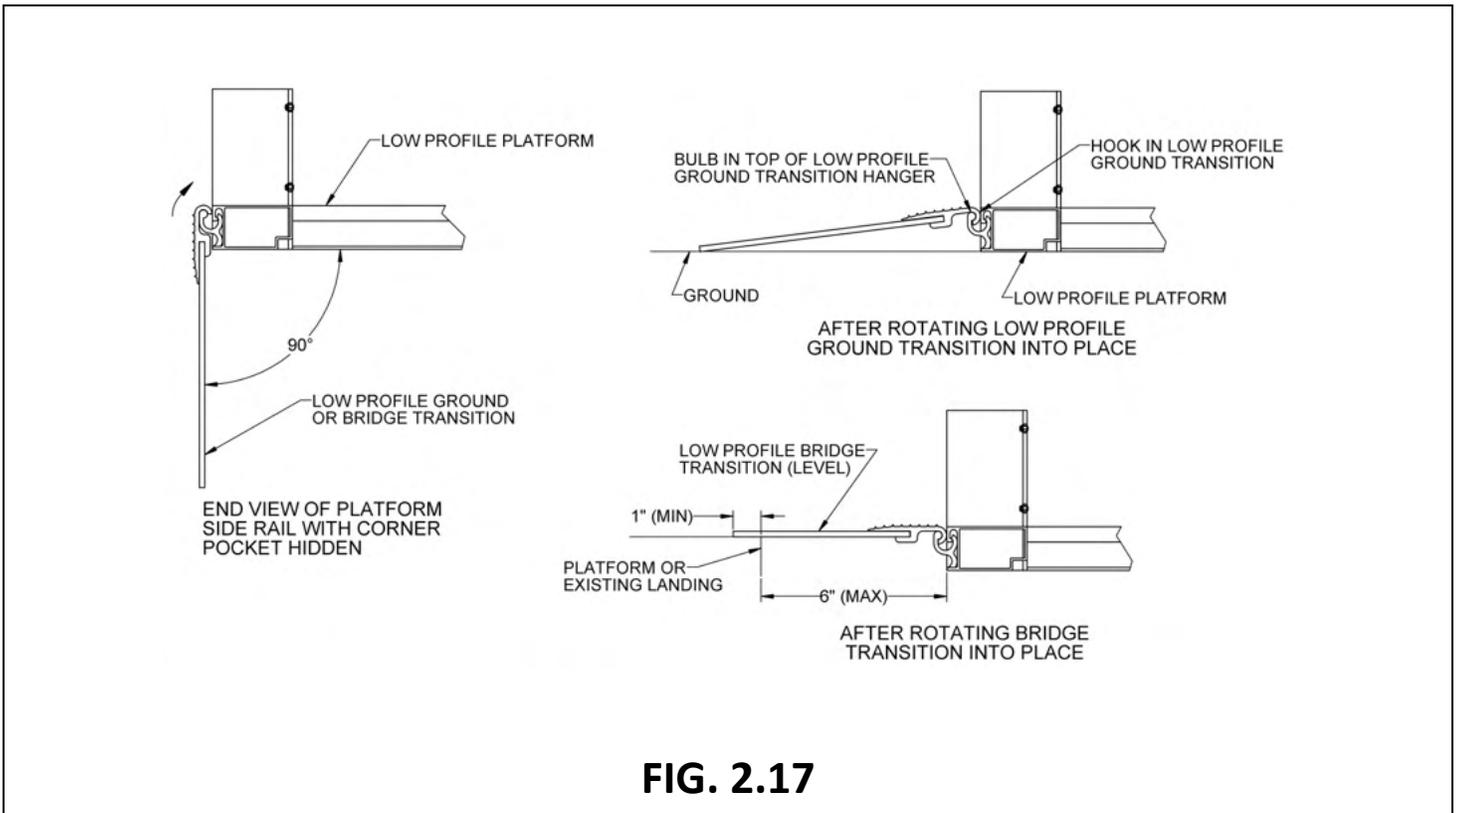

- 2.6.7.8. The installed low profile ground or bridge transition is shown (FIG. 2.19).
- 2.6.7.9. If using as a bridge transition, check and adjust the height of the platform until the bridge transition is level. Attach the bridge transition to the platform or landing using fasteners appropriate for the surface (provided by the installer) through the two 1/4" holes in the corners. If using as a ground transition, anchoring is optional.

FIG. 2.19

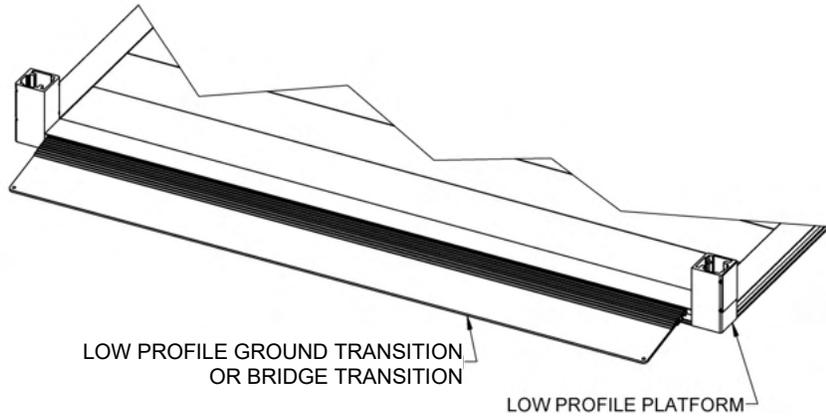


2.7. INSTALL UNIVERSAL ANGLE BRACE – PLATFORMS

For added stability, any platform with a walking surface over 36" high requires bracing. The PUAB (PATHWAY ANGLE BRACE) is used for surfaces 36" up to 71".

- 2.7.1. Angle braces come in pairs. Use four pairs per platform (one pair per support tube, or side) or six pairs when two platforms are connected.
- 2.7.2. Use two brace bands to secure the ends of the two angle braces nearest the twist to the support tube using a 5/16" bolt, flat washer, and nut (FIG. 2.20).
- 2.7.3. Opposite ends of the braces are attached to the bottom of the platform side rail at 90-degrees to each other using a 1/4"x 1" long self-drilling screw (FIG. 2.20).


⚠ Ensure that all angle braces are secured before using platform.

FIG. 2.20

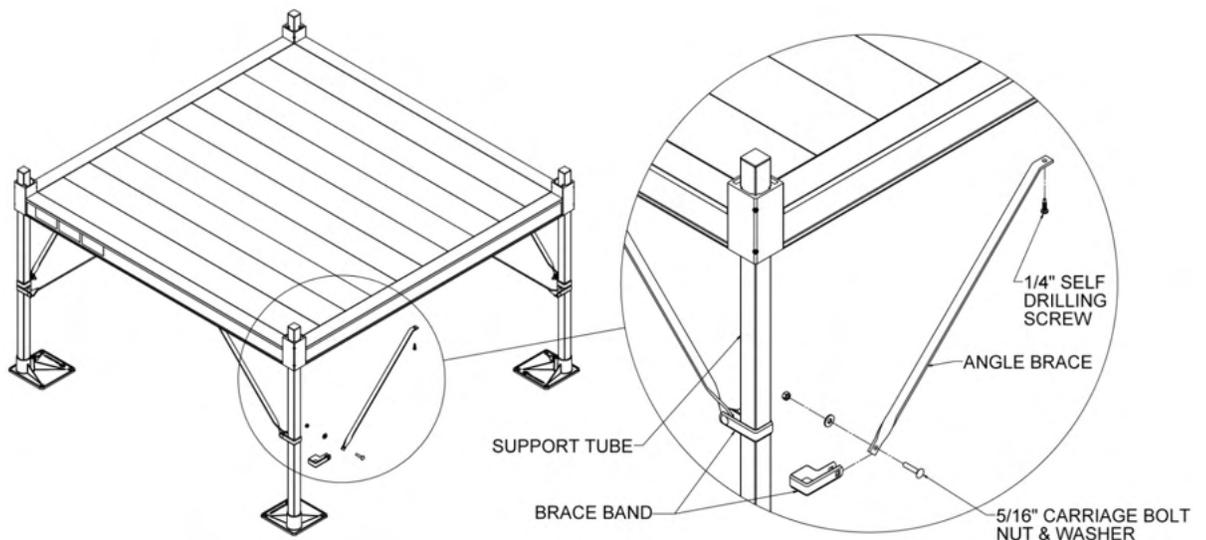

2.8. INSTALL UNIVERSAL CROSS BRACE



- 2.8.1. Install UNIVERSAL CROSS BRACES on all support tubes when the walking surface is 72" or higher above the ground. Cross braces are normally installed on all four sides unless two platforms are connected.
- 2.8.2. Use four braces per platform or six braces when two platforms are connected.
- 2.8.3. Separate ends of brace bands until they fit around the 1-1/2" support leg.
- 2.8.4. Install four bands on each leg with the part containing bolt holes at 90-degrees from each other and in line with the outer edge of the foot (FIG. 2.21).
- 2.8.5. The cross brace should be placed approximately in the middle of the platform legs on all four sides with the top brace bands a minimum of two feet from the bottom brace bands.
- 2.8.6. Install the cross brace by installing the 5/16"-18 x 1-1/2" hex bolt, 5/16"-18 hex nut, and 5/16" flat washer through the center hole in the braces. Tighten enough to hold the brace together but still allow it to pivot around the bolt (FIG. 2.21).
- 2.8.7. If needed for the location, trim the ends of the cross brace to fit.
- 2.8.8. Drill one 11/32" or 3/8" diameter hole on center approximately 1/2" from both ends of each brace.
- 2.8.9. Install the assembled cross brace between the legs of the brace bands using the four 5/16"-18 x 1-1/2" long square neck carriage bolts, 5/16"-18 hex nuts, and 5/16" washers provided (FIG. 2.21).
- 2.8.10. Tighten all fasteners securely.
 - ▲ Ensure that all cross braces are secured before using platform.

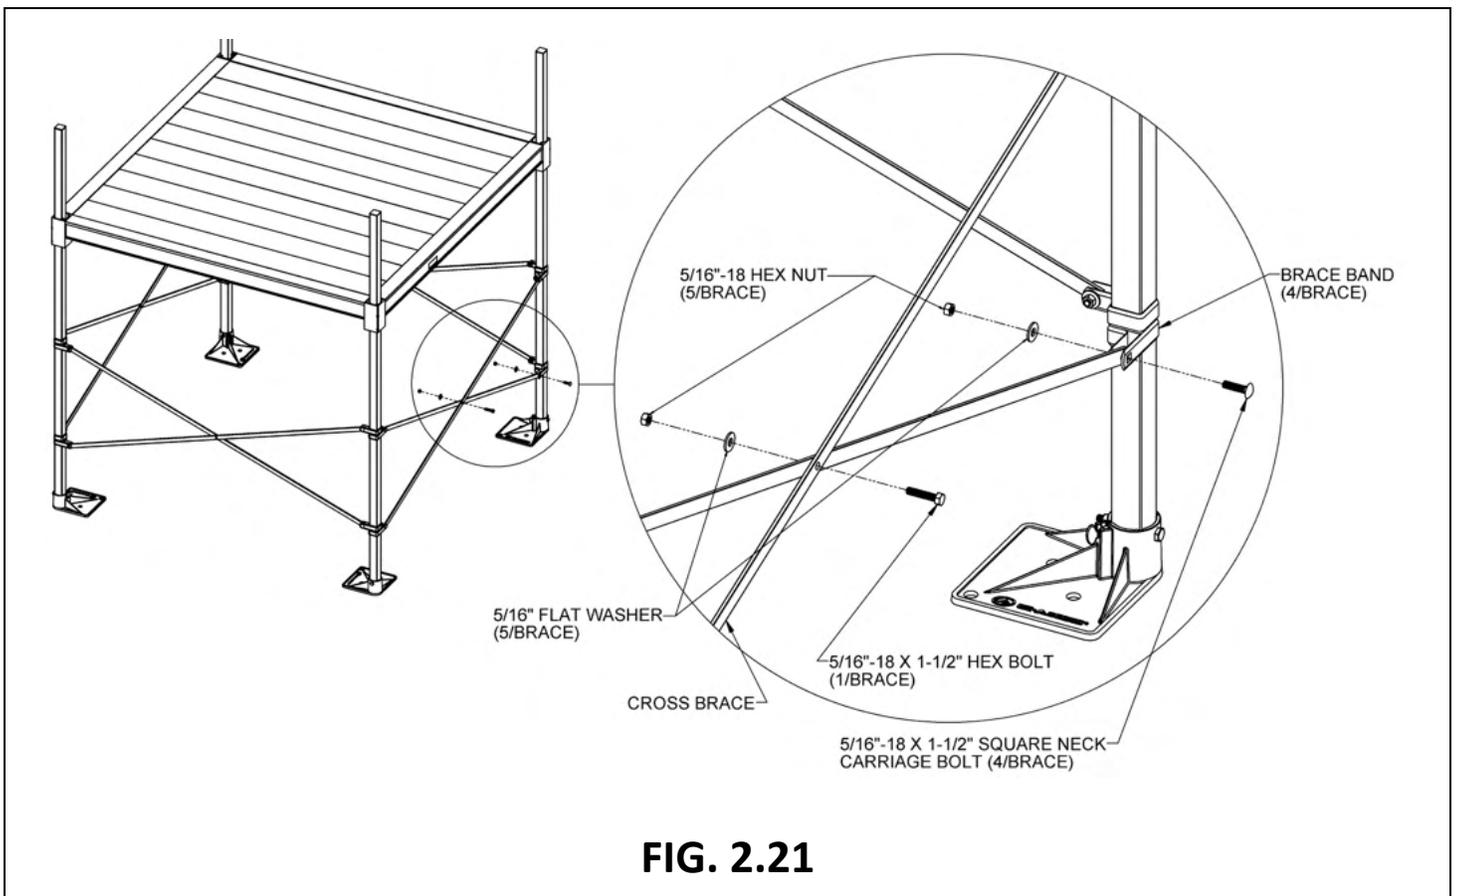

3. RAMPS

3.1. CONNECT RAMP SECTIONS

- 3.1.1. Place the walking surface side of the ramp sections face down, onto cardboard or lawn so that the ramp is not damaged (scratched or dented).
 - 👉 When installing a single ramp section, skip to 'INSTALL A SINGLE RAMP RUN TO AN EXISTING STRUCTURE'.
- 3.1.2. Butt the sections together end-to-end and ensure there is no gap, then position the two center saddle brackets, included in the PRC (CONNECTOR – RAMP TO RAMP), over the threaded inserts at the end of each ramp section (FIG. 3.1).
- 3.1.3. One edge of the center saddle bracket will slide into the groove of the ramp sections.
 - 👉 To create a run, ramp sections are connected using two interchangeable center saddle brackets per joint. The center saddle brackets are also where the handrails and ramp legs are attached.
- 3.1.4. Attach the center saddle brackets using four each 5/16"-18 x 1-1/2" bolts and 5/16" washers per bracket. Tighten all eight bolts (four each per center saddle bracket).
 - 👉 Although a system can have multiple ramps per run, it is recommended that a maximum of three ramp sections at a time be joined in this manner.
- 3.1.5. If necessary, install optional PRST (RAMP SUPPORT – TOP) at this time (see 'OPTIONAL EQUIPMENT').
- 3.1.6. Install four end brackets, PRHBPR (RAMP HANDRAIL END BRACKET PAIR). These will be used to attach handrails in a later step. Use one end bracket at each outside corner of the ramp or ramp run using one 5/16" x 1-1/2" bolt and washer into the threaded insert closest to the end of the ramp (FIG. 3.2).
- 3.1.7. Turn the joined ramps to their upright position, being careful not to damage the threaded studs.

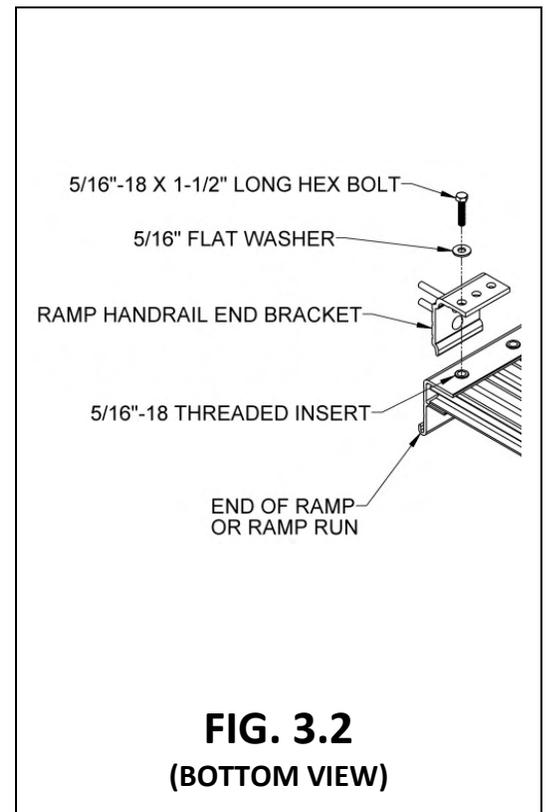
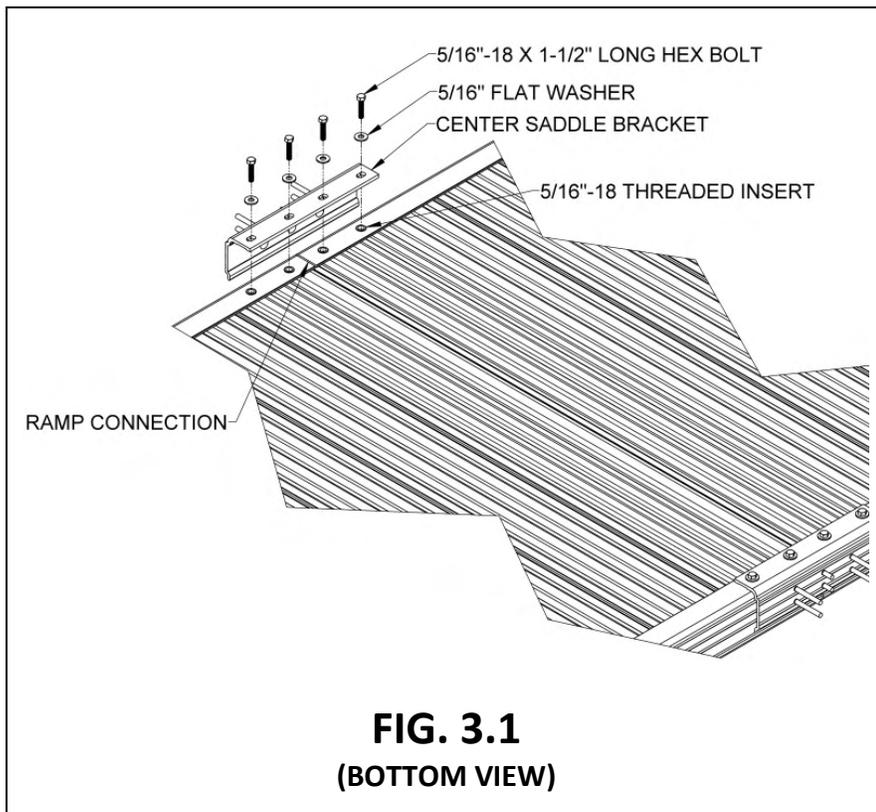


3.2. INSTALL RAMPS ON PLATFORMS

This section addresses the attachment of a ramp or ramp run to a platform. If the ramp needs to be angled with respect to the platform or is going to be attached to an existing porch, skip to 'ANGLE RAMPS WITH RESPECT TO PLATFORMS, PORCHES, OR DECKS'.

- 3.2.1. Ramps are most commonly located toward either the left or right side of the platform or centered but can be placed in any location on a platform side except when using a 'VERTICAL PICKET CLOSURE' (outlined in SECTION 5). When the ramp is located toward the side of a platform, the ramp handrail post should be positioned 1-1/2" (minimum) to 2" from the inside of the platform post. When using other locations, a second Two-Line closure must be used to connect the ramp and platform handrails. When centering ramps using a Vertical Picket Closure, additional components are needed. The additional components will come with the closure if specified at the time of order. The closure can also be converted in the field by ordering a second set of hardware.
- 3.2.2. Locate the PRHP (RAMP HANGER PAIR) and install the two hangers in the platform side rail where the ramp will be attached.
- 3.2.3. Hold the hanger perpendicular (approximately) to the platform side rail then bring the hanger upward until it is against the side rail lip. Rotate the hanger and continue pushing upward in such a manner that the "hook" at the top of the hanger goes behind and catches on the lip in the top of the platform side rail and the hanger sits on the ledge at the bottom (FIG. 3.3).
- 3.2.4. Set the ramp on the hangers. The hangers should be positioned as close as possible to the ramp side rails. The procedure is the same at both the top and bottom of ramp runs which end at a platform unless a transition plate is used (FIG. 3.4).

▲ Do not attempt to walk on the system until installation is complete.

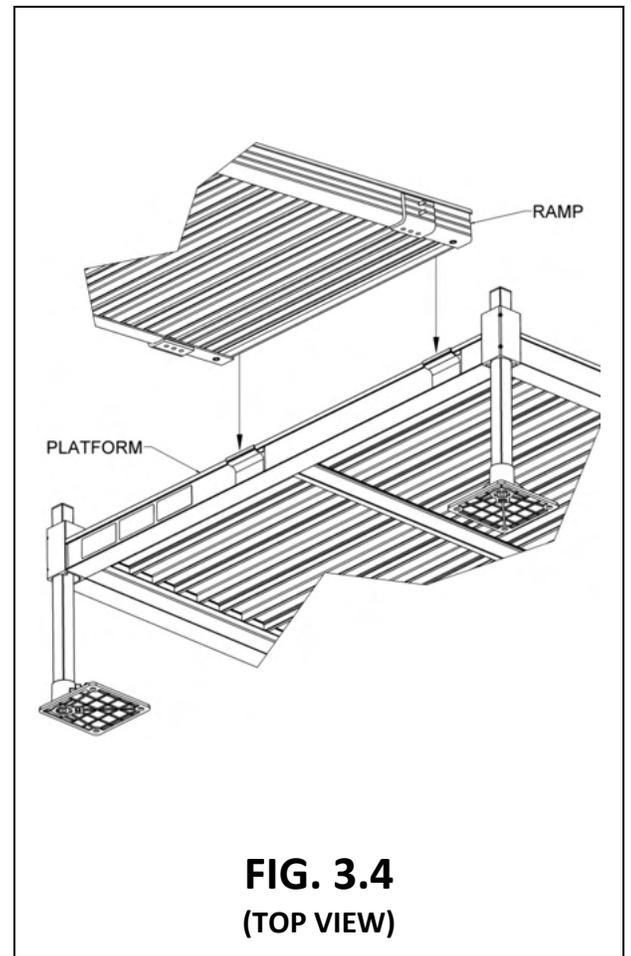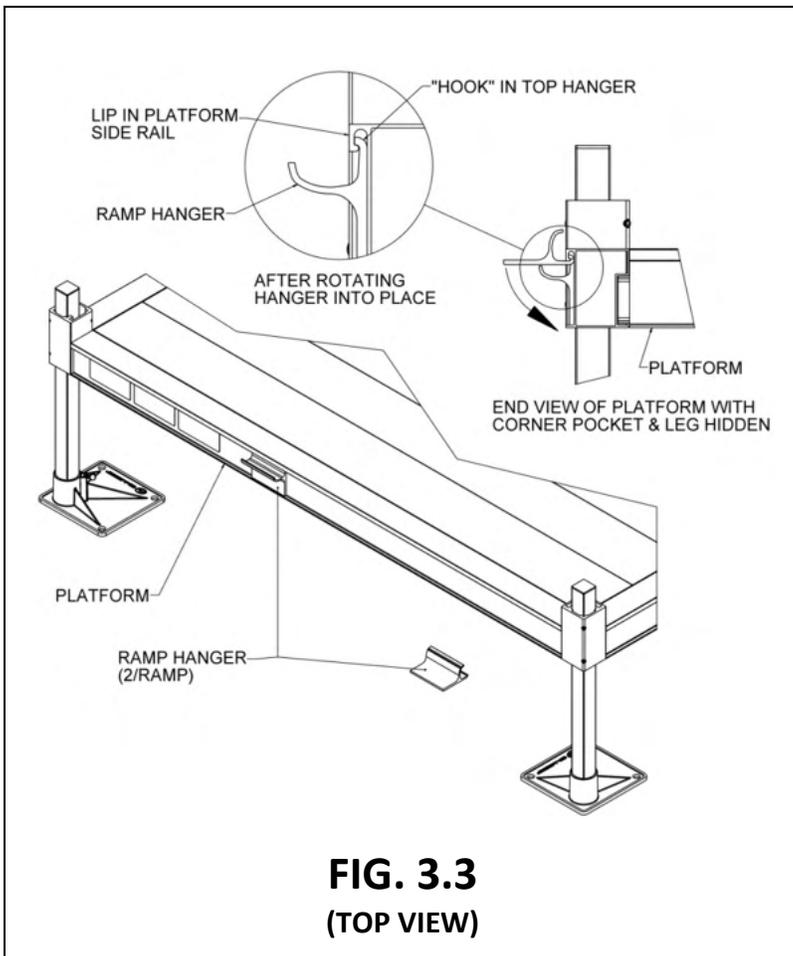

3.3. ATTACH SUPPORT LEG BRACKETS AND LEGS TO RAMPS

- 3.3.1. Install the Support Leg Bracket (included with PRRUC) on the center studs of the Center Saddle Bracket (ramp connector included with PRRUC) with the round hole on the upper stud and the curved slot over the lower stud (FIG. 3.5).
- 3.3.2. Attach the Support Leg Bracket using the provided 5/16" flat washers and 5/16"-18 nylon insert locknuts onto the studs but do not tighten fully until the bracket has been leveled.

FIG. 3.5



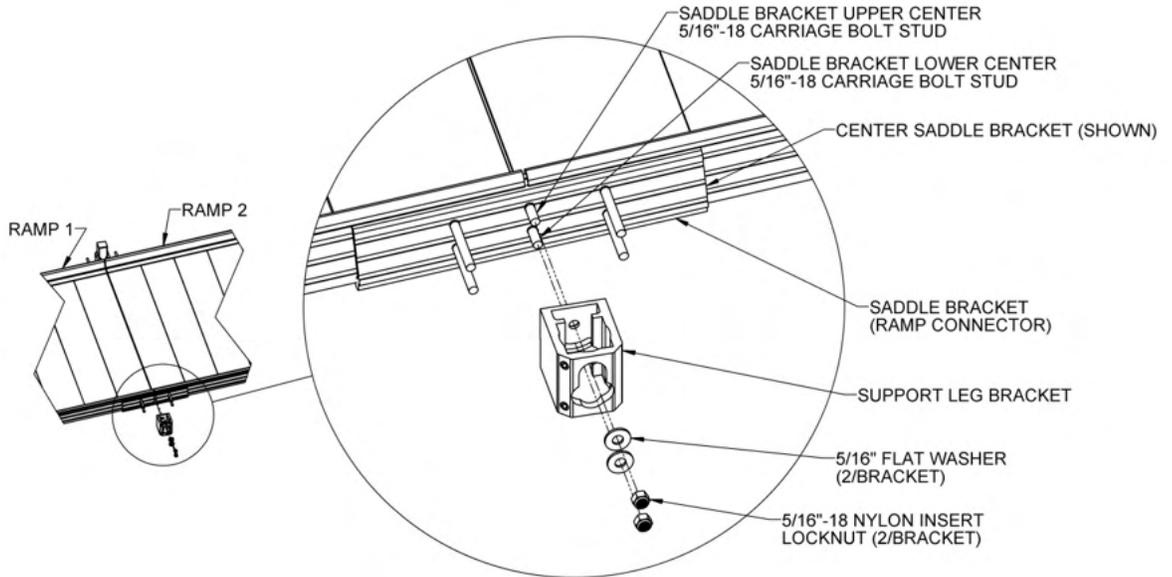



FIG. 3.6

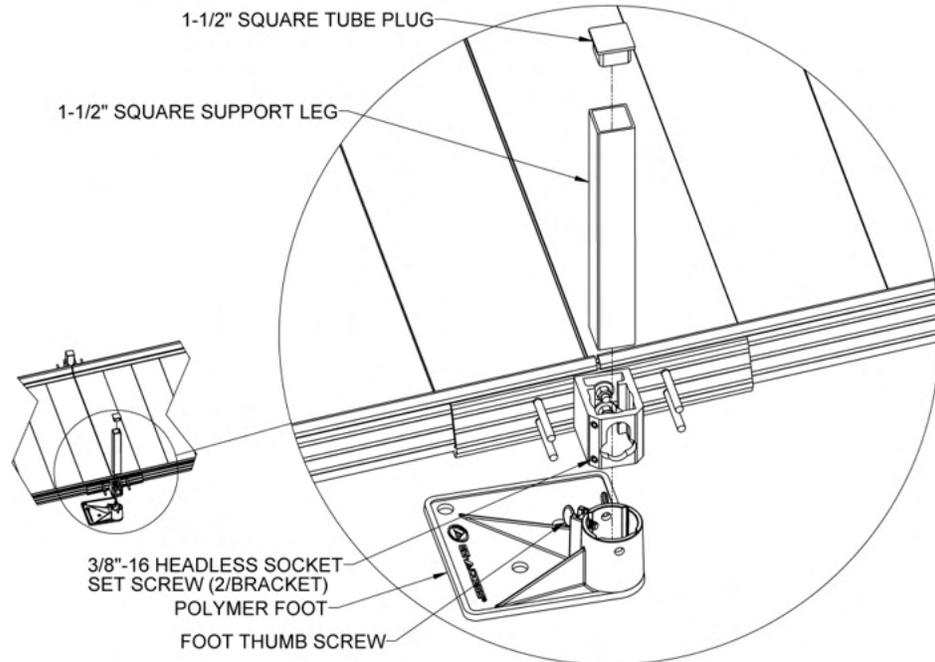

- 3.3.3. Level the Support Leg Bracket using a bubble level or similar tool, then torque the 5/16"-18 nylon insert locknuts to 20 ft.-lbs.
- 3.3.4. Locate the appropriate PRLxxPR (RAMP LEG PAIR where "xx" denotes the leg length) for the location. Place a foot under the Support Leg Bracket with the foot extending under the ramp, then insert a 1-1/2" square Support Leg through the Support Leg Bracket into the foot. Loosen the 3/8"-16 headless socket setscrews and the foot thumb screw if needed to fully engage the Support Leg in the foot (FIG. 3.6).
 - ✎ If installing on soft soil it may be necessary to set the foot on a concrete pad.
- 3.3.5. After the Support Leg is fully engaged in the foot, tighten the 3/8"-16 headless socket setscrews to 15 ft.-lbs. (FIG 3.6).
 - ⚠ Do not attempt to walk on the ramps until all Support Leg set screws have been tightened as specified.
- 3.3.6. Tighten the foot thumb screw and insert 1-1/2" square plug into the top of the Support Leg (FIG. 3.6).
- 3.3.7. Repeat the above procedure at all locations where ramps connect and also at the ends of a ramp or ramp run if a PRST – Ramp Support Top is used.
 - ✎ In situations where the lower end of a ramp or ramp run is too close to the ground to install normal feet and feet are needed due to ground or other conditions, low profile feet (part no. PRLWALP) are available (FIG 3.7).
- 3.3.8. Remove the 5/16"-18 nylon insert locknuts and 5/16" flat washers attaching the ramp handrail post (if already installed).
- 3.3.9. Position the low profile foot so the foot is oriented under the ramp and the channel leg wraps around the ramp post. Reinstall the locknuts and flat washers, adjust height as described below, then tighten fasteners securely. Repeat on the opposite side (FIG. 3.7).

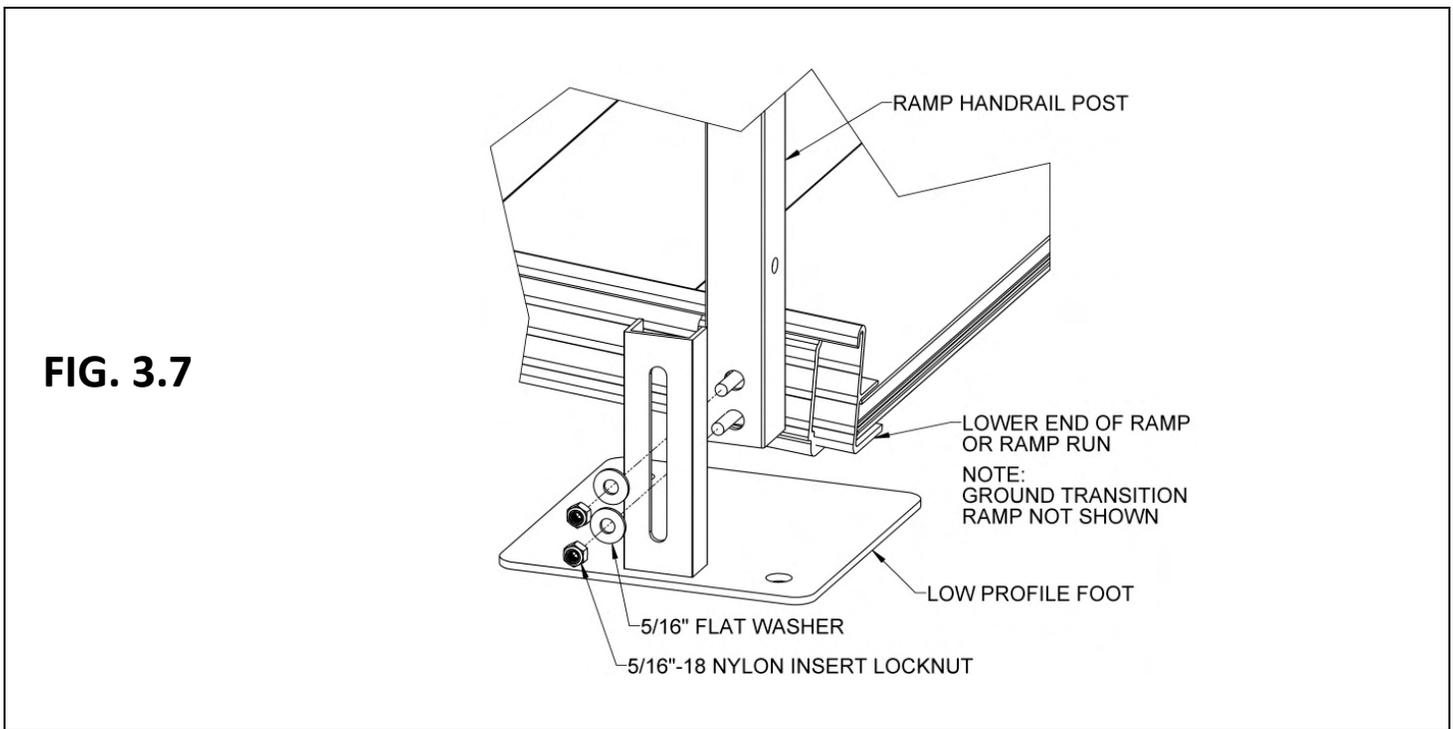


- 3.3.10. Adjust the ramp legs one at a time.
- 3.3.11. Raise the ramp sections (at the center saddle bracket) to take any sag out of the ramp run, then tighten the two locknuts in each leg.
 - ✎ ADA guidelines call for a maximum slope of 1:12 (approximately 5-degrees) and this is the ideal slope for the system. However, the ramps can be installed from 1:14 to 1:8 (approximately 4- to 7-degrees). Do not attempt to install the ramps outside this range.
 - ✎ If the ramp is installed at the maximum angle (approximately 7-degrees), longer legs may be required.
 - ✎ Adjusting sections can be accomplished by having someone sight down the ramp while another person adjusts the ramp height.
 - ✎ Ensure that the ramp sections are parallel to each other. If they are not, it may be difficult to install the handrails (FIG. 3.8).
- 3.3.12. Insert a plug into the top of each leg (FIG. 3.6).
- 3.3.13. Ensure that all bolts are tight and that the ramp sections are aligned parallel to one another.

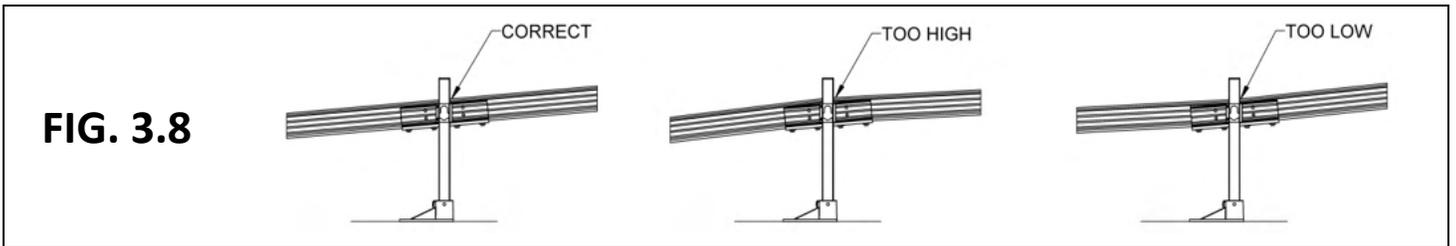

3.4. INSTALL UNIVERSAL ANGLE BRACE - RAMPS

If the walking surface is over 36" high, a PUAB (UNIVERSAL ANGLE BRACE) must be installed under the ramp (FIG. 3.9).

- 3.4.1. The opposite end of the angle brace is attached to the bottom of the ramp (near the center of the tread at the end of the ramp) using a 1/4" x 1" long self-drilling screw.
 - ▲ Ensure that all angle braces are secured before using the ramp.
- 3.4.2. Walking surfaces over 72" or higher require UNIVERSAL CROSS BRACES in addition to the angle braces (see 'INSTALL UNIVERSAL CROSS BRACE'). The process for installing cross braces to ramp legs and platform support tubes is the same.

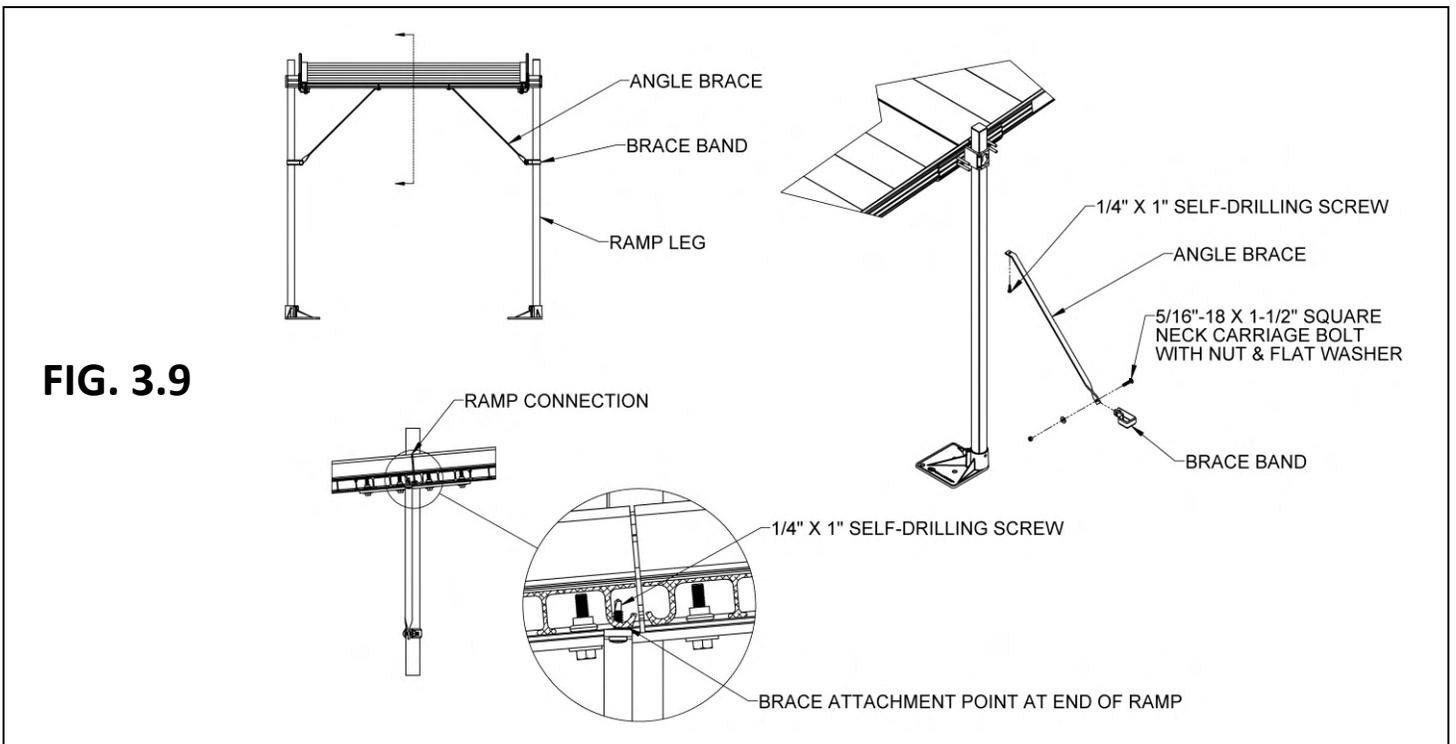



3.5. INSTALL GROUND TRANSITION RAMP

3.5.1. The PRGT (RAMP GROUND TRANSITION) consists of two sections that need to be installed into the ramp and connected together.

⚠ The PRGT (RAMP GROUND TRANSITION) is only designed to transition from the lowest ramp in the run to the ground. Do NOT USE in any other location.

3.5.2. Lift the lowest end of the ramp/ramp run and bring the upper section of the PRGT into the ramp end tread until the “hook” is engaged (FIG. 3.10).

3.5.3. Rotate into place (FIG. 3.11) and set back on the ground.

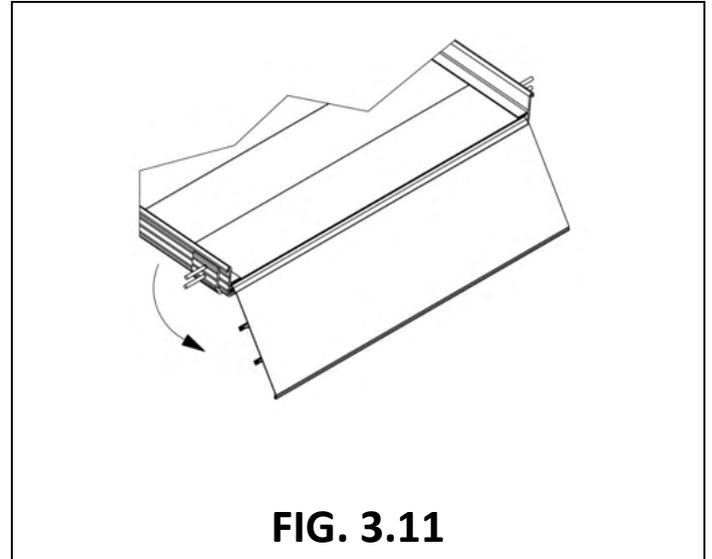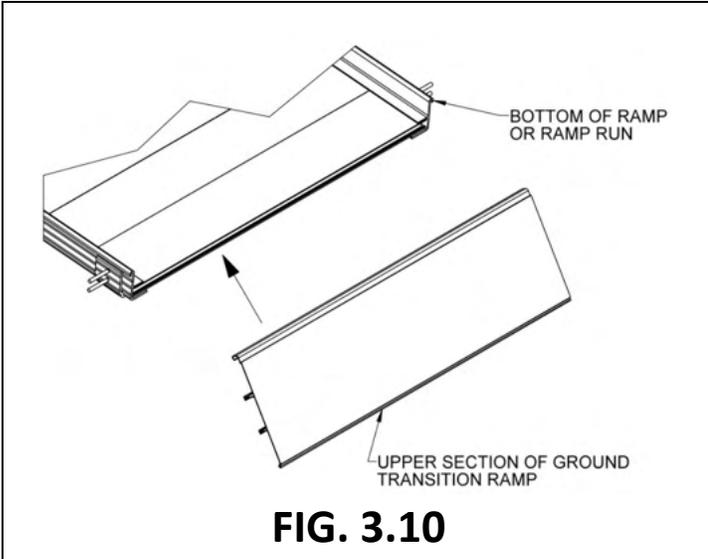



3.5.4. Slide the lower section ground transition ramp into upper section (FIG. 3.12).

3.5.5. Install #8-32 x 1/2" hex washer head thread cutting screws into the screw slots on both sides where the sections connect (FIG. 3.13).

✋ The hex washer head screws will keep the sections from sliding with respect to each other, but the sections can still be separated until they are installed in the ramp and resting on the ground.

3.5.6. Holes and fasteners are included for anchoring into wood or concrete. Other methods may be used when anchoring into other surfaces.

3.5.7. If connecting the lowest end of the ramp to a PLP (LANDING PAD) use a PRLT (RAMP LOWER TRANSITION) instead of a PRGT (RAMP GROUND TRANSITION). Please see 'OPTIONAL EQUIPMENT' for instructions.

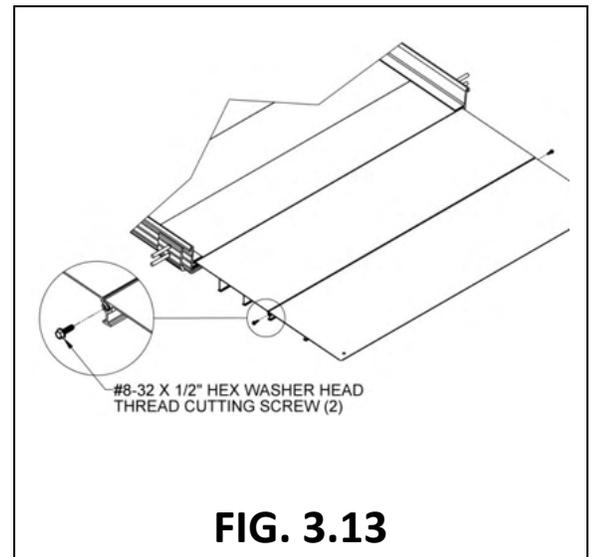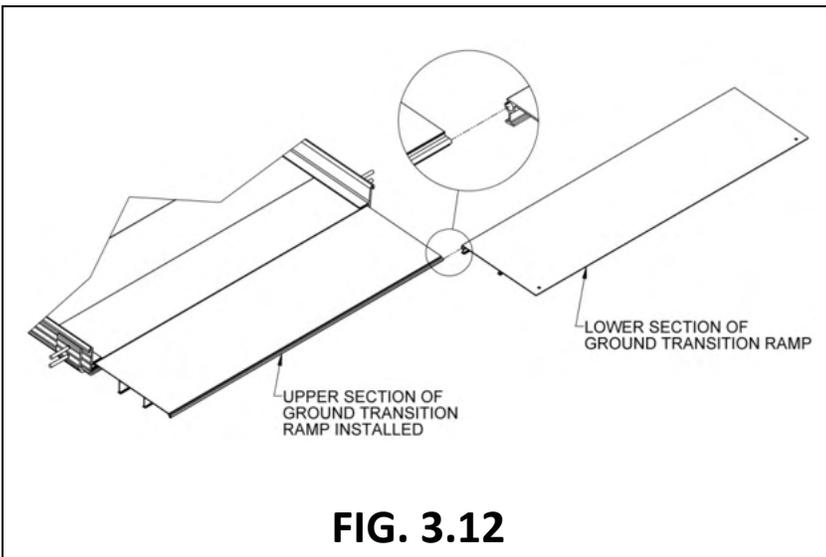


3.6. INSTALL A SINGLE RAMP RUN TO AN EXISTING STRUCTURE

If installing a ramp run to an existing landing other than a PATHWAY 3G Platform, such as a porch, deck, stairs, etc., follow these steps:

- 3.6.1. Turn the ramp section upside down on a flat surface. Do this on cardboard or a lawn so that the ramp is not damaged (scratched or dented).
- 3.6.2. Locate PRHBPR (RAMP HANDRAIL END BRACKET PAIR). Install four end brackets (will be used to attach handrails in a later step). Install one end bracket at each outside corner of the ramp section using one 5/16" x 1-1/2" bolt and washer into the threaded insert closest to the end of the ramp (FIG. 3.14).
- 3.6.3. Turn the ramp over to the upright position.

FIG. 3.14

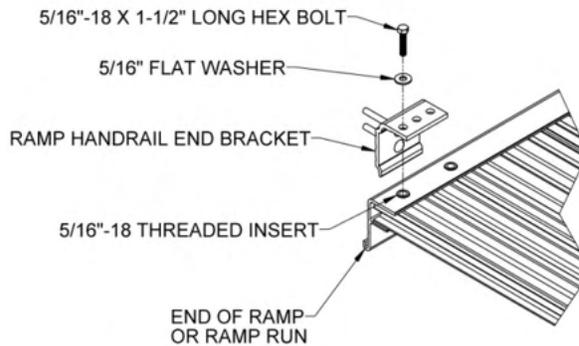

- 3.6.4. Place the upper end of the ramp onto supporting surface, i.e., platform, porch, etc. Once the ramp is resting on the porch or platform, lift the upper end of the ramp and install the PRUT (RAMP UPPER TRANSITION) into what will be the upper end of the ramp (FIG. 3.15) and the PRGT (RAMP GROUND TRANSITION) into what will be the lower end of the ramp.
- 3.6.5. If the lower end of the ramp is not resting on the ground, use either an upper transition or lower transition with a PRST (RAMP SUPPORT TOP). Please see 'OPTIONAL EQUIPMENT' for instructions.
- 3.6.6. Maneuver the ramp to its desired position (FIG. 3.16).

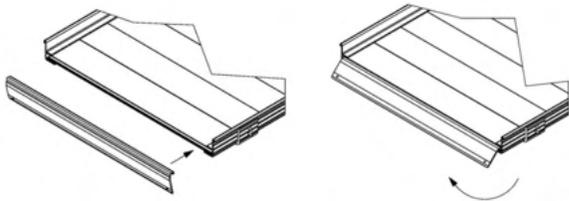


FIG. 3.15

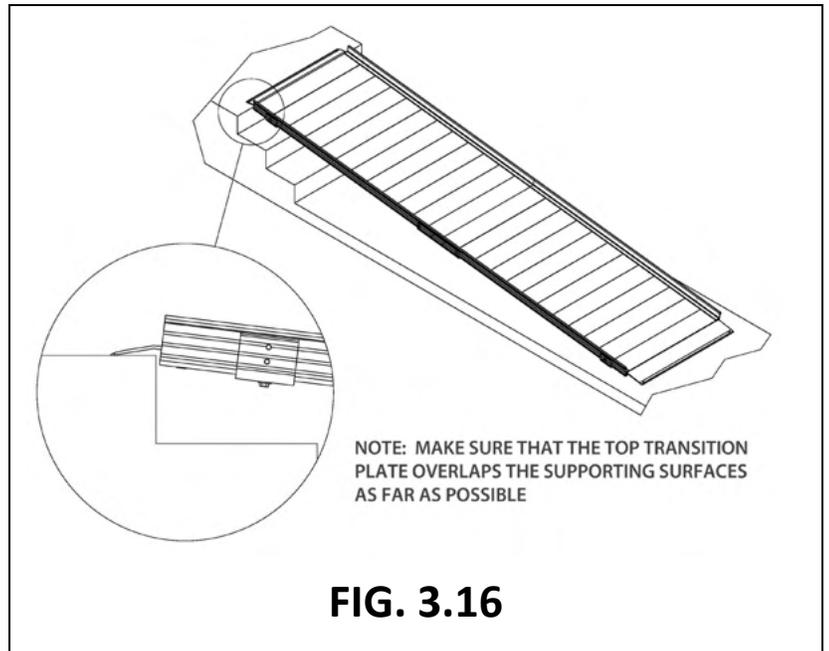


FIG. 3.16

3.7. ANCHOR RAMP UPPER TRANSITION

The PRUT (RAMP UPPER TRANSITION) must be anchored to a substantial surface. Use the pre-drilled holes at each corner of the PRUT (RAMP UPPER TRANSITION) as guides.

3.7.1. IF RESTING ON A WOOD SURFACE:

3.7.1.1. Secure PRUT (RAMP UPPER TRANSITION) by installing the 1/4" x 1" long self-drilling screw through each hole (FIG. 3.17).

3.7.2. IF RESTING ON A CONCRETE SURFACE:

3.7.2.1. Using the PRUT (RAMP UPPER TRANSITION) as a template, transfer the hole locations to the concrete surface and note locations with marking device.

3.7.2.2. Remove PRUT (RAMP UPPER TRANSITION). Using a 1/4" masonry bit, drill two 1-1/2" deep holes at the marked locations.

✎ After drilling, make sure that the holes are free of any residue and/or debris.

3.7.2.3. Re-attach the PRUT (RAMP UPPER TRANSITION) and align over the drilled holes.

3.7.2.4. Drive the 1/4" diameter mushroom head pin drive anchors into the holes in the PRUT (RAMP UPPER TRANSITION) with a hammer until the head is seated flush with anchor body.



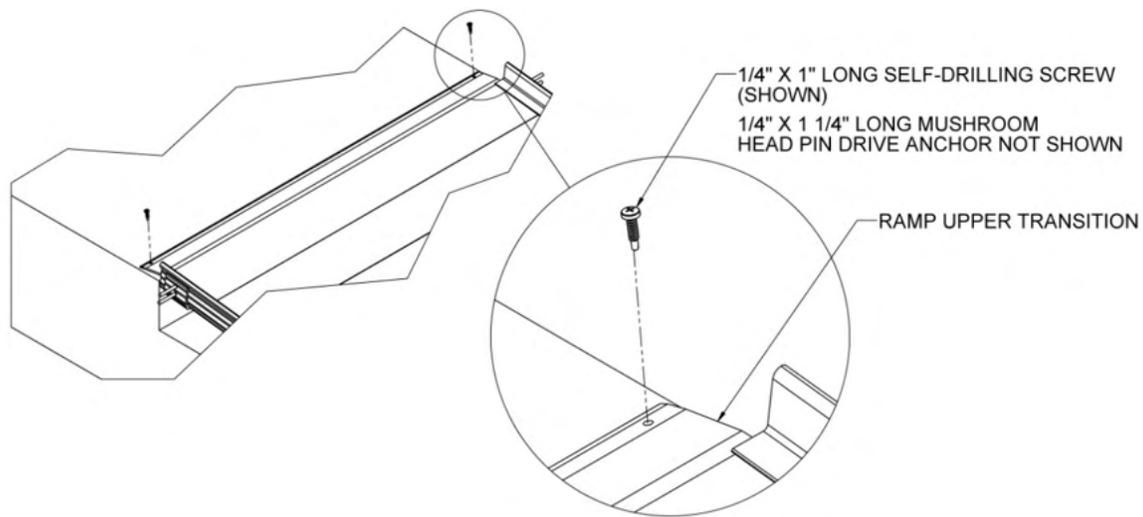


FIG. 3.17

3.8. ANGLE RAMPS WITH RESPECT TO PLATFORMS, PORCHES, OR DECKS

There are situations where it is necessary to angle ramps with respect to a platform, porch, or deck. If a ramp must be angled when attaching to a platform, a PRUT (RAMP UPPER TRANSITION) or PRLT (RAMP LOWER TRANSITION) with a PRST (RAMP SUPPORT TOP) must be used instead of a PRHP (RAMP HANGER PAIR). The same components can be used at the top and bottom of ramp or ramp runs depending on the angle required.

- 3.8.1. Angles up to approximately 3-degrees can be accommodated using the PRUT (RAMP UPPER TRANSITION) if the PRUT (RAMP UPPER TRANSITION) overlaps the surface of the platform, porch, or deck by at least 1" (FIG. 3.18).
- 3.8.2. Angles up to approximately 6-degrees can be accommodated using the PRLT (RAMP LOWER TRANSITION) with a PRST (RAMP SUPPORT TOP) and ramp legs. Legs must be used on both sides of the ramp when angled over 3-degrees. Refer to the appropriate sections in 'OPTIONAL EQUIPMENT' for installing the PRUT (RAMP UPPER TRANSITION) or PRLT (RAMP LOWER TRANSITION) (FIG. 3.19).
- 3.8.3. The PRLT (RAMP LOWER TRANSITION) must overlap the surface of the platform, porch, or deck by at least 1" regardless of the angle required (FIG. 3.19).

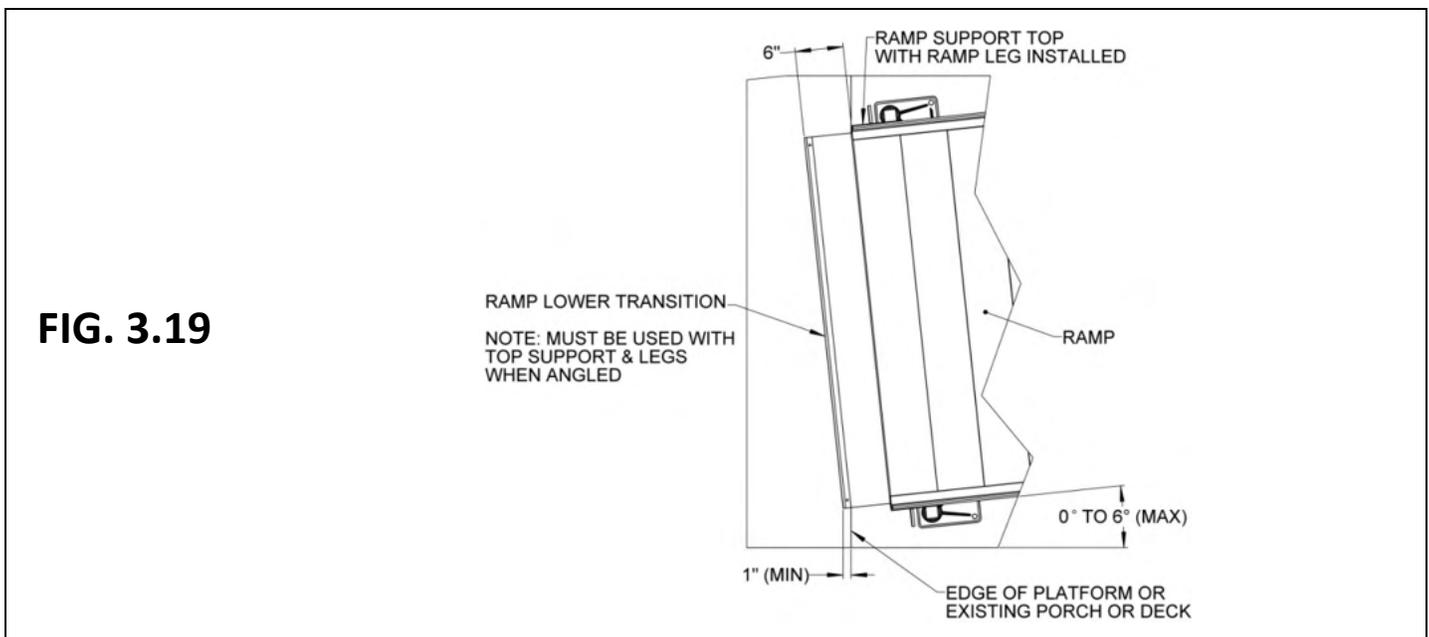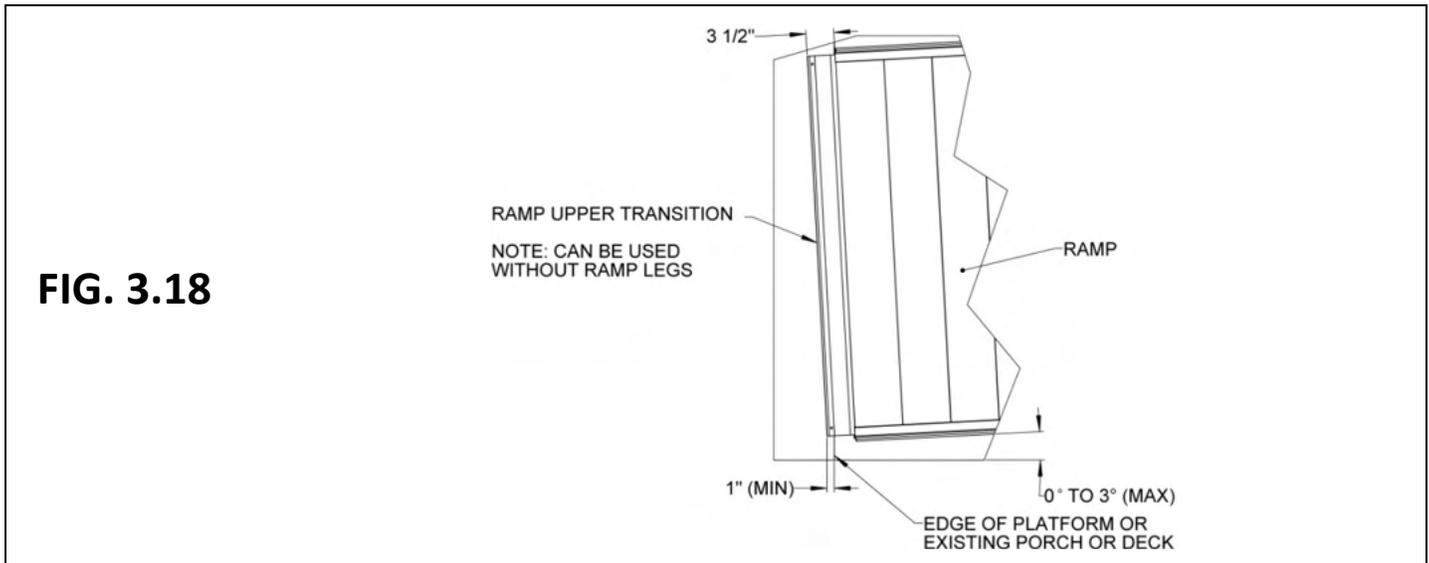


4. HANDRAILS

4.1. RAMP WITHOUT HANDRAILS

- 4.1.1. Attach Starter Ramp Support to the 5/16"-18 Threaded Insert located on underside of first ramp run, using 5/16"-18 x 1-1/2" hex bolt with 5/16" washer (FIG. 4.1).


FIG. 4.1

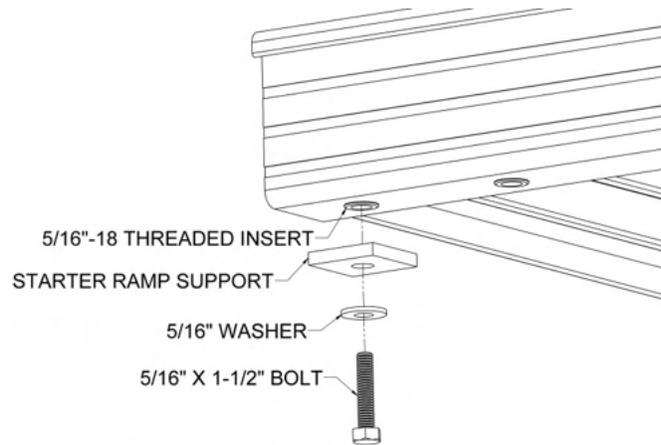


4.2. RAMP HANDRAILS

- 4.2.1. Two-line handrails are provided in pairs when ordered with the ramp. Vertical Picket ramp handrails are provided for a single side to allow maximum flexibility in handrail.
- 4.2.2. One handrail is required on each side of the ramp, but handrails are interchangeable side to side.
- 4.2.3. In a multiple ramp run configuration, handrail connectors (PRRC – CONNECTOR RAMP TO RAMP) are used to join handrails together. Refer to FIGs. 4.2 and 4.3 for the following:
 - 4.2.3.1. The vertical posts of the handrails each have two holes which correspond with the studs on the end or center saddle brackets (installed in previous steps).
 - 4.2.3.2. Attach handrails to the studs using two each 5/16" flat washers and two each 5/16" nuts per post. Tighten 5/16" nuts just enough to hold handrail in place.
 - 4.2.3.3. If the studs do not align with the posts in the handrail, the handrail end bracket is most likely installed into the wrong threaded insert in the ramp side rail (see FIGs. 3.2 or 3.14 for proper installation location). Slide the ramp handrail connector into one end of the upper handrail tube.
 - 👉 If connector does not fit in the tube, use pliers to lightly compress the connector while sliding into handrail tube.

FIG. 4.2

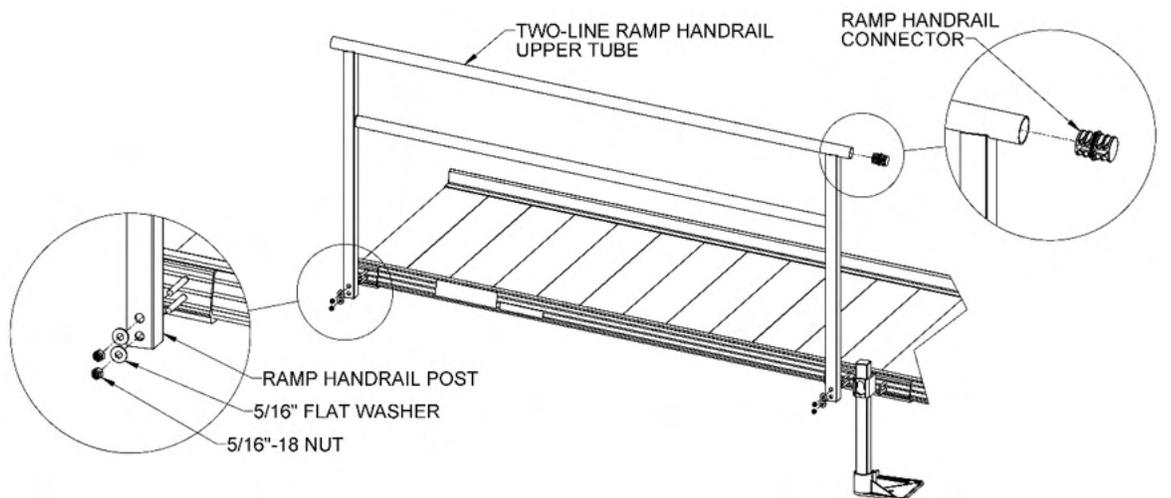

- 4.2.3.4. Slide the next handrail section over the connector, ensuring the upper handrail tubes are pushed firmly towards each other. Compress the connector. Use a rubber mallet or similar tool to fully seat as needed
- 4.2.3.5. Rotate the handrail until the holes in the handrail post align with the studs in the saddle brackets that are connected to the ramp. Attach with 5/16" flat washers and 5/16" nuts but tighten only enough to hold the handrail in place.
- 4.2.3.6. Repeat for the remaining handrails in the run, then tighten all fasteners securely.

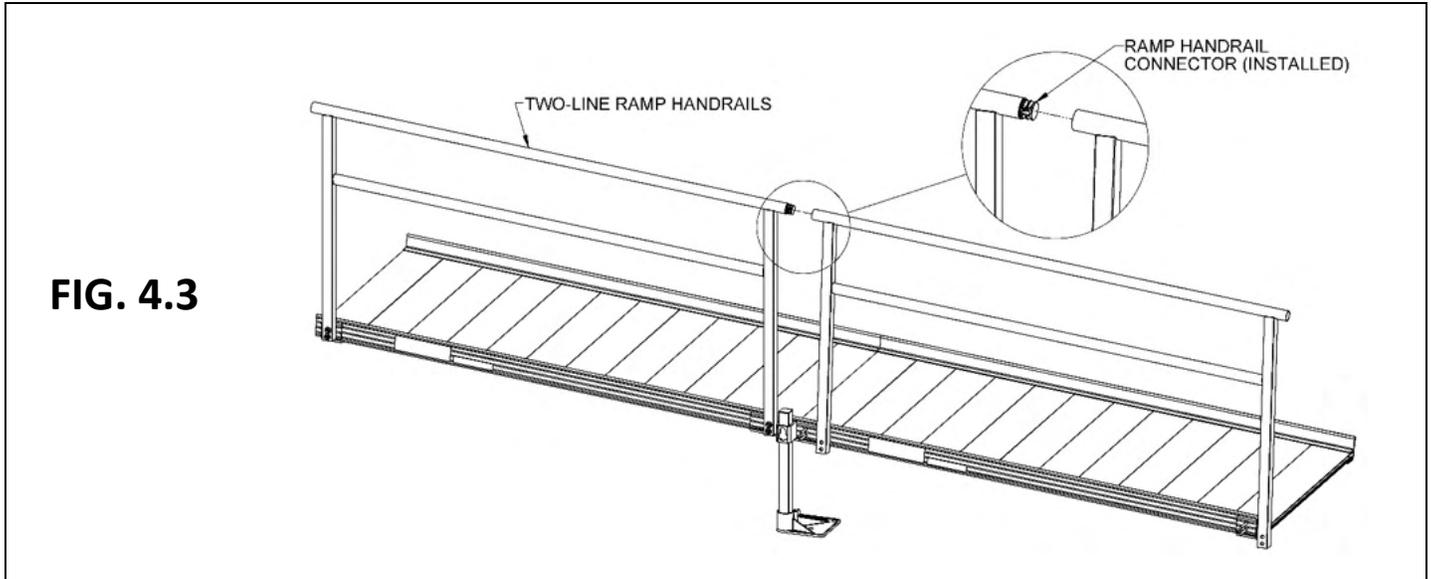

4.3. ASSEMBLE STANDARD PLATFORM HANDRAILS

- 4.3.1. Two-Line handrails are provided in pairs when ordered with the platform. Vertical Pickets are provided for a single side to allow maximum flexibility in handrail options. When Vertical Pickets are ordered, you will receive a platform with Two-Line handrails and the picket option(s) ordered. Regardless of style, it is strongly recommended the bolts be assembled loosely and not fully tightened until all have been installed and the handrail has been installed in the platform.
- 4.3.2. Using holes shown (FIG. 4.4) for Two-Line platform handrails, pre-assemble handrails by inserting a 5/16"-18 x 1" hex bolt through a 5/16" flat washer, the angle post, and into a 5/16"-18 round threaded insert in the handrails and curb.
- 4.3.3. Using holes shown (FIG. 4.5) for Vertical Picket platform handrails, pre-assemble handrails by inserting a 5/16"-18 x 1" long hex bolt through a 5/16" flat washer, the angle post, and into a 5/16"-18 round threaded insert in the handrail or square threaded insert in the vertical pickets.

FIG. 4.4


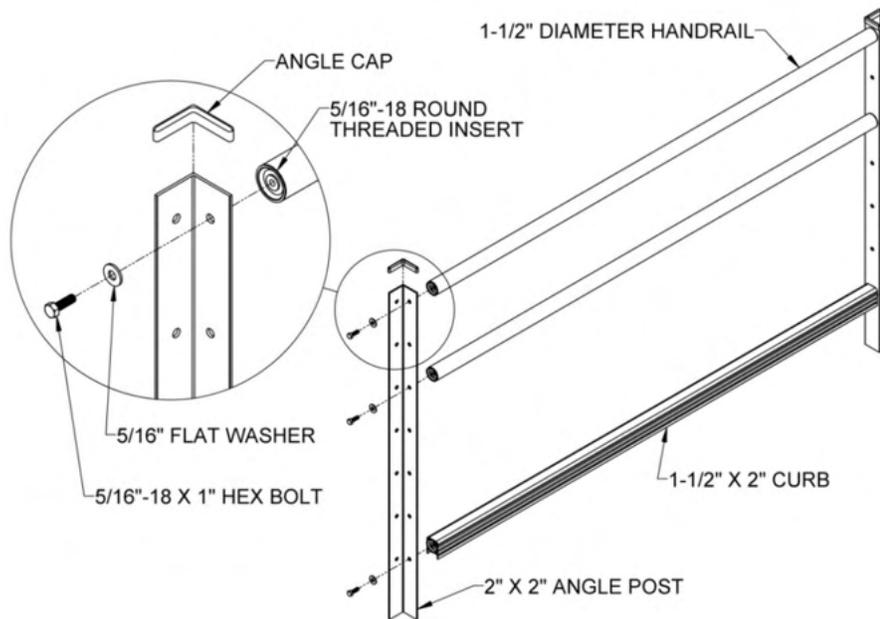


FIG. 4.5

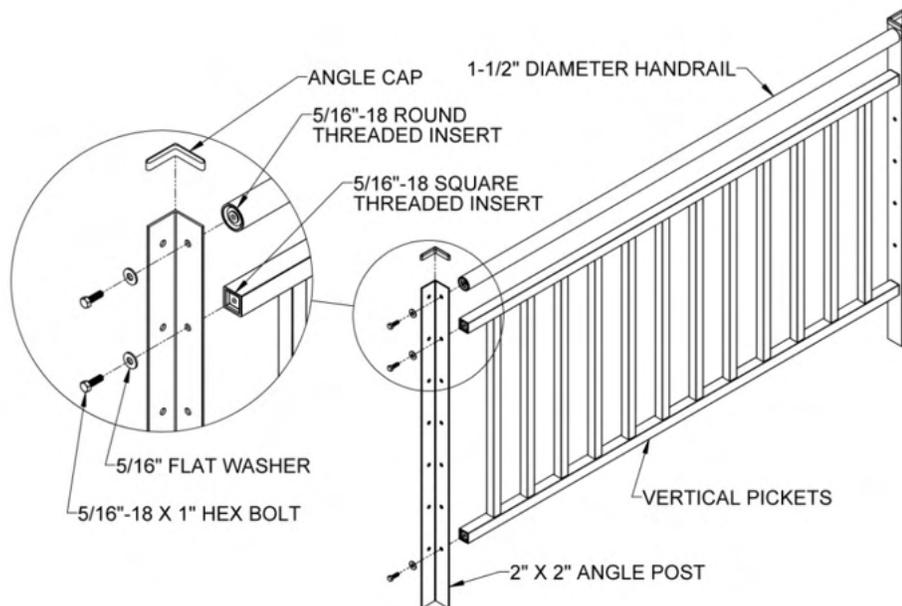

4.4. INSTALL STANDARD PLATFORM HANDRAILS

- 4.4.1. Regardless of the handrail style, but depending on the configuration, refer to FIGs. 4.6 and FIG. 4.7 as needed.
- 4.4.2. Pre-assemble the platform handrail for both sides of a straight configuration and the “first” handrail of a turn configuration. Make sure the unattached legs of the angle posts are on the same side with respect to handrail tubes, curb, and pickets and pointing outward (FIG. 4.6).
- 4.4.3. For the “second” handrail in a turn configuration, only assemble one angle post as described above, paying attention to how it will connect to the “first” handrail so the angle post will be oriented correctly.
- 4.4.4. For straight platform configurations and the “first” handrail on a turn platform, drop platform handrails into the corner pockets (FIG. 4.7). The curb should rest on top of the corner pocket when installing the Two-Line handrails. For the Vertical Picket handrails, align the bottom of the post with the bottom of the platform corner pockets.
- 4.4.5. For the “second” handrail on a turn platform, insert the angle post into a corner pocket at 90-degrees from the “first” handrail, then install 5/16”-18 x 1” long hex bolt through a 5/16” flat washer, the angle post in the “first” handrail, and into a 5/16”-18 threaded inserts in the “second” handrail, curb, or picket (FIG. 4.7). Tighten all fasteners securely.
- 4.4.6. Tighten two each set screws on the inside of the platform corner pocket. One setscrew is located above the platform deck and the other is underneath (FIG. 4.6).
- 4.4.7. Install an angle cap on top of each handrail post. Use construction adhesive to bond the cap in place (FIG. 4.4 and 4.5).
- 4.4.8. Ensure all fasteners are tightened securely.


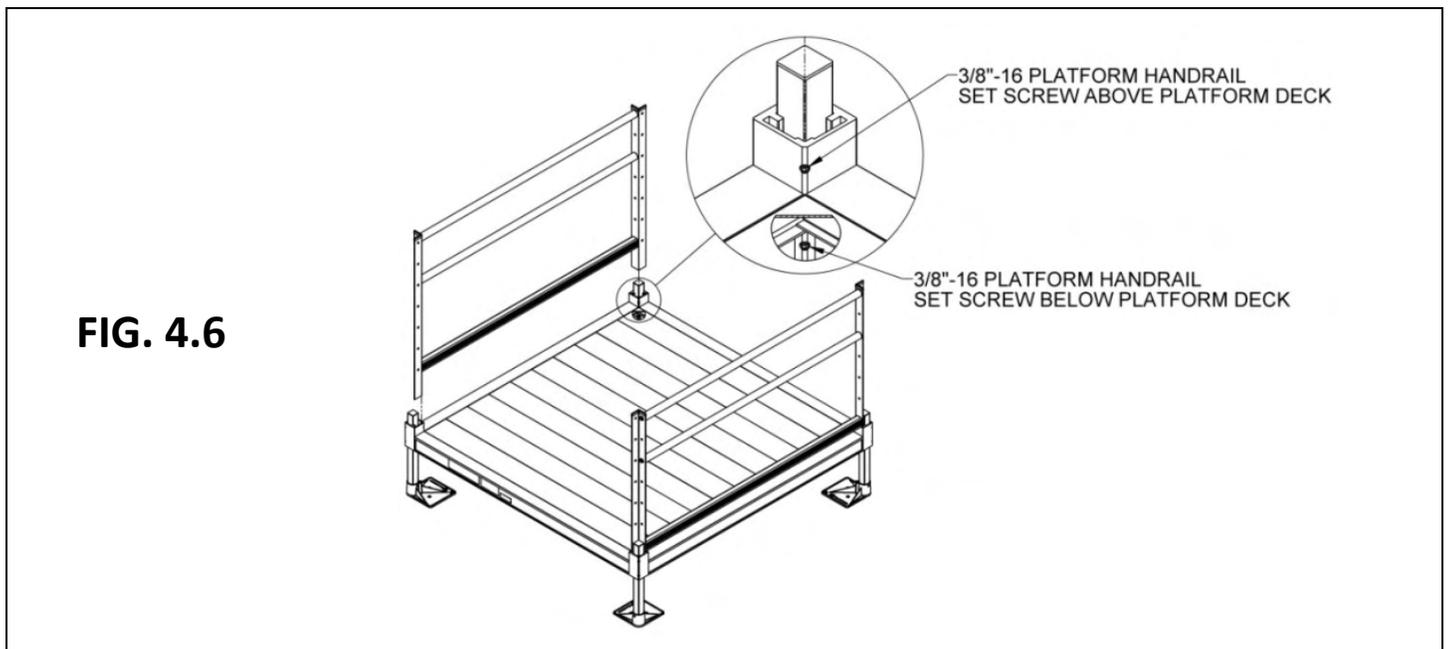


FIG. 4.7

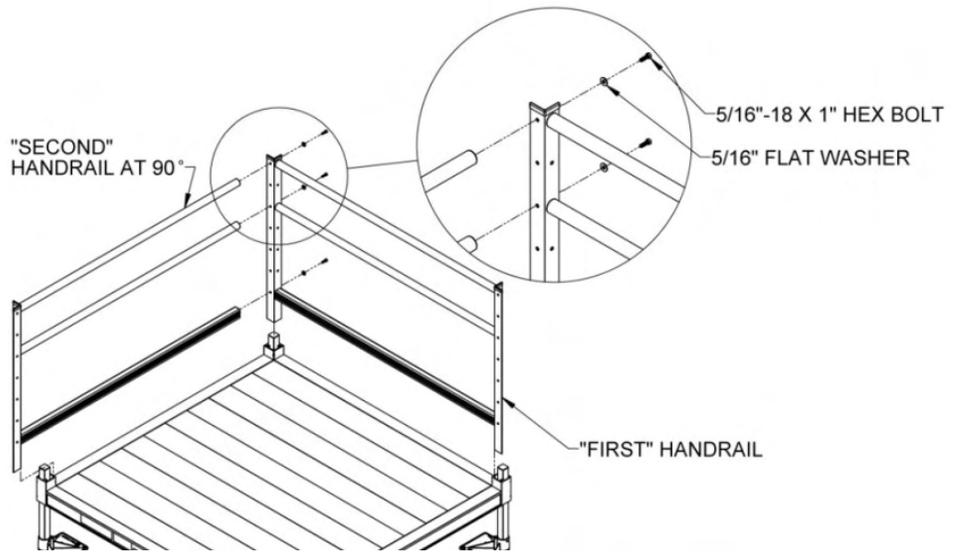

4.5. 8' X 5' TURN BACK PLATFORM HANDRAILS

- 4.5.1. The 8' x 5' Turn Back Platform is used to create a turn back (or switchback) instead of connecting two 5' x 4' platforms. It includes two standard 5' platform handrails and handrails for the 8' side with a curb.
- 4.5.2. Refer to 'INSTALL STANDARD PLATFORM HANDRAILS' for both 5' platform handrails.
- 4.5.3. Assemble the 8' platform handrails and curb between the two 5' platform handrails by threading 5/16"-18 x 1" long hex bolts through the holes in the 5' platform posts which align with the 5' handrails and curb and into the threaded inserts in the ends of the 8' handrails and curb. Tighten all fasteners securely (FIG. 4.8).
- 4.5.4. 8' platform Vertical Picket handrails are assembled in a similar manner (FIG. 4.9).

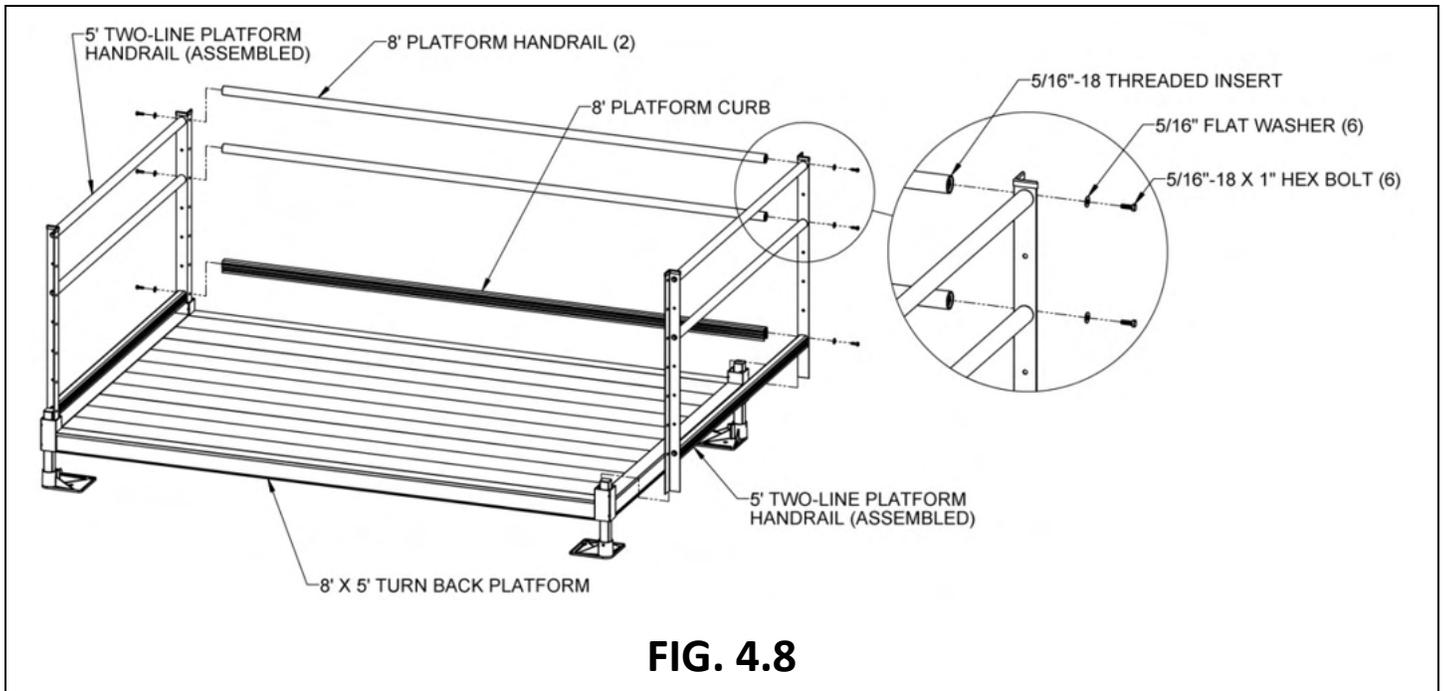


FIG. 4.8

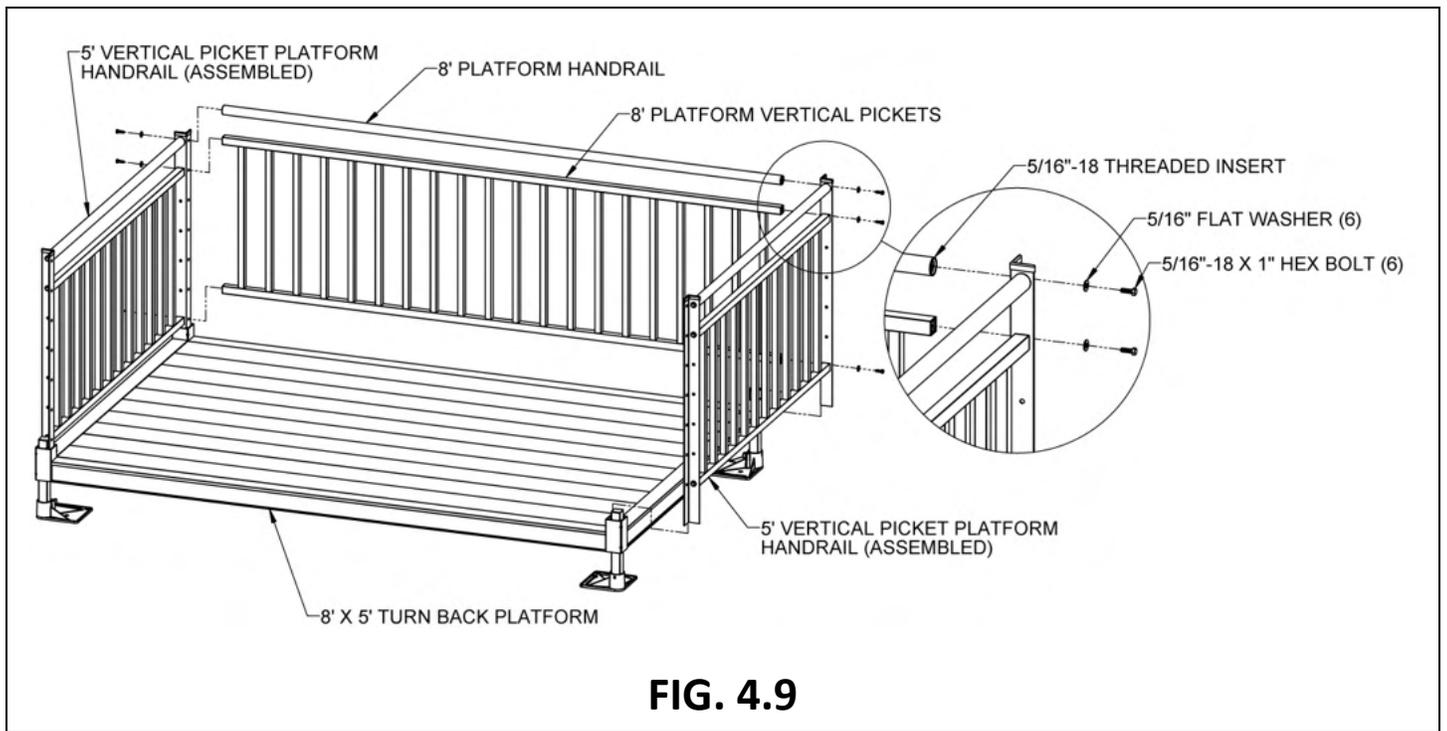


FIG. 4.9

4.6. 45-DEGREE ANGLE PLATFORM HANDRAILS

- 4.6.1. There are two options for 45-degree Angle Platform handrails, Two-Line and Vertical Pickets. The platform includes the handrail components needed for the option ordered.
- 4.6.2. Assembling either 45-degree Angle Platform Two-Line or Vertical Pickets handrails should be completed after all ramps and platforms have been set and the ramp handrails installed. The ramps on both sides of the 45-degree Angle Platform should be set as close to the corner pockets on the “long” side of the platform as possible. Refer to the following steps for Two-Line handrails; skip to 4.6.16 for Vertical Pickets handrails.
- 4.6.3. After installing the ramp handrails, attach two Bolt-On Stub Rails to the ramp handrail posts on the “short” side of the 45-degree Angle Platform. Center the 1-1/2” dia. tube of the Bolt-On Stub Rail with respect to the ramp handrail lower rail and secure using a 1/4”-20 x 1” self-drilling, self-tapping hex washer head screw (FIG. 4.10).




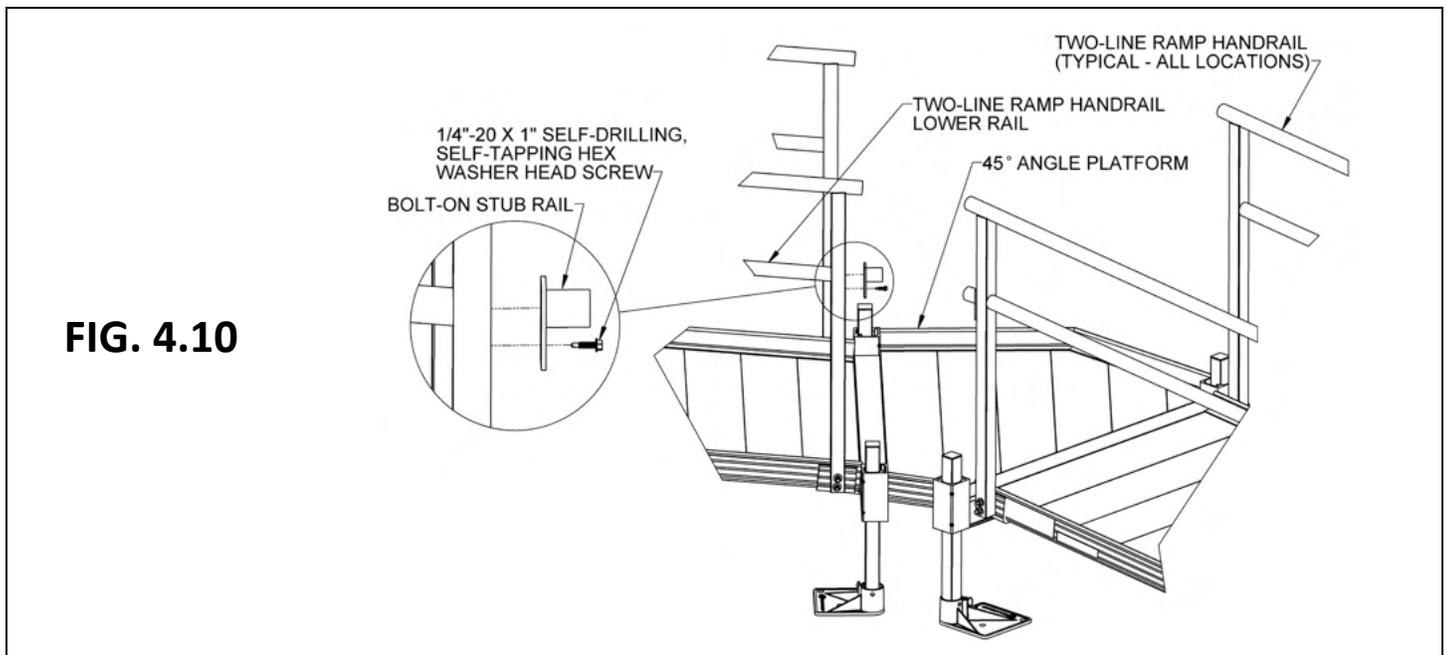


FIG. 4.10


- 4.6.4. Insert adjustable elbows into the ramp handrails and the Bolt-On Stub Rails (FIG. 4.11).
- 4.6.5. Loosen the elbow assembly screws and position the adjustable elbows so they are aligned with the adjustable elbows on the opposite side (but do not tighten), then measure the distance between the two larger round faces. Measure both upper and lower gaps because they could be different (FIG 4.11).
 - 4.6.5.1. Cut the tubes accordingly.
- 4.6.6. The procedure for installing the 1-1/2" diameter handrail tubes and adjustable elbows is the same as the installing the closure top rail, refer to 'CLOSURES'.
- 4.6.7. To connect the handrails on the "long" side of the 45-degree angled platform, the welded handrail extension (shaped like an "H" with unequal legs) must first be connected to the ramp handrail whose uppermost point ends at the angled platform (not the ramp whose lowermost point starts at the angled platform).
 - 4.6.7.1. First, locate and disassemble an adjustable elbow.

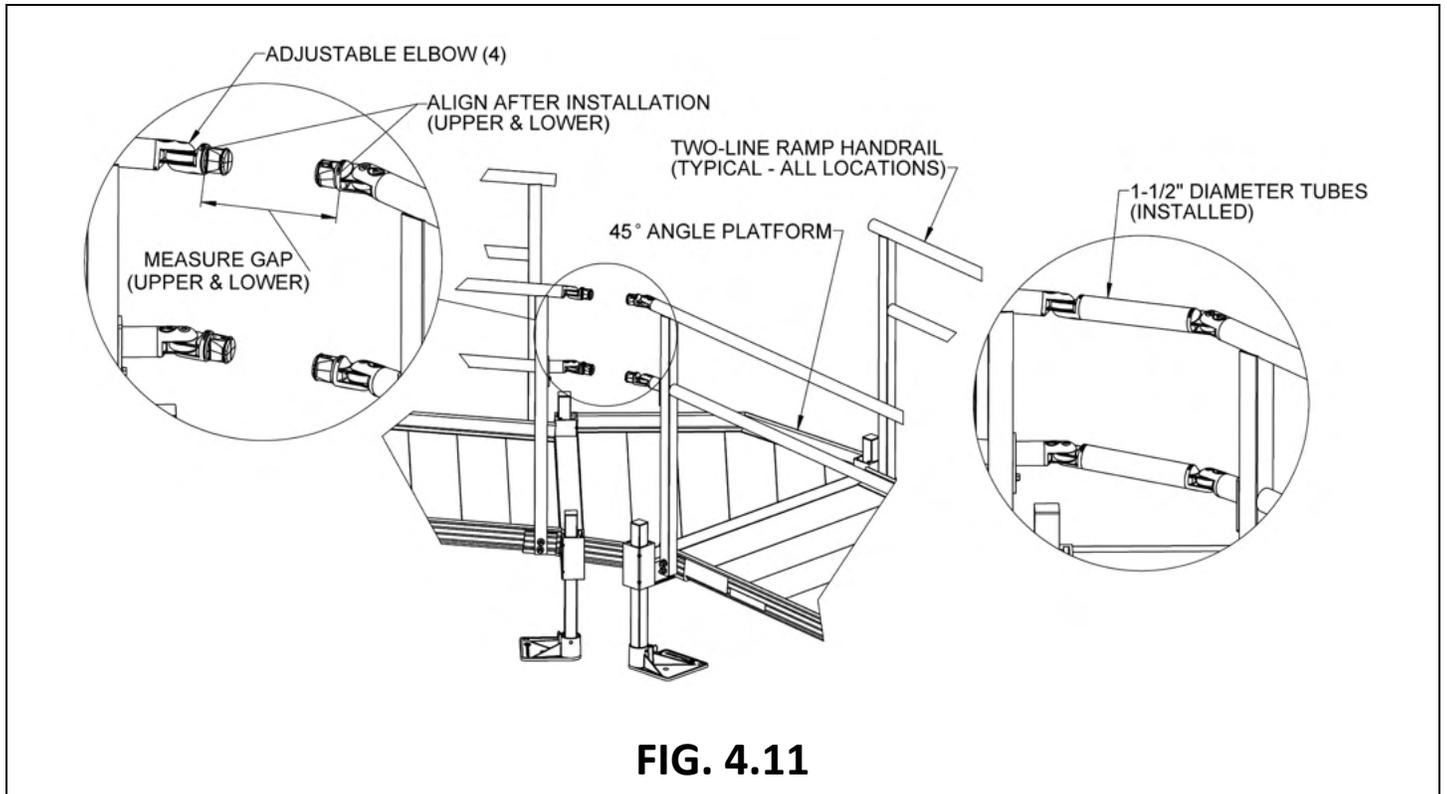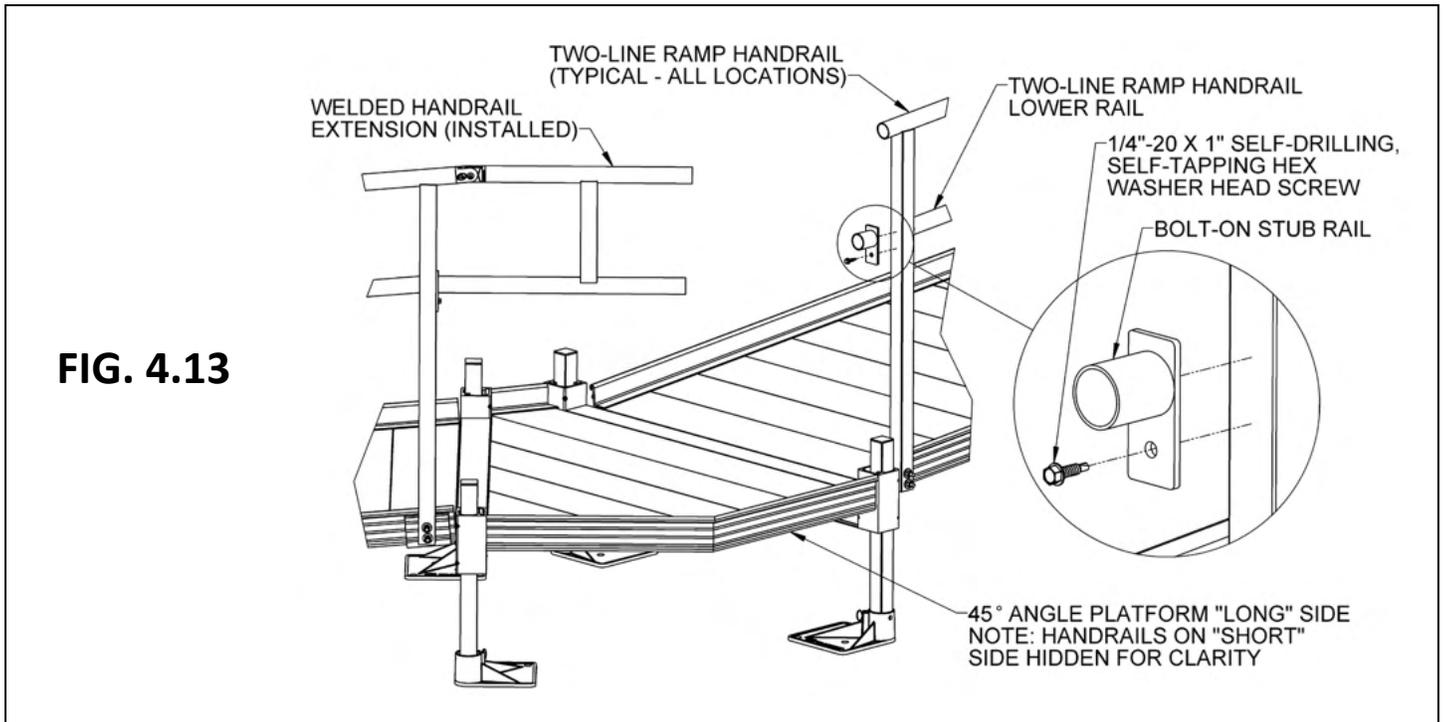



- 4.6.8. Insert one half of the elbow into the ramp handrail and the other half into the leg of the handrail extension above the connector plate (FIG. 4.12).
- 4.6.9. Let the connector plate rest against the ramp handrail post and reassemble the adjustable elbow.
- 4.6.10. Secure the connector plate to the ramp handrail post using a 1/4"-20 x 1" self-drilling, self-tapping hex washer head screw (FIG. 4.12).
- 4.6.11. Attach a Bolt-On Stub Rail to the ramp handrail post on the opposite side of the welded "H". Center the 1-1/2" dia. tube of the Bolt-On Stub Rail with respect to the ramp handrail lower rail and secure using a 1/4"-20 x 1" self-drilling, self-tapping hex washer head screw (FIG. 4.13).

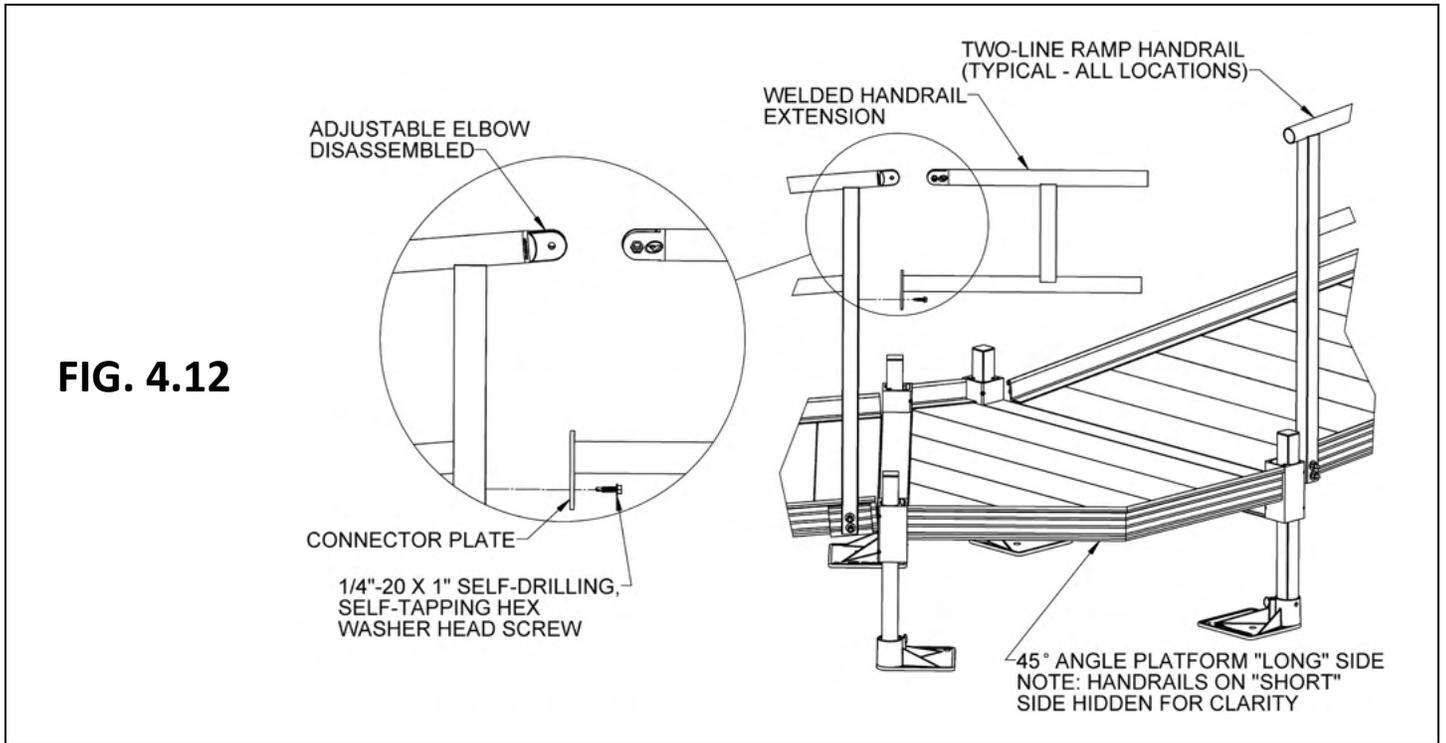

- 4.6.12. Insert adjustable elbows into the open ramp handrail, the Bolt-On Stub Rail, and the open ends of the welded handrail extension (FIG. 4.14).
- 4.6.13. Align the adjustable elbows and measure and cut the 1-1/2" diameter handrail tubes connecting the ramp handrail and Bolt-On Stub Rail to the handrail extension. Measure both upper and lower gaps because they could be different and cut tubes accordingly. The procedure for installing the 1-1/2" diameter handrail tubes and adjustable elbows is the same as the installing the closure top rail, refer to 'CLOSURES'.
- 4.6.14. FIG. 4.14 shows the completed connection.
- 4.6.15. Ensure all fasteners on both sides are tightened securely.

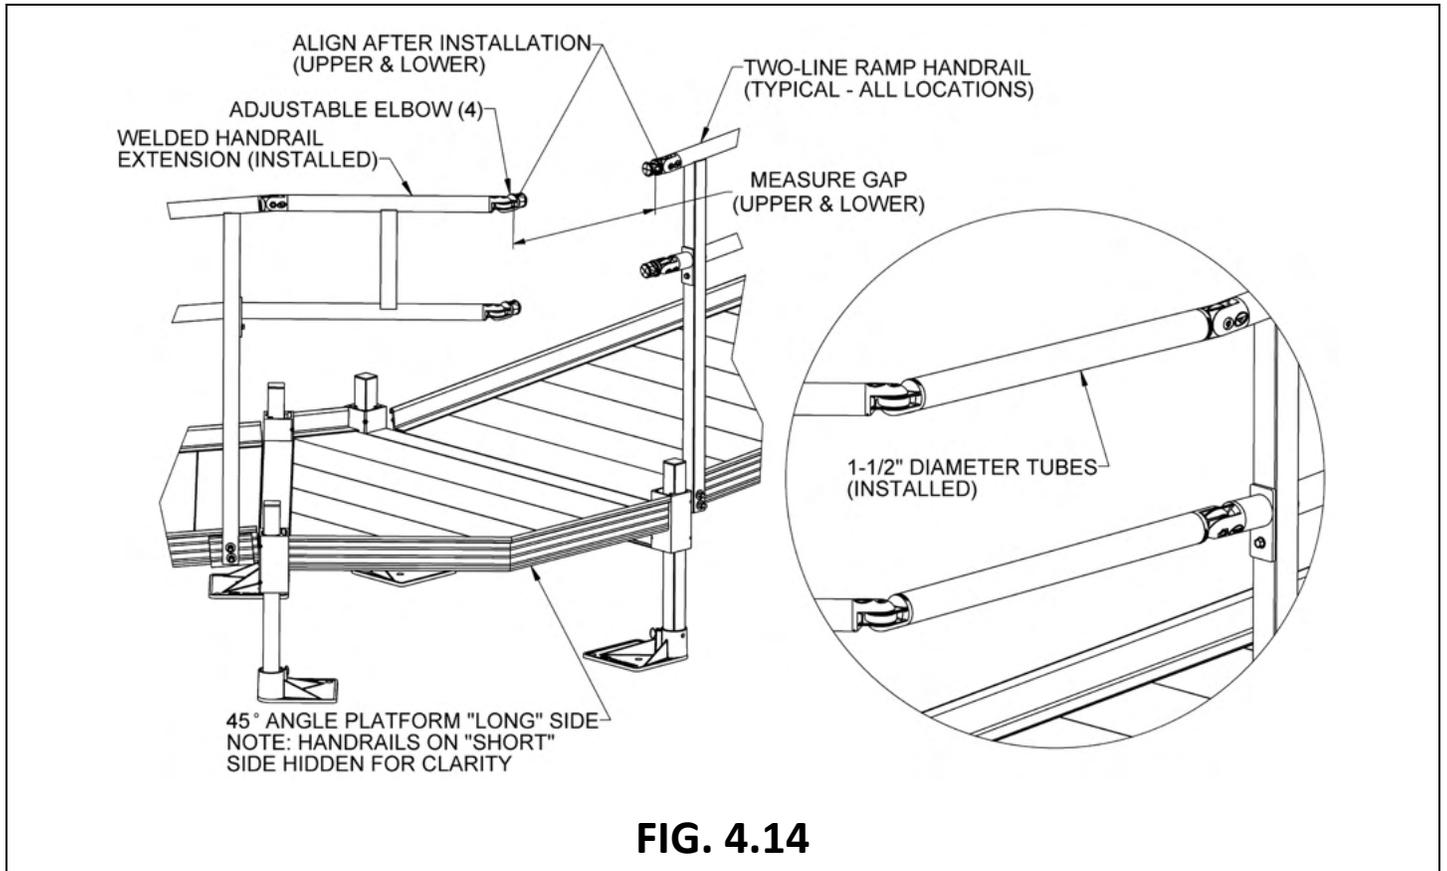

- 4.6.16. After installing ramp handrails, insert the Short Side Vertical Picket on the “short” side of the 45-degree Angle Platform. Align the bottom of the posts with the bottom of the corner pockets and tighten the set screws securely. Install angle caps on top of each post. Refer to SECTION 4.4 for installing platform handrails and attaching angle caps (FIG. 4.15).
- 4.6.17. Insert adjustable elbows into both ramp handrails and install 1-1/2” diameter handrail tubes in the same manner as described in ‘HANDRAILS’ and shown (FIG. 4.16).

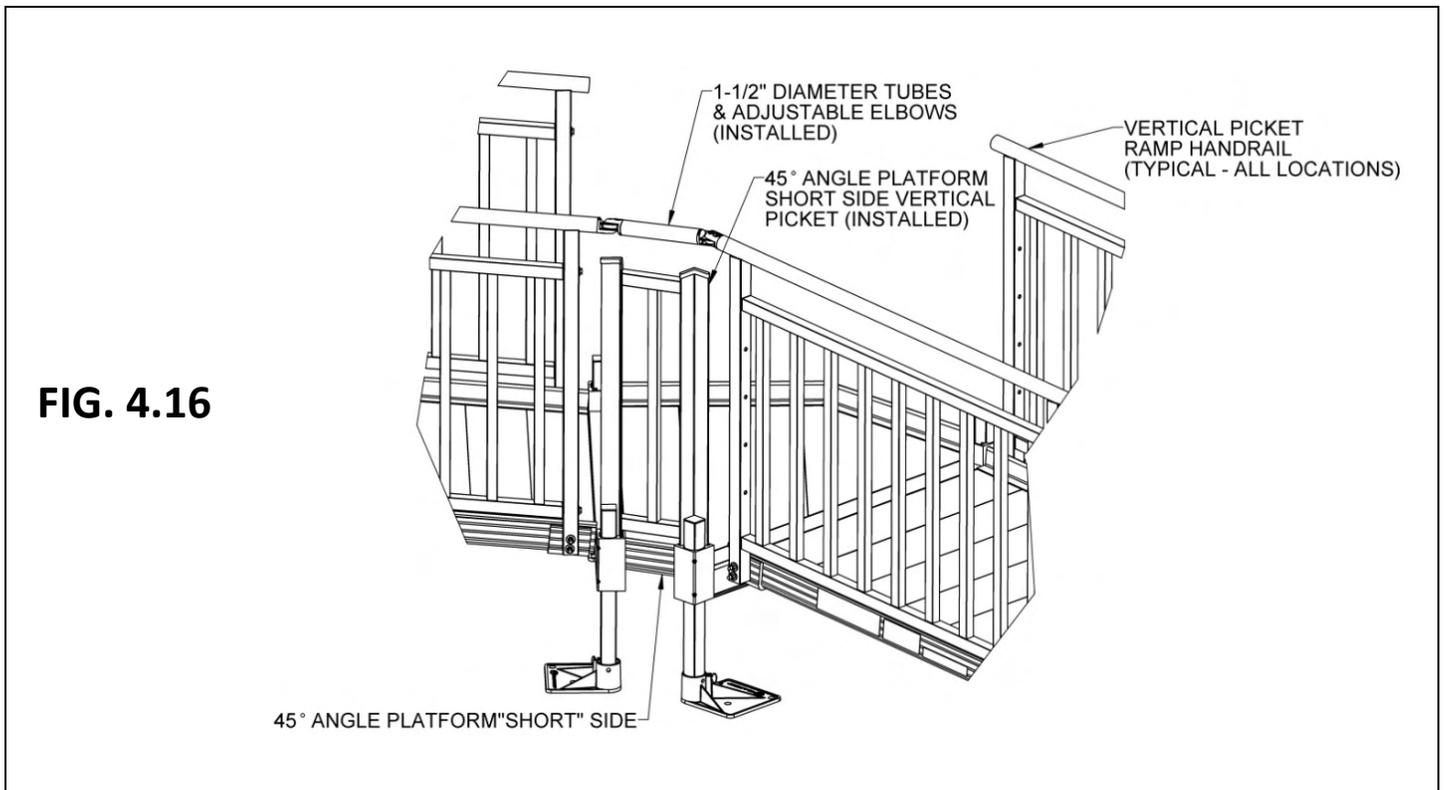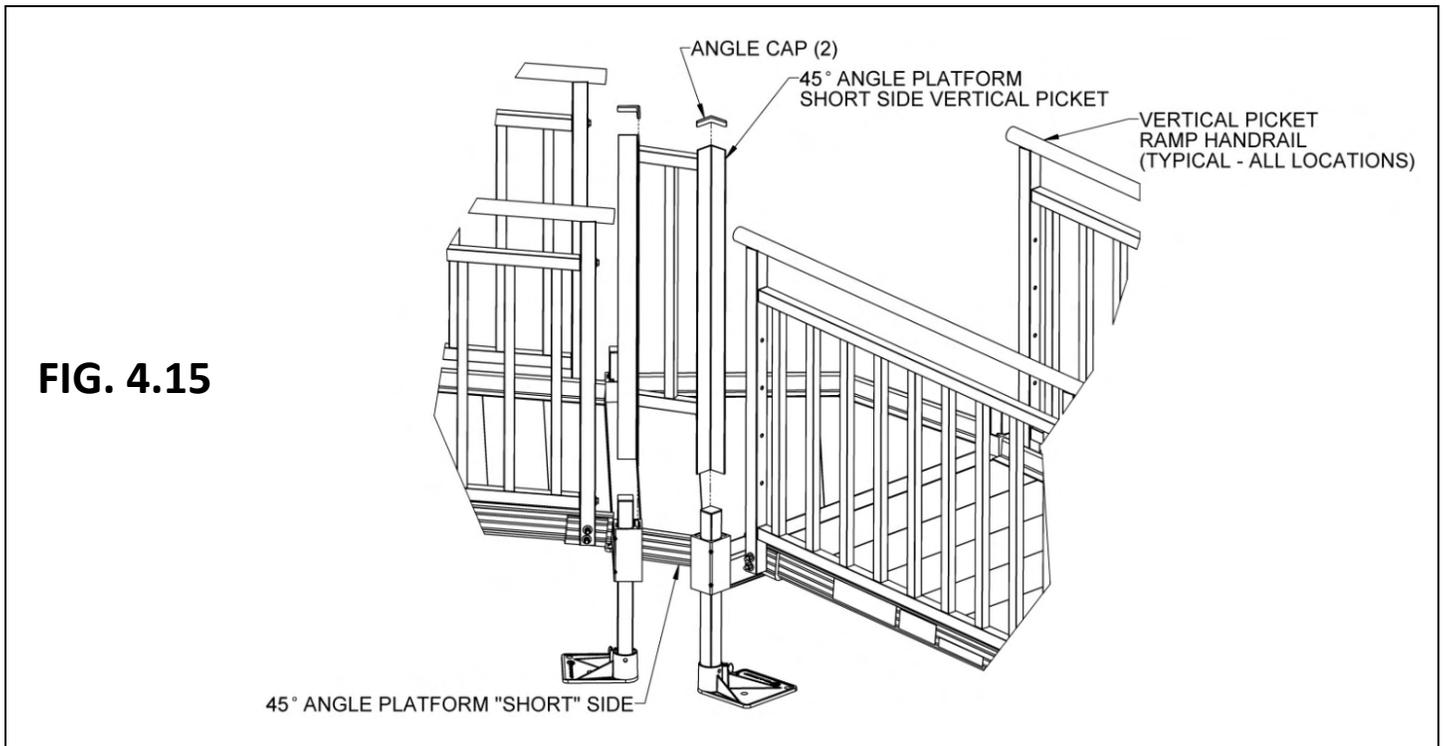

- 4.6.18. For the “long” side of the 45-degree Angle Platform, there are two welded Vertical Picket panels which are inserted into the corner pockets then bolted together. Left hand and right hand refer to looking at the “long” side from the “short” side. Insert both into their respective corner pockets and align the bottom of the posts with the bottom of the corner pockets. Bolt the two sections together using 5/16”-18 x 1” hex bolts, 5/16” flat washers and 5/16”-18 nuts as shown (FIG 4.17).
- 4.6.19. Tighten set screws in the corner pockets securely and install angle caps on top of the posts.
- 4.6.20. Refer to SECTION 4.4 for installing platform handrails and attaching angle caps.


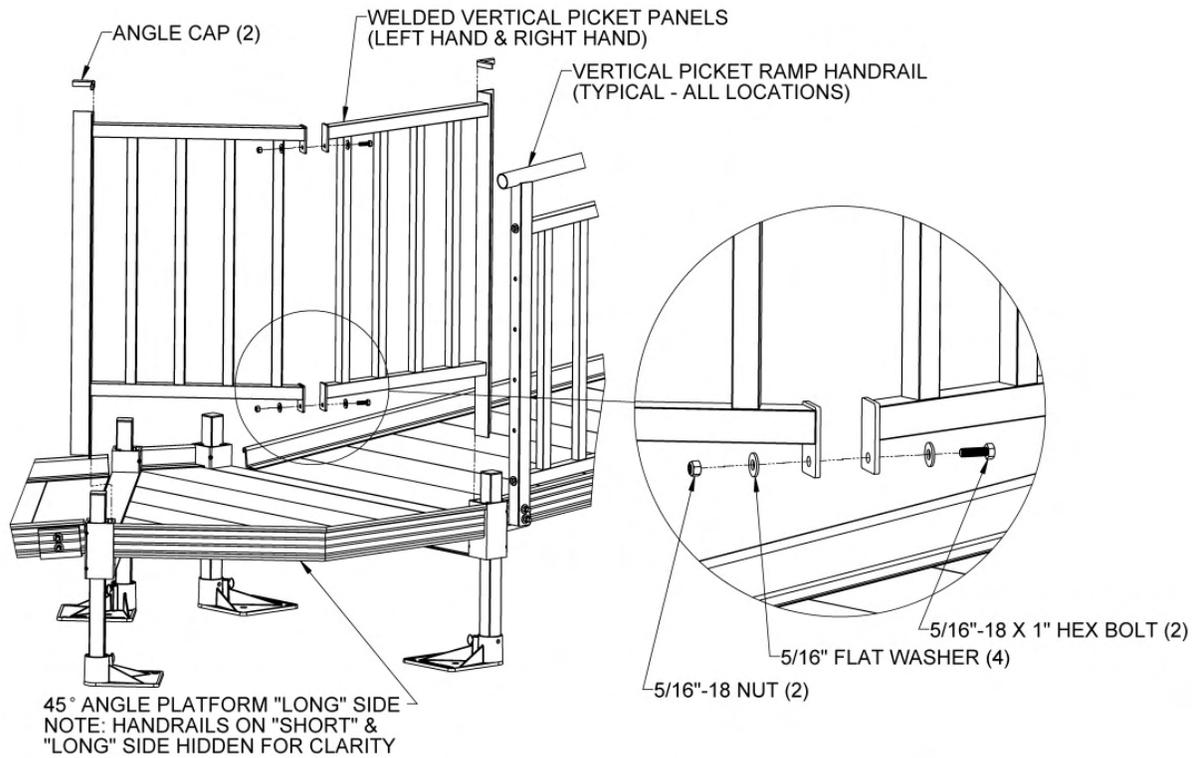


FIG. 4.17

- 4.6.21. Install an adjustable elbow in the ramp handrail closest to the right-hand Vertical Picket panel and a 1-1/2" diameter handrail tube to this elbow. Set the Handrail Support Bracket so it is centered over the picket shown and set the 1-1/2" diameter handrail tube in the saddle of the bracket (but do not attach), then trim the handrail tube so that a second adjustable elbow will align (approximately) with the split between the Vertical Picket panels (FIG. 4.18). The procedure for installing the 1-1/2" diameter handrail tubes and adjustable elbows is the same as the installing the closure top rail.

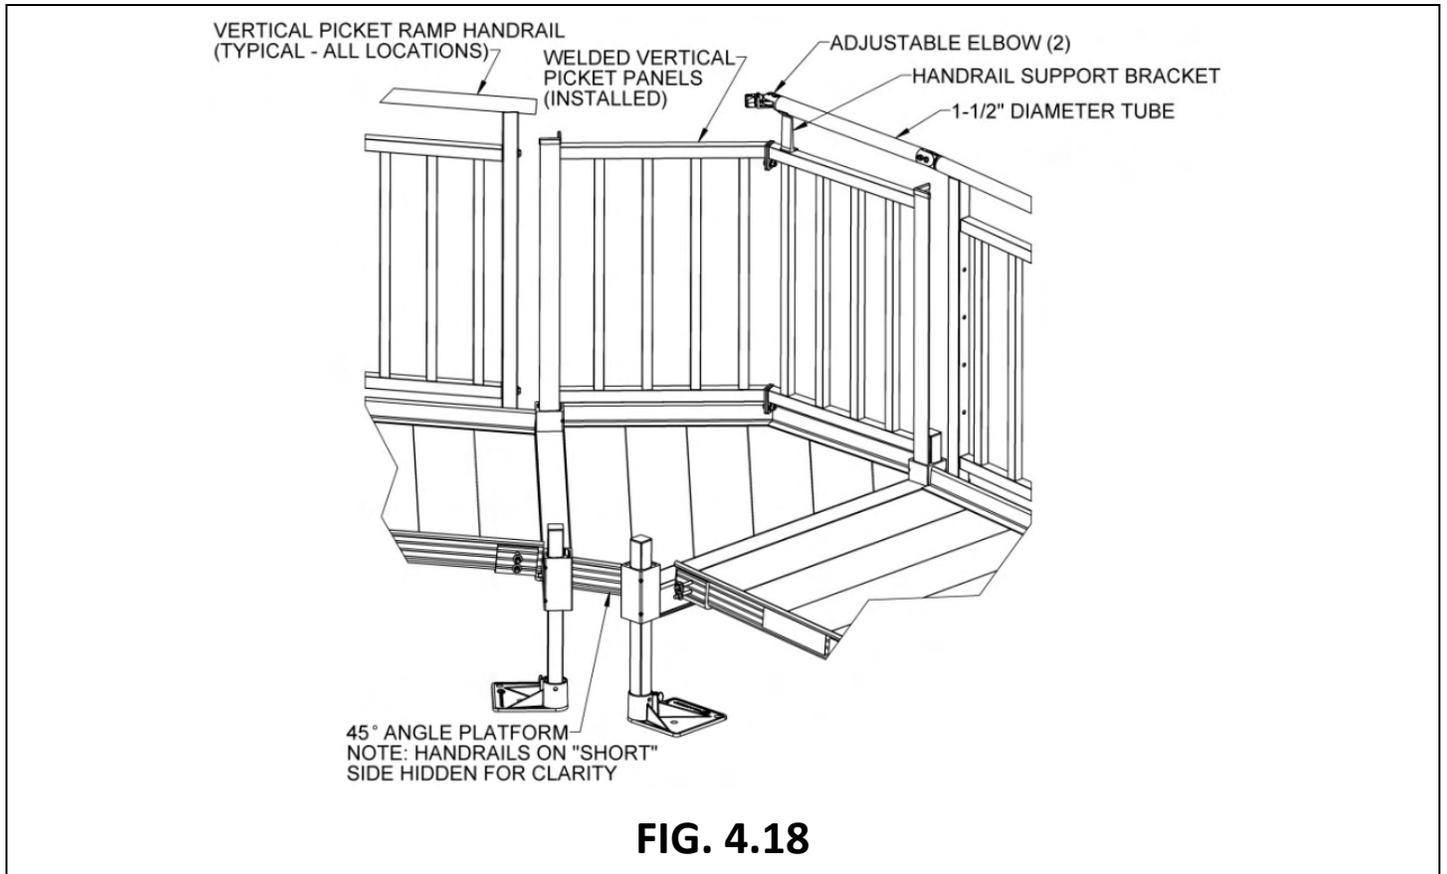

- 4.6.22. Install an adjustable elbow in the last open ramp handrail and align with the adjustable elbow at the split between the Vertical Picket panels. Measure the gap between the large round faces, cut a 1-1/2" diameter handrail tube to fit the gap, and install the handrail tube (FIG. 4.19). The procedure for installing the 1-1/2" diameter handrail tubes and adjustable elbows is the same as the installing the closure top rail.
- 4.6.23. Secure the Handrail Support Bracket to both the 1-1/2" diameter handrail tube and the top rail of the Vertical Picket panel using two #8-18 x 1/2" hex washer head self-drilling screws. Orient the attachment leg of the Handrail Support Bracket away from the platform as shown (FIG. 4.20).
- 4.6.24. Ensure all fasteners on both sides are tightened securely.

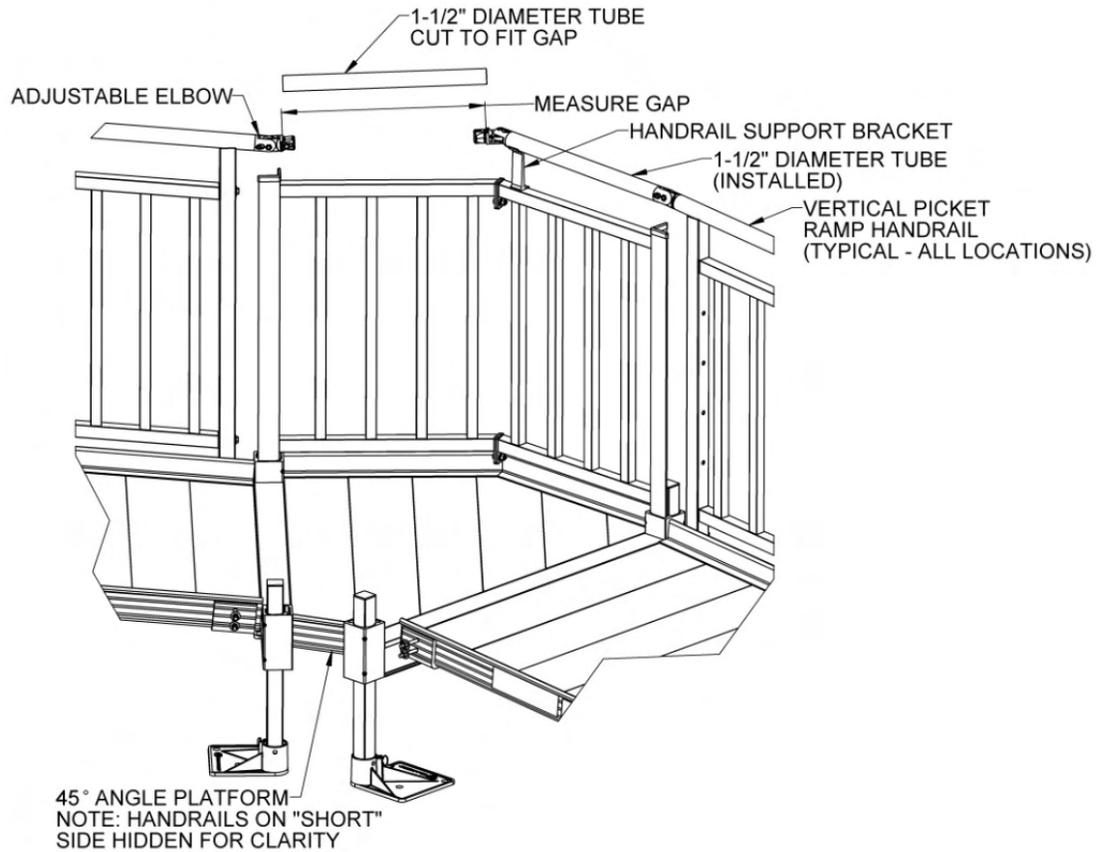


FIG. 4.19



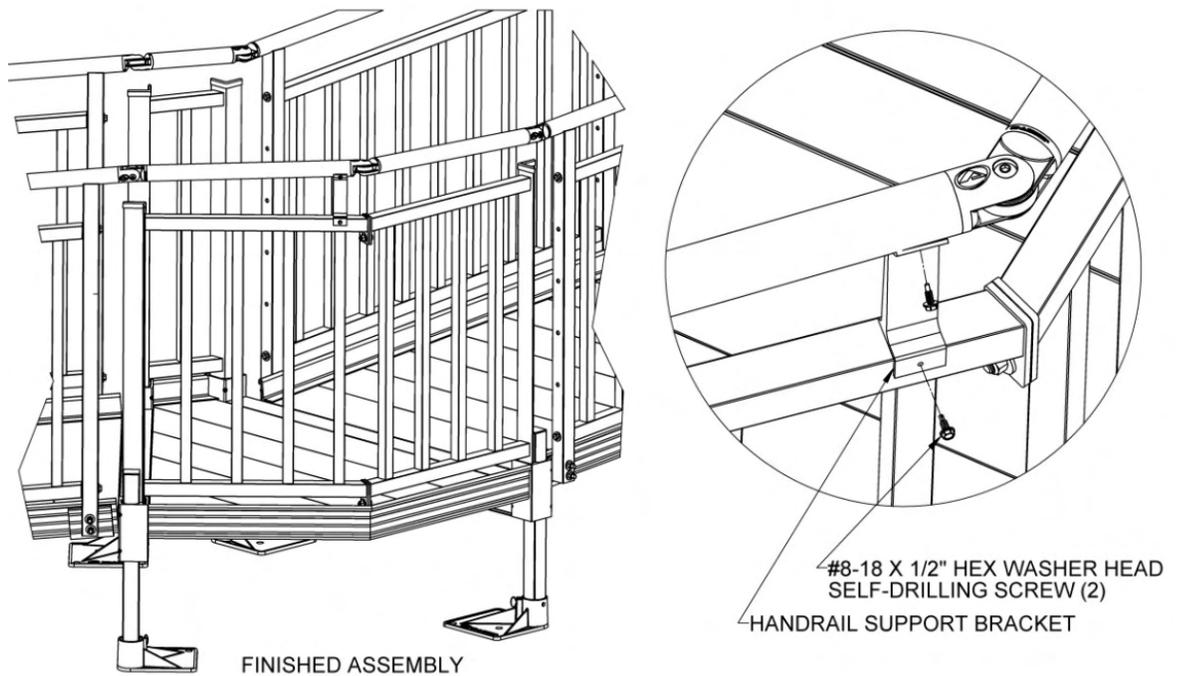


FIG. 4.20

5. CLOSURES

Closures fill the space between ramp handrails and platform posts. Like the ramp and platform handrails, they are available in Two-Line and Vertical Pickets. As a standard, the closures come with components which require the ramp to be mounted to one side or the other of a platform, but the ramp can also be centered or mounted in any location on a platform side except when using the Vertical Picket closure (refer to SECTION 5.6). When centering the ramp or mounting in a location other than the side, a second Two-Line closure must be ordered and is installed in the same manner as described below. When mounting to the side, the ramp handrail post should be positioned 1-1/2" (minimum) to 2" from the inside of the platform post. For all closures, the installation of the top rail is the same. Complete steps in this section to install the top rail. For the Two-Line complete steps 5.4.9 through 5.4.15 to install the curb and SECTION 5.5 to install the lower rail. If installing a Vertical Picket closure, skip to SECTION 5.6 after installing the top rail.

- 5.1. If installing a closure on a platform in the "straight" configuration, the 2" x 2" angle post will already be in place; skip to step 5.4
- 5.2. If installing on a platform in the 'turn' configuration, install the 2" x 2" angle post not attached to a platform handrail in the open platform corner pocket. Align the bottom of the post with the bottom of the corner pocket and tighten the set screws securely (FIG. 5.1).
- 5.3. Install an angle cap on top of the handrail post (FIG. 5.1). Use construction adhesive to bond the cap in place.
- 5.4. First install the top rail, the rail connecting the ramp handrail to the platform post.
 - 5.4.1. This procedure is the same regardless of the style of closure. Insert an adjustable elbow in the ramp handrail. Loosen the elbow assembly screws and position the round portion of the adjustable elbow so it is aligned with the upper hole in the angle post and the face is parallel to the post. Measure the gap between the face and the post (FIG. 5.2).

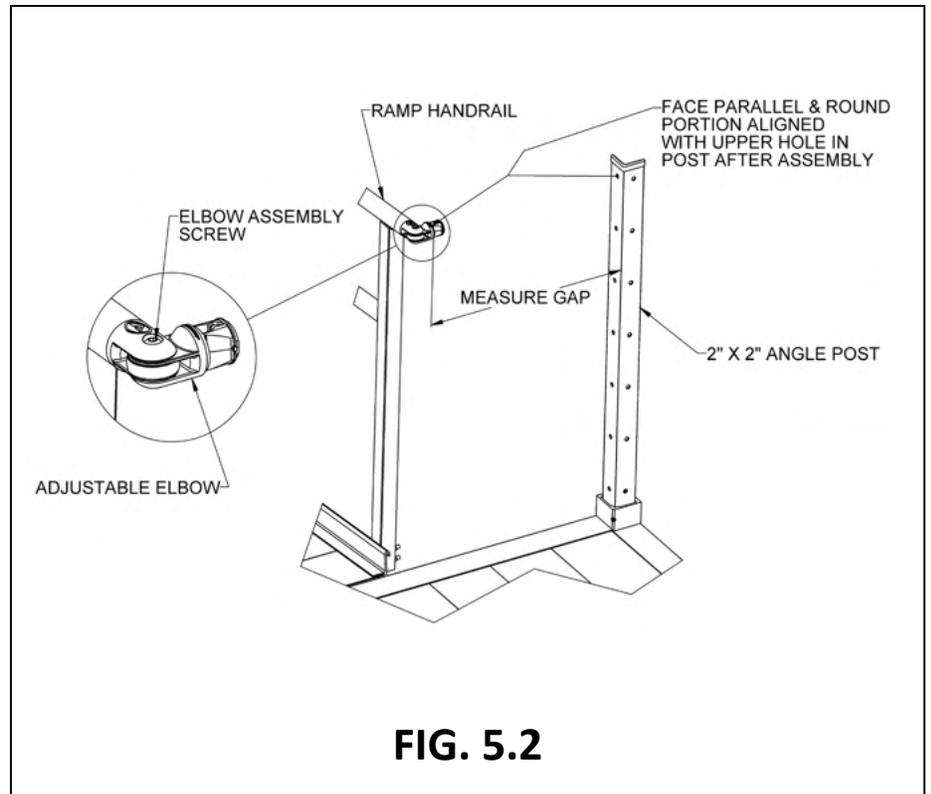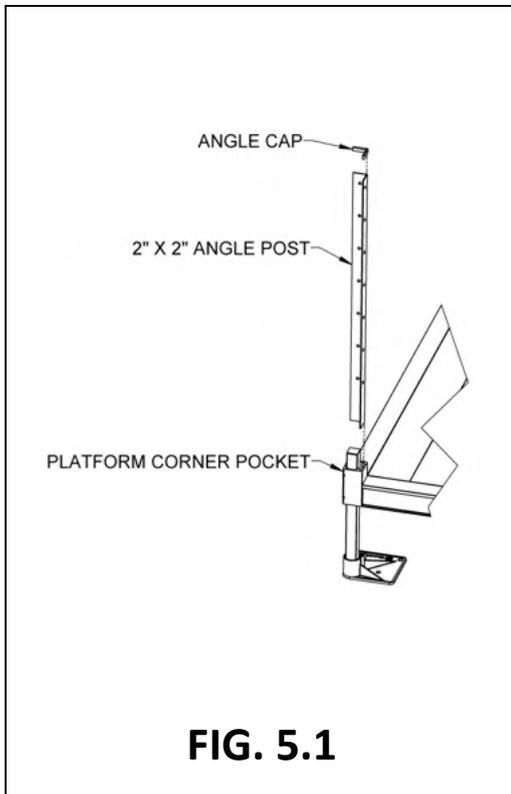

- 5.4.2. Cut the 1-1/2" diameter round tube to the length measured less 1/16" (FIG. 5.3).
- 5.4.3. Using a metal file, smooth any sharp edges from the cutting.
- 5.4.4. Disassemble the adjustable elbow by removing the screw, nut, and center insert (FIG. 5.4).
- 5.4.5. Install an elbow half into the end of the cut tube which will attach to the ramp handrail and a 5/16"-18 round threaded insert into the end which will attach to the post (FIG. 5.3).
- 5.4.6. Tighten internal set screws of the adjustable elbow (FIG. 5.4).

FIG. 5.3





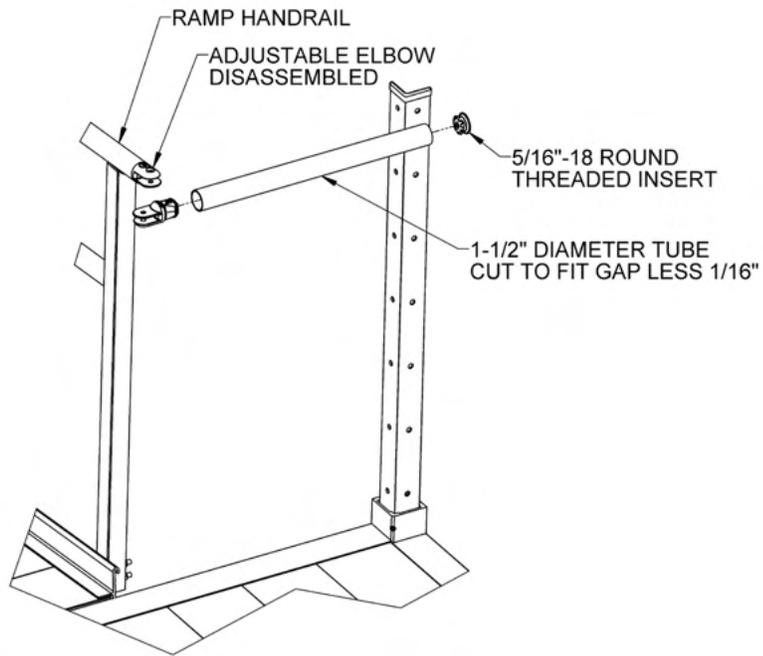


FIG. 5.4

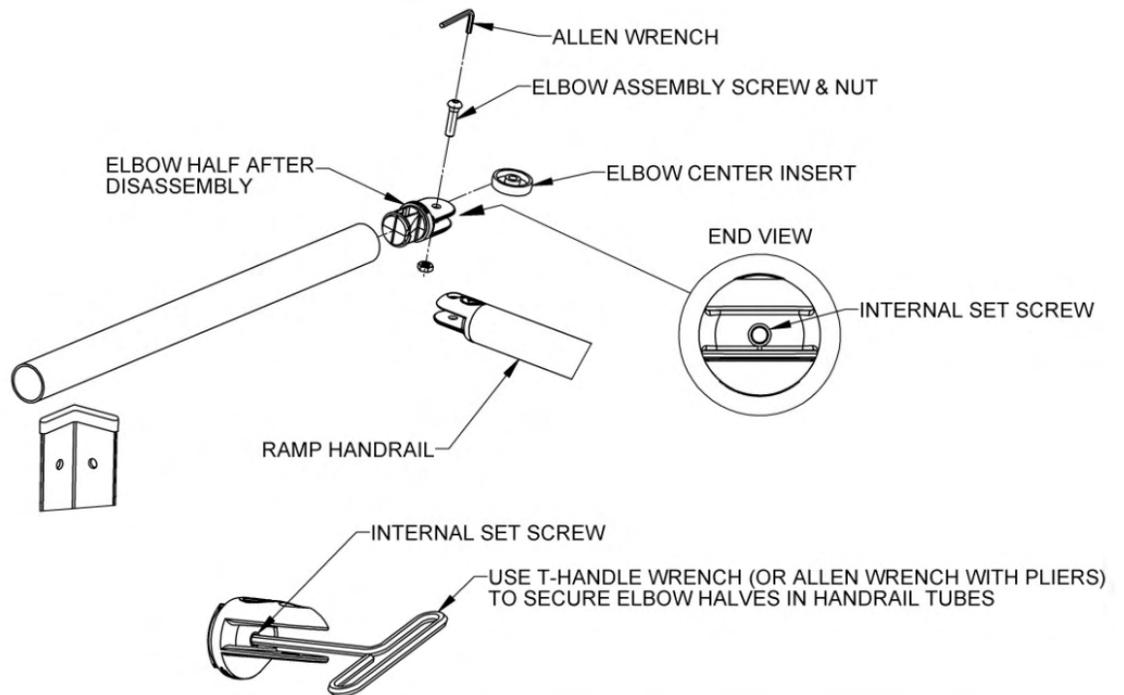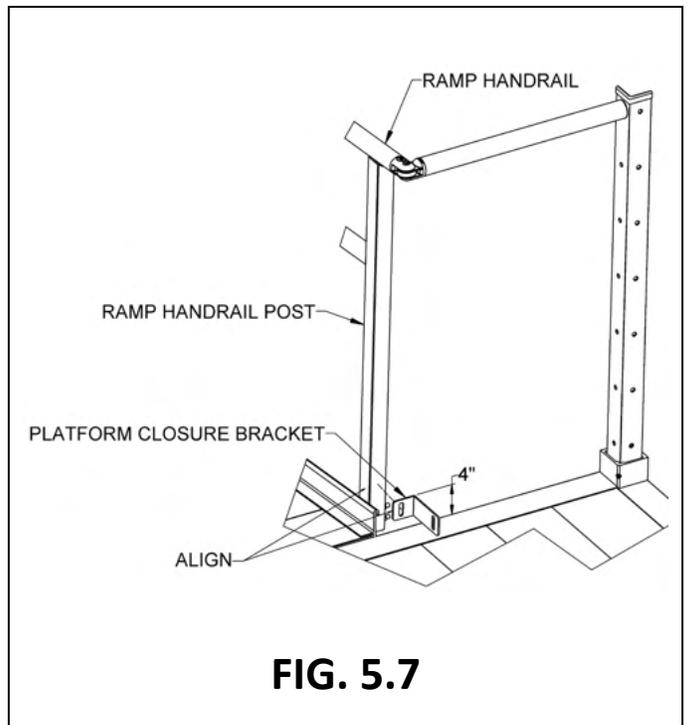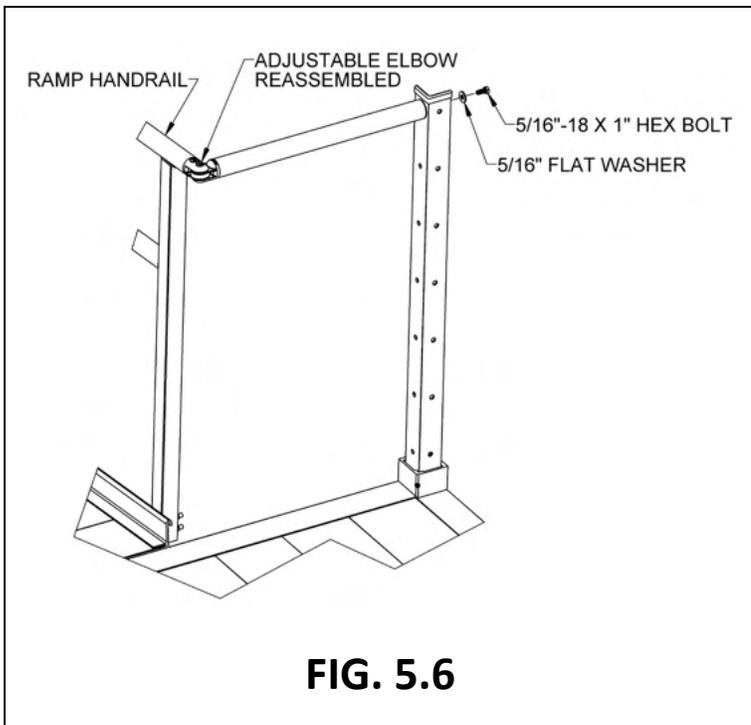

- 5.4.7. Reassemble elbow by replacing center insert and securing with screw and nut (FIG. 5.5).
- 5.4.8. Install a 5/16"-18 x 1" hex bolt through a 5/16" flat washer and the upper hole in the angle post into the 5/16"-18 round threaded insert (FIG. 5.6), then tighten all fasteners securely
- 5.4.9. Test to ensure elbow is properly secured and attached. If needed, tighten internal set screws to secure more rigidly.
- 5.4.10. Once the top rail is in place, install the 1-1/2" x 2" curb.
- 5.4.11. Locate a platform closure bracket and clamp the short leg of the bracket to the ramp handrail post 4" above the platform deck with the short leg aligned with the post. Orient the bracket so the long leg is on the same side as and parallel to the platform post (FIG. 5.7).

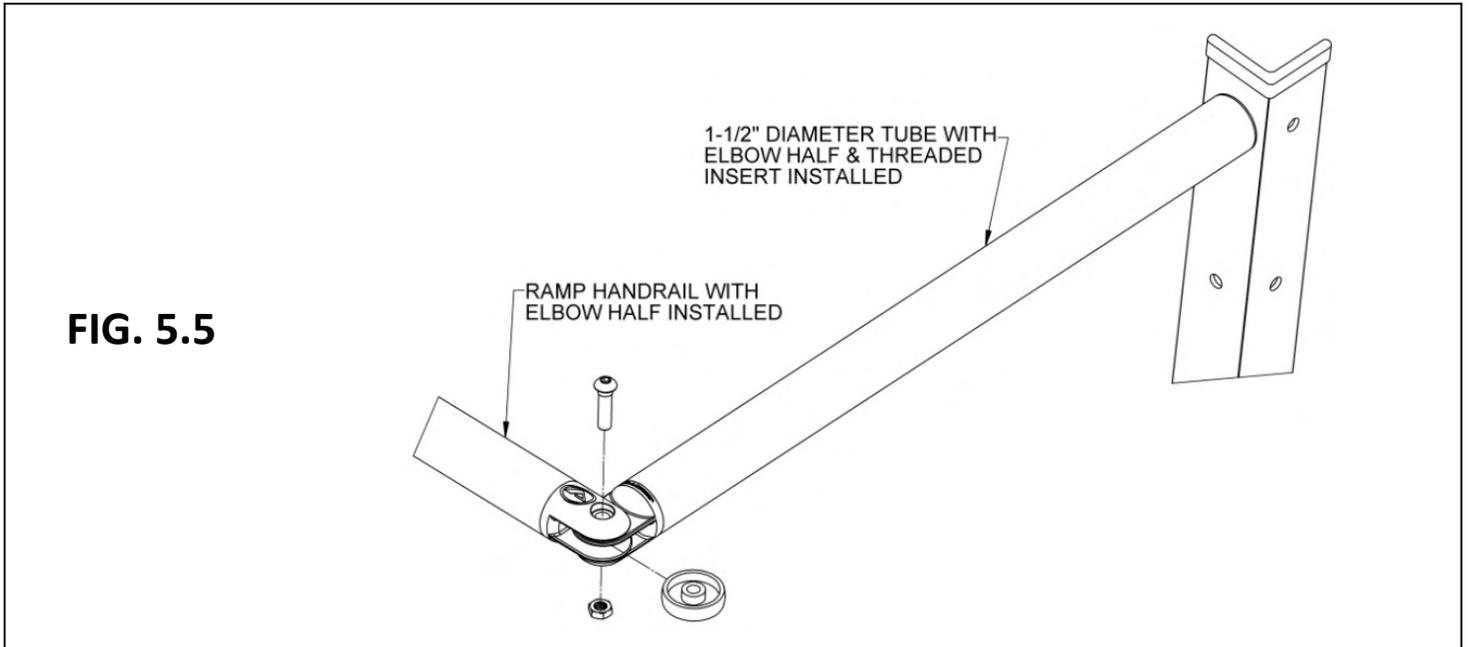

- 5.4.12. Measure the gap between the long leg of the bracket and the post then cut the 1-1/2" x 2" curb to the measured length, less 1/8" to account for the threaded inserts which will be installed after cutting (FIG. 5.8).
- 5.4.13. Insert 5/16"-18 square threaded inserts into both ends of the curb. Use a rubber mallet or similar tool to fully seat the threaded inserts as needed (FIG. 5.8).
- 5.4.14. Install 5/16"-18 x 1" hex bolts through a 5/16" flat washers, the long leg of the closure bracket, and the platform post into the 5/16"-18 round threaded inserts installed in the curb. Use the hole which is 1/2" above the lowermost hole in the platform post to align the curb correctly (FIG. 5.9).
- 5.4.15. Unclamp the closure bracket and drive a 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screw, centered in the slot, through the platform closure bracket and into the ramp handrail post (FIG. 5.9). Tighten securely but use caution not to overtighten and strip the threads.
- 5.4.16. Ensure all fasteners are tightened securely.

FIG. 5.8





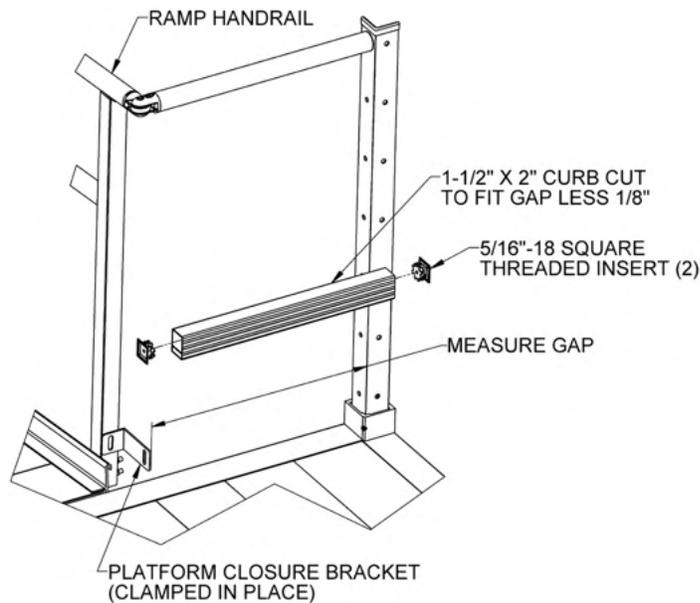


FIG. 5.9

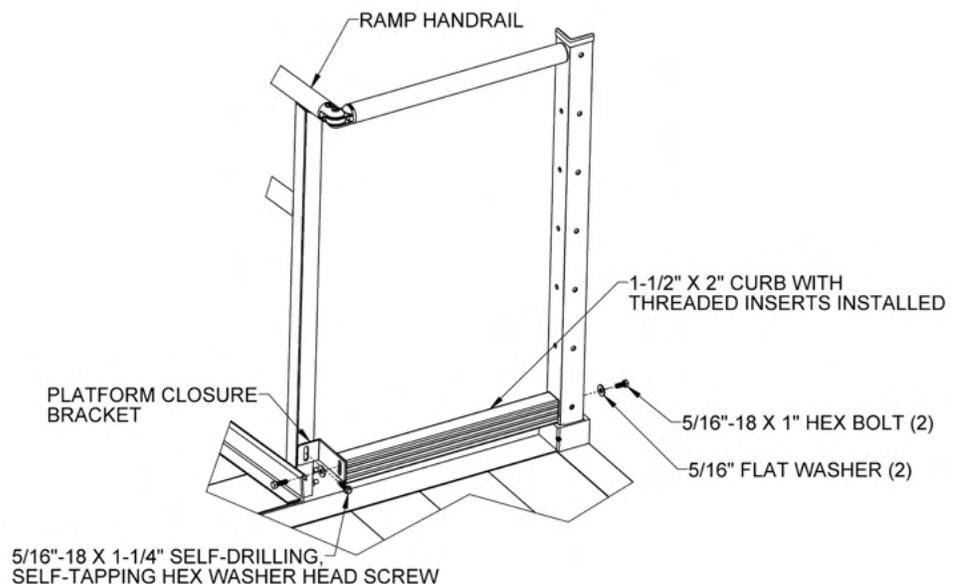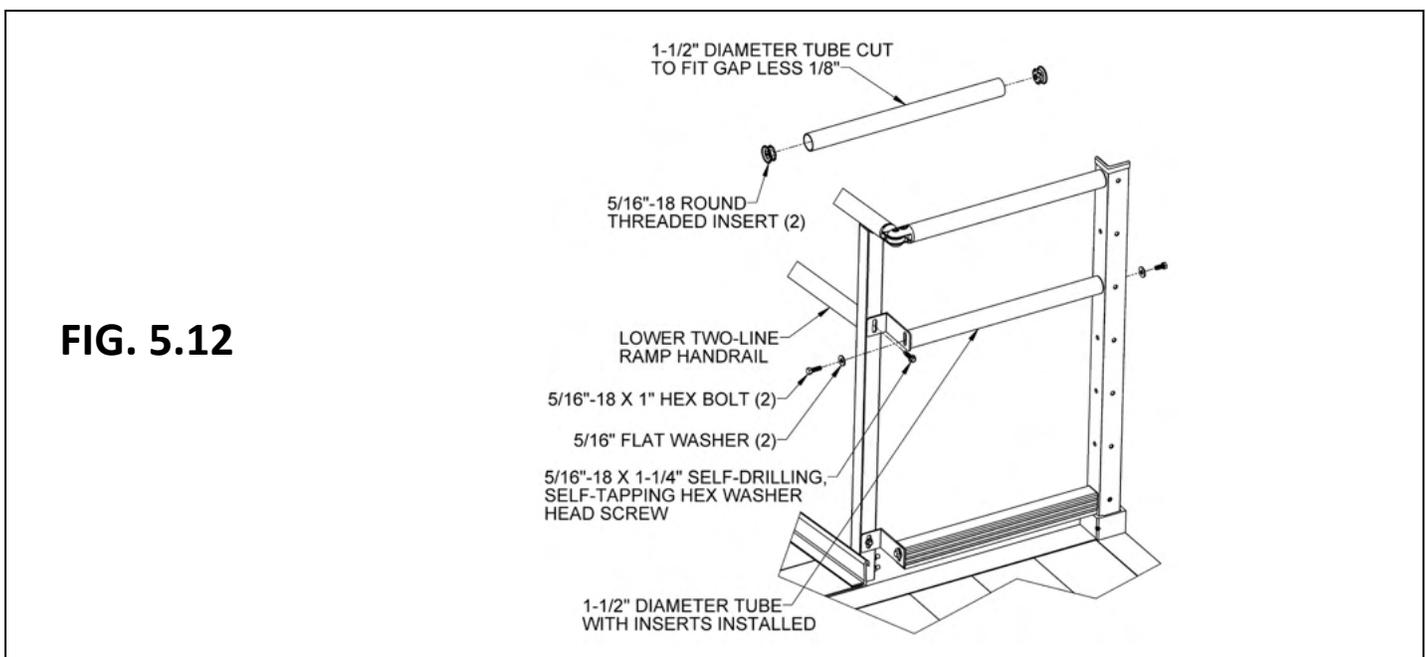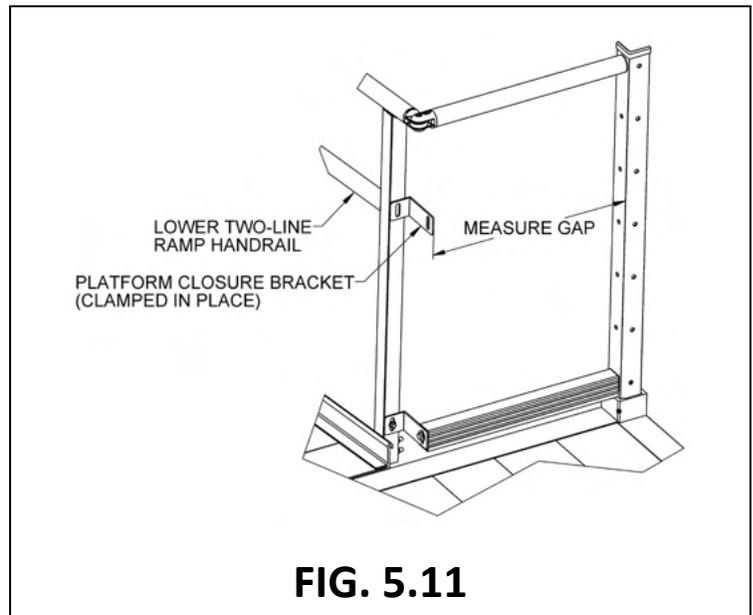

5.5. TWO-LINE CLOSURE

- 5.5.1. Clamp the platform closure bracket to the ramp handrail post such that short leg is centered on the lower two-line ramp handrail and aligned with the post. Orient the bracket so the long leg is on the same side as and parallel to the platform post (FIG. 5.10).
- 5.5.2. Measure the gap between the long leg of the closure bracket and platform post (FIG. 5.11).
- 5.5.3. Cut the 1 1/2" diameter round tube to the measured gap length less 1/8" to account for the threaded inserts which will be installed after cutting (FIG. 5.12).
- 5.5.4. Using a metal file, smooth all sharp edges from cutting the round tube.
- 5.5.5. Install 5/16"-18 round threaded inserts into both ends of the cut tube. Use a rubber mallet or similar tool to fully seat the threaded inserts (FIG. 5.12).
- 5.5.6. Install 5/16"-18 x 1" hex bolts through a 5/16" flat washers and the slot in the long leg of the closure bracket and the third hole from the top of the platform post into the threaded inserts installed in the previous step then tighten all fasteners securely (FIG. 5.12).
- 5.5.7. Unclamp the closure bracket and drive a 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screw, centered in the slot, through the platform closure bracket and into the ramp handrail post (FIG. 5.12). Tighten securely but use caution not to overtighten and strip the threads.

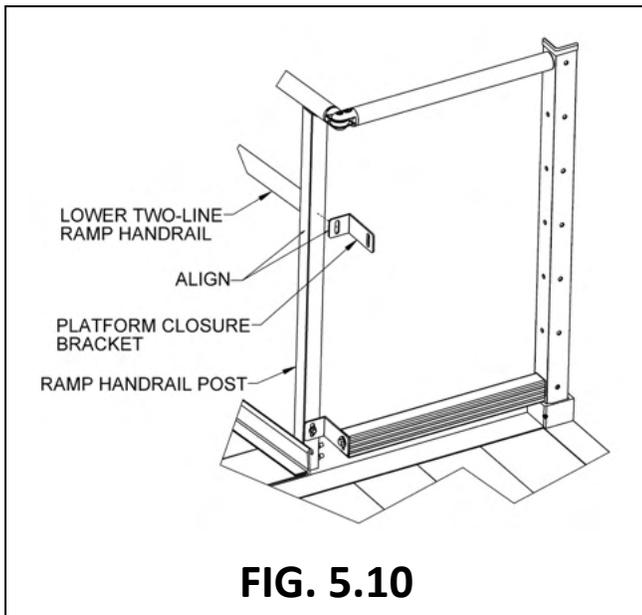

5.6. VERTICAL PICKET CLOSURE

- 5.6.1. Vertical Picket closures are specific to the platform size (4', 5' and 6') and come in two pieces which allow the ramp to be mounted to one side or be centered on a platform.
- ✎ If the ramp is to be centered on a platform, additional components are needed. The additional components will come with the closure if specified at the time of order, but the closure can be converted to allow the ramp to be centered in the field by ordering a second set of hardware.
- 5.6.2. Bolt the two Vertical Picket closure sections together using 5/16"-18 x 3/4" long hex bolts, 5/16" flat washers, and 5/16"-18 nuts (FIG 5.13).
- 5.6.3. Insert 1-1/4" square tube plugs in the open ends of the top and bottom rails on one side. If the ramp will be centered, do not assemble. Insert 1-1/4" square tube plugs in all open ends which do not attach to a platform post.
- ✎ The 4' closure includes angles (rather than channels) on one side to allow access to the assembly fasteners. Always bolt the 4' closure together using the side with the angles and attach the side with the channel to the platform post (FIG. 5.14).

FIG. 5.13


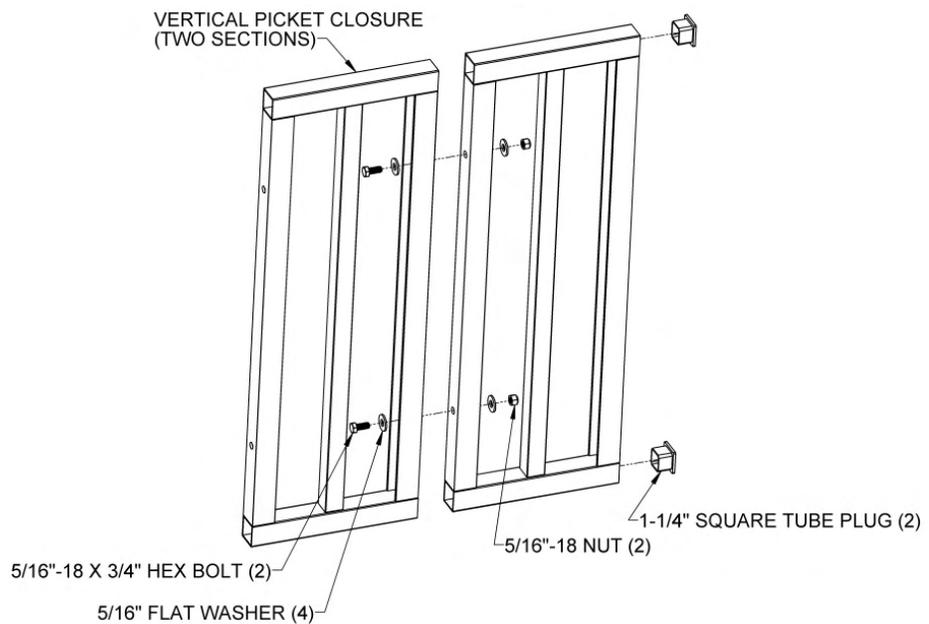


FIG. 5.14

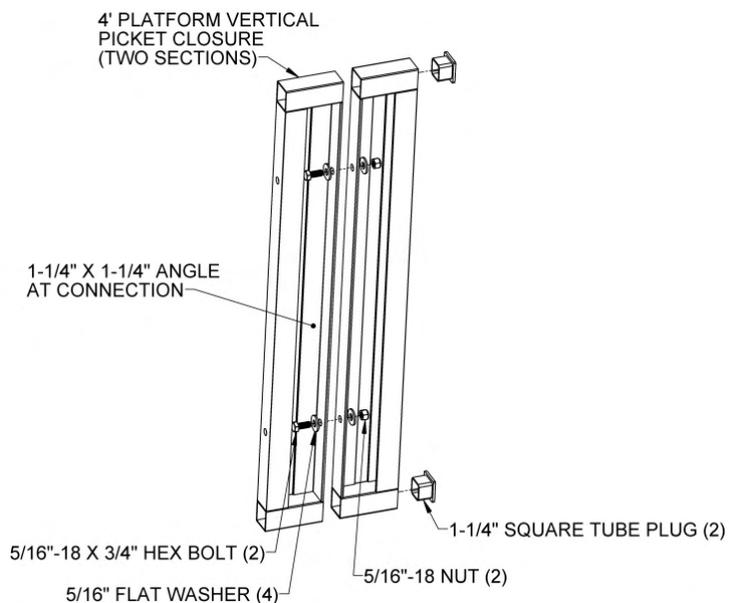

- 5.6.4. Attach the Vertical Picket closure to the platform handrail post using 5/16"-18 x 3/4" long hex bolts, 5/16" flat washers and 5/16"-18 nuts (FIG. 5.15). When centering the ramp, attach one section (unassembled) to the platform posts on both sides of the ramp and secure in the same manner.
- 5.6.5. Clamp the closure brackets to the ramp handrail post such that the long leg is in contact with and centered on the upper and lower holes in the Vertical Picket closure (FIG. 5.16).
- 5.6.6. Install a 5/16"-18 x 1" hex bolt through a 5/16" flat washer, the slot in the long leg of the closure bracket, and the holes in the Vertical Picket closure. Use 5/16" flat washers and 5/16"-18 nuts to attach then tighten all fasteners securely (FIG. 5.17).
- 5.6.7. Unclamp the closure brackets and drive a 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screw, centered in the slot, through the platform closure bracket and into the ramp handrail post (5.17). Tighten securely but use caution not to overtighten and strip the threads.
- 5.6.8. Repeat steps 5.6.5 through 5.6.7 on the opposite side when centering the ramp.

FIG. 5.15

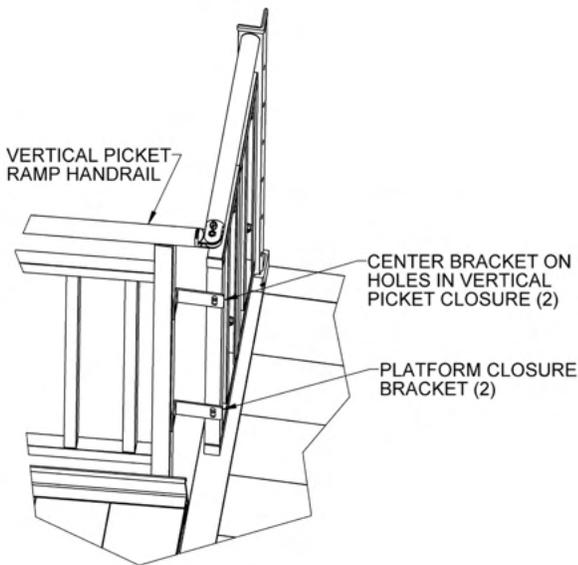
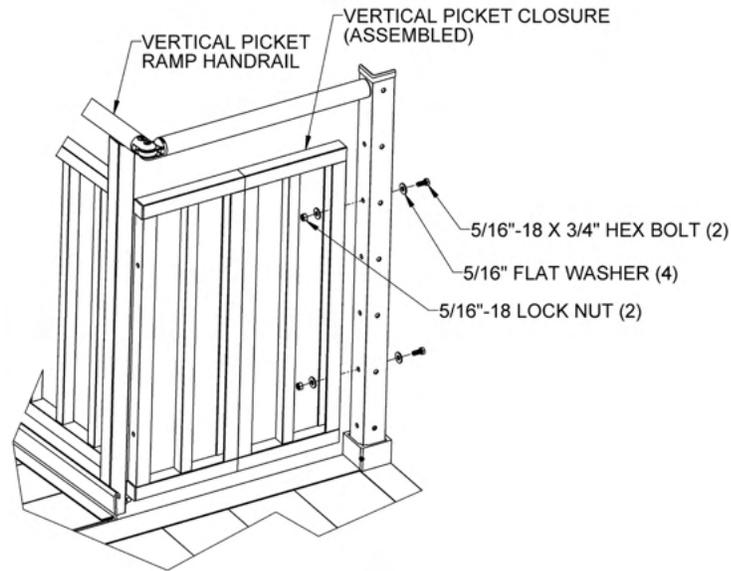


FIG. 5.16



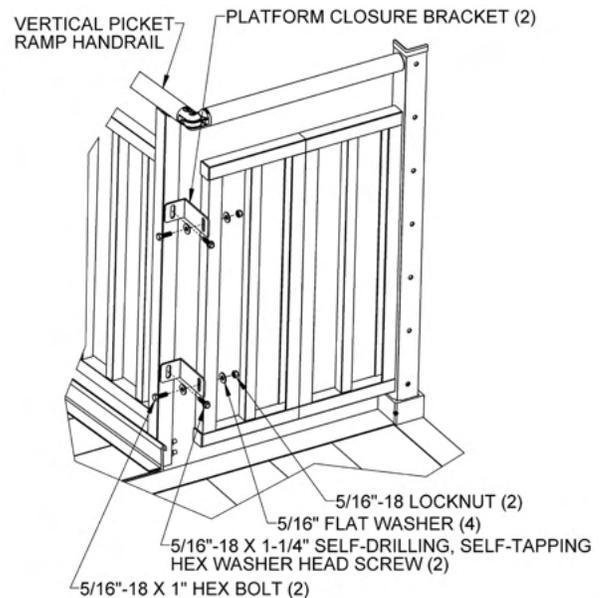


FIG. 5.17

5.7. TWO-LINE TURN BACK CLOSURE

- 5.7.1. There are two special closures available for filling the space between two ramps in a turn back configuration. The Two-Line Turn Back Closure can be used with platforms of any size but the 8' x 5' Vertical Picket Closure can only be used with the 8' x 5' platform. Turn back closures can also be created using the methods described in the preceding sections by attaching the components to platform posts between the ramps rather than directly from ramp handrail to ramp handrail.
- 5.7.2. Regardless of style, first connect the ramp handrails by installing adjustable elbows in the ramp handrails. Loosen the elbow assembly screws and position the adjustable elbows so they are aligned with the elbow on the opposite side (but do not tighten), and then measure the distance between the two larger round faces (FIG. 5.18).
- 5.7.3. Cut a 1-1/2" diameter round tube to the measured gap (FIG. 5.18).
- 5.7.4. Using a metal file, smooth all sharp edges from cutting the round tubes.
- 5.7.5. Disassemble the adjustable elbows by removing the screw and nut (FIG. 5.4).
- 5.7.6. Install an elbow half into each end of the cut tube (FIG. 5.4).
- 5.7.7. Tighten the internal set screw using an Allen wrench or similar tool (FIG. 5.4).
- 5.7.8. Reassemble the elbows by replacing center insert and securing with the screw and nut (FIG. 5.5).
- 5.7.9. Test to ensure all elbows are properly secured and attached. If needed, tighten internal set screw in the closure elbow to secure more rigidly.
- 5.7.10. Orient the platform closure brackets so the long leg is on the same side as and parallel to the bracket on the opposite side, the short leg is aligned with the ramp handrail post and the tops of the brackets are 4" above the platform deck. Clamp in place temporarily if needed (FIG 5.19).
- 5.7.11. Drive 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screws, centered in the slot, through the platform closure brackets and into the ramp handrail posts (FIG. 5.19). Tighten securely but use caution not to overtighten and strip the threads.

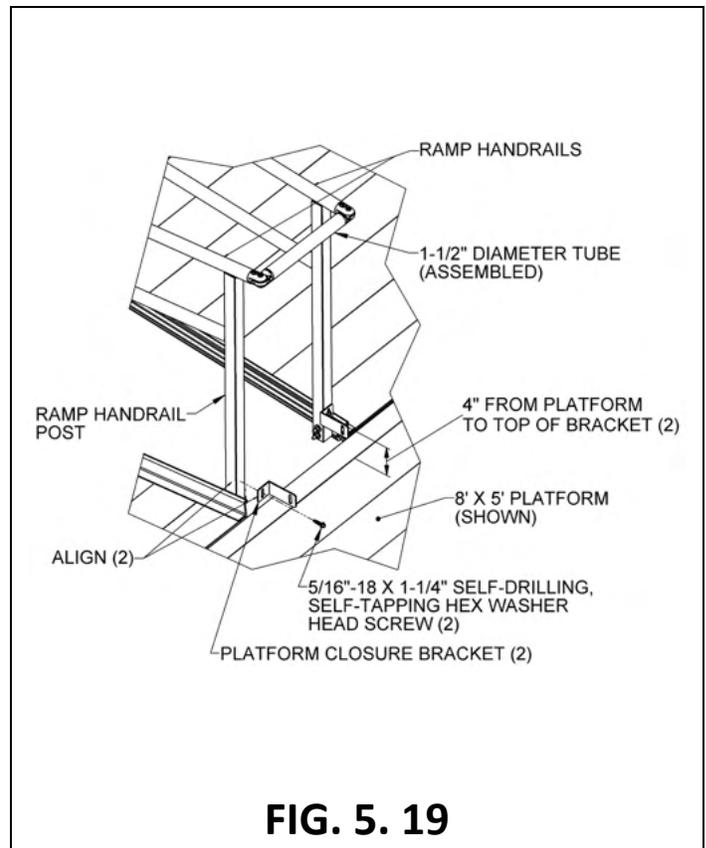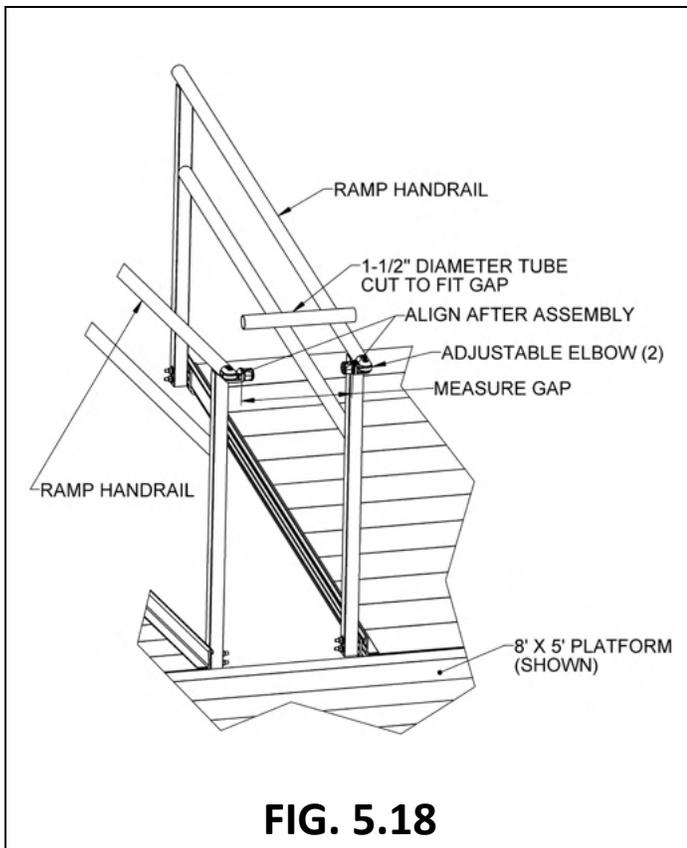

- 5.7.12. Measure the gap between the long leg of the closure brackets and cut the 1-1/2" x 2" curb to the measured gap length less 1/8" to account for the threaded inserts which will be installed after cutting (FIG. 5.20).
- 5.7.13. Install 5/16"-18 square threaded inserts into both ends of the cut curb. Use a rubber mallet or similar tool to fully seat the threaded inserts (FIG. 5.20).
- 5.7.14. Using a metal file, smooth all sharp edges from cutting the curb.
- 5.7.15. Align the top of the curb with the top of the closure brackets, then install 5/16"-18 x 1" hex bolts through 5/16" flat washers and the slot in the long leg of the closure bracket, into the threaded insert installed in the previous step (FIG. 5.21). Tighten all fasteners securely.

FIG. 5.20


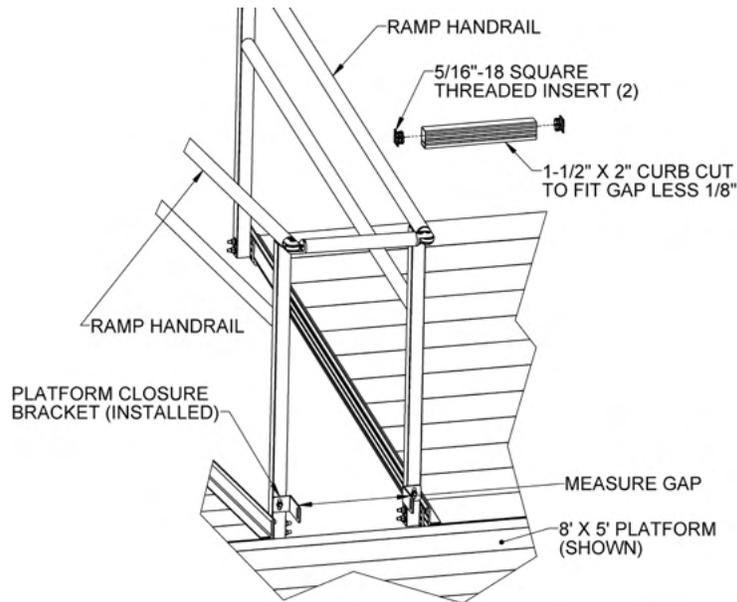


FIG. 5.21

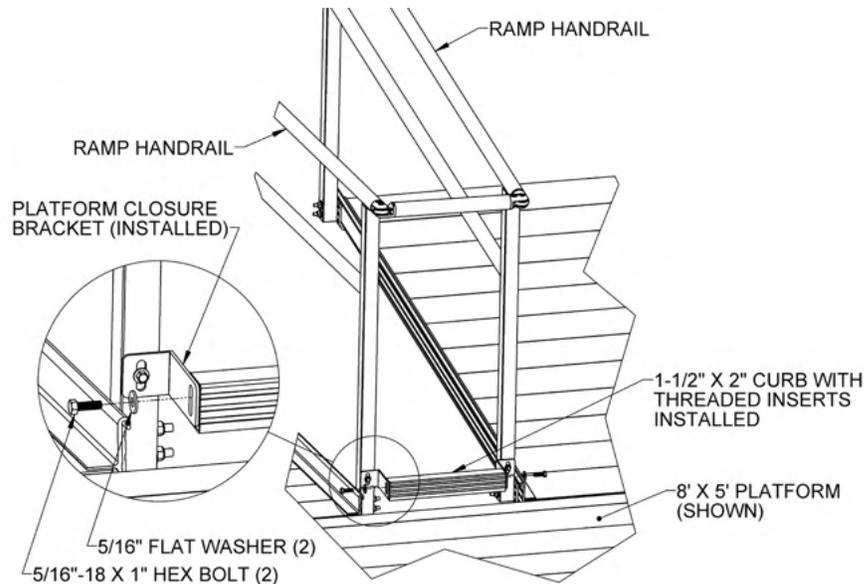

- 5.7.16. If installing a Two-Line Turn Back Closure, a second 1-1/2" diameter round tube is installed in the same manner as the curb at the bottom. Orient the brackets so the long leg is on the same side as and parallel to the bracket on the opposite side, the short leg is aligned with the ramp handrail post and the tops of the brackets are 20 1/2" above the tops of the brackets attaching the curb. Clamp in place temporarily if needed (FIG. 5.22).

- 5.7.17. Drive 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screws, centered in the slot, through the platform closure brackets and into the ramp handrail posts (FIG. 5.22). Tighten securely but use caution not to overtighten and strip the threads.
- 5.7.18. Measure the gap between the long leg of the closure brackets, cut the 1-1/2" dia. tube to the measured gap length less 1/8" and install 5/16"-18 round threaded inserts in the ends of the tube as described previously (FIG. 5.22).
- 5.7.19. Attach 1-1/2" dia. tube with 5/16"-18 round threaded inserts installed to the brackets using 5/16"-18 x 1" hex bolts through 5/16" flat washers and tighten securely (FIG. 5.22).
- 5.7.20. The 8' x 5' Vertical Picket Closure can only be used with the 8' x 5' platform. Set the base of the 8' x 5' Vertical Picket Closure on the platform side rail then drive 5/16"-18 x 1-1/4" self-drilling, self-tapping hex washer head screws, centered in the slots of the closure brackets, through the brackets and into the ramp handrail posts (FIG. 5.23). Tighten securely but use caution not to overtighten and strip the threads.
- 5.7.21. Attach the base of the 8' x 5' Vertical Picket Closure to the platform side rail using four 1/4" x 1" long self-drilling screws (FIG. 5.23).

FIG. 5.22


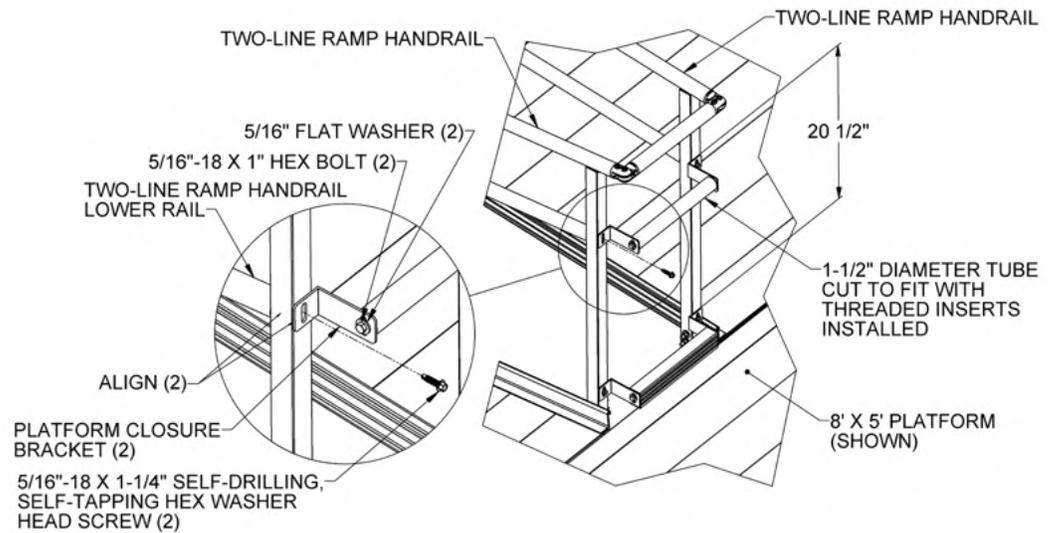





FIG. 5.23

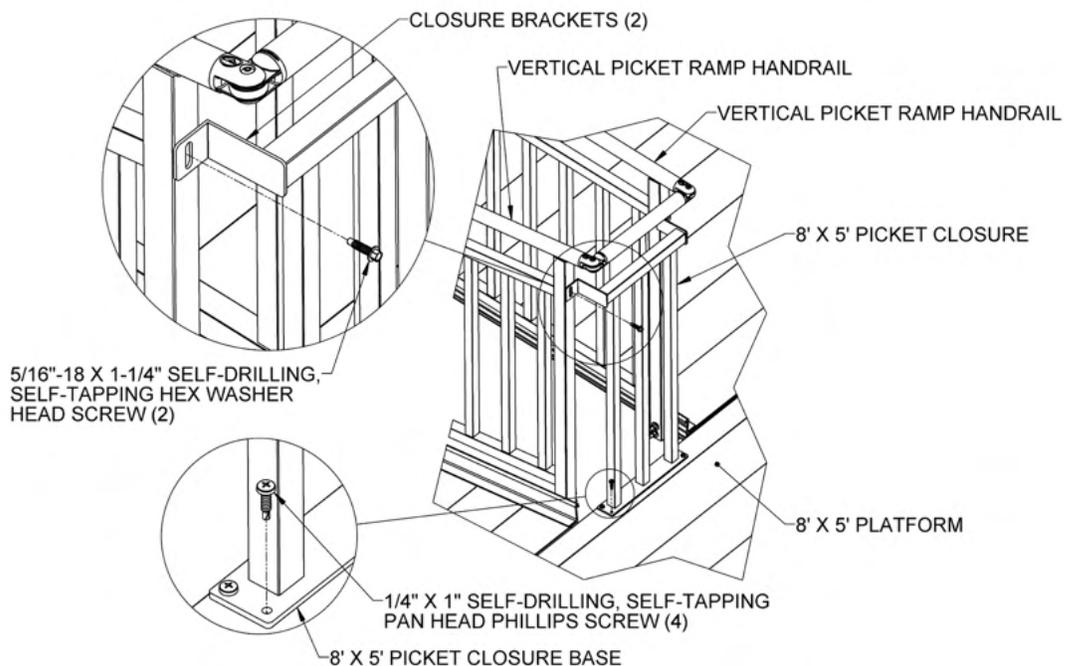

6. FINAL PLATFORM/RAMP STEPS AND CHECKS

6.1. SECURE RAMP TO PLATFORM

- 6.1.1. Once positioning of all ramps and platforms, and installation of all handrails, connectors, and end loops are complete, you will need to secure ramps to platforms with Ramp End Clips (included in PRHP - RAMP HANGER PAIR).
 - ▲ Use two Ramp End Clips at all locations where ramps meet platforms.
- 6.1.2. Position each Ramp End Clip with the hole pointing up and oriented as shown (FIG. 6.1), then insert the short end of the Ramp End Clip into small gap between the ramp and the platform in the area where the ramp side rail overlaps the ramp end tread (FIG. 6.1).
- 6.1.3. Before the Ramp End Clip contacts the ramp side rail, rotate the Ramp End Clip so the short end extends into the recess under the ramp end tread (FIG. 6.1).
- 6.1.4. Use the hole in the Ramp End Clip as a template to drill 1/8" pilot hole in the platform side rail, then use the 1/4" x 1" long self-drilling screws to secure the Ramp End Clip to the platform side rail (FIG. 6.2).
- 6.1.5. Top view of the completed process (FIG. 6.3).

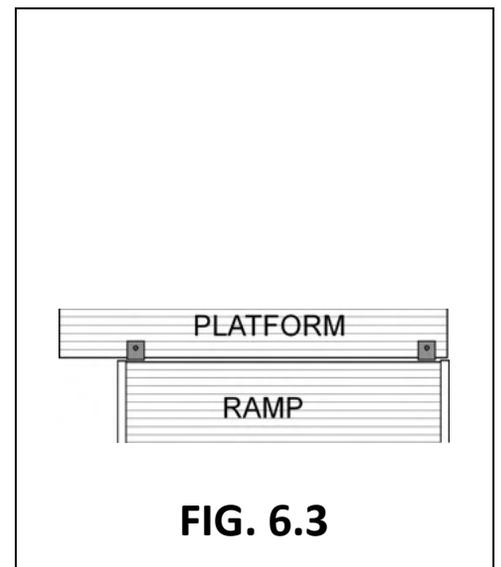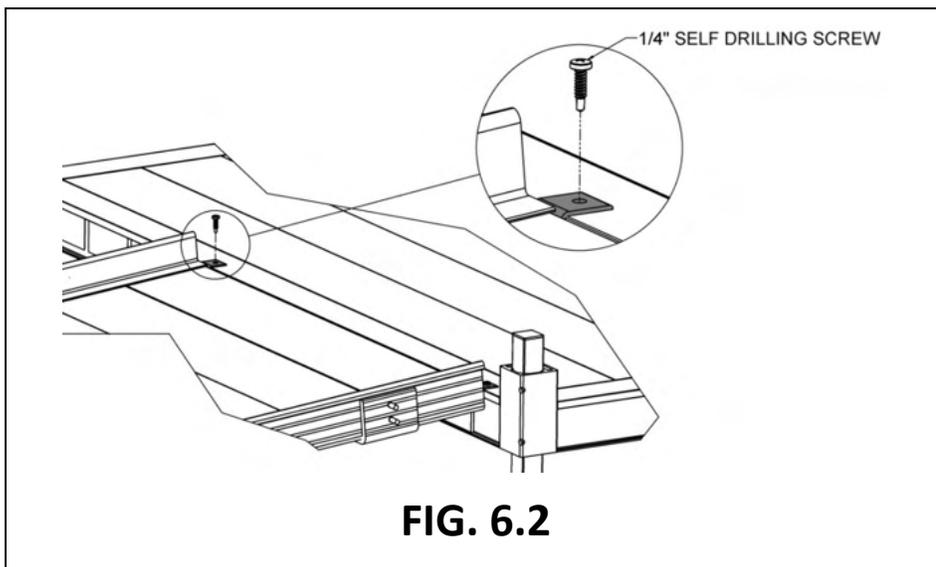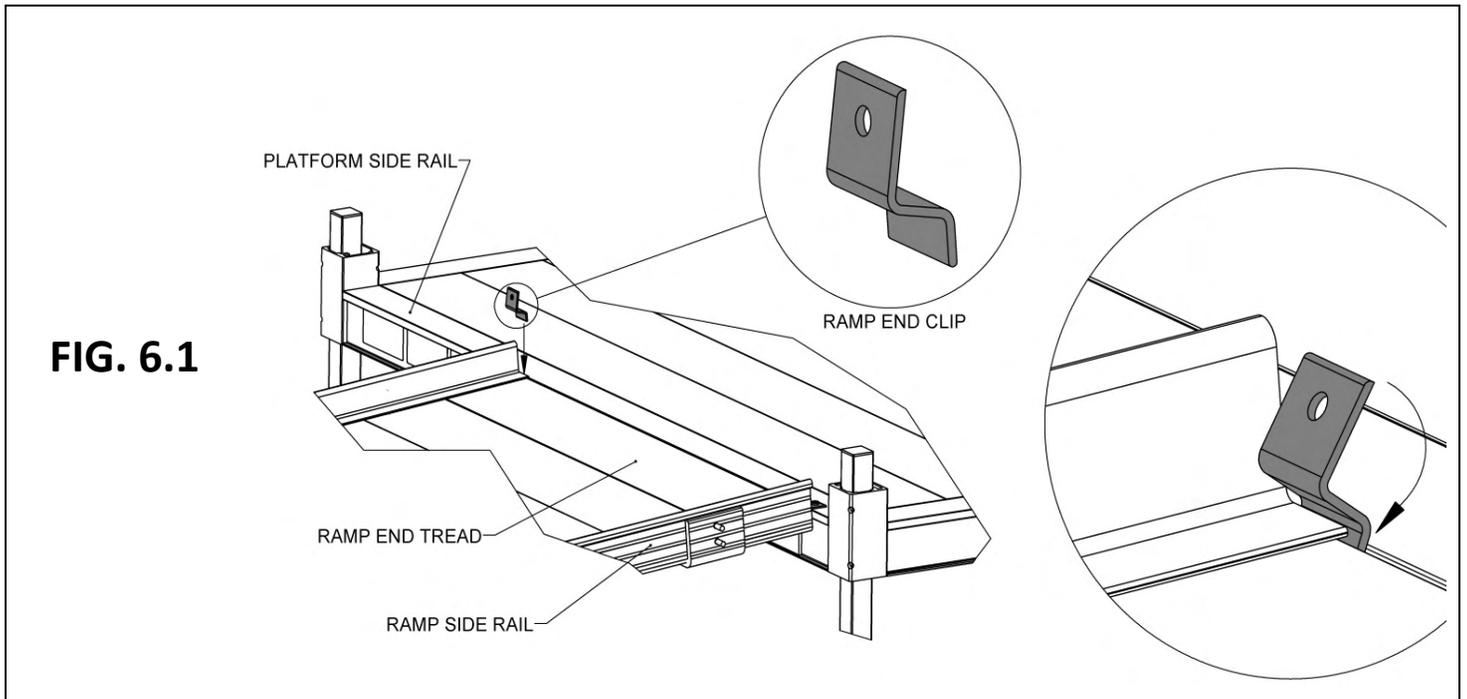

6.2. INSTALL RAMP HANDRAIL END LOOPS

- 6.2.1. The system may include end loops (FIG. 6.4). Upper and lower end loops are installed in the same manner. If the end loop being installed doesn't fit correctly (i.e., the attachment plate is angled the wrong direction, the lower leg seems too long or short, etc.), you are most likely trying to install it on the wrong end of the ramp or ramp run.
- 6.2.1.1. Install the o-ring over the swaged portion of the end loop until it rests against the loop shoulder (FIG. 6.5).
- 6.2.1.2. Install one 1/4" x 1" long hex washer head self-drilling screw through the hole in the end loop attachment plate into the ramp handrail post and tighten securely (FIG. 6.6).

FIG. 6.4

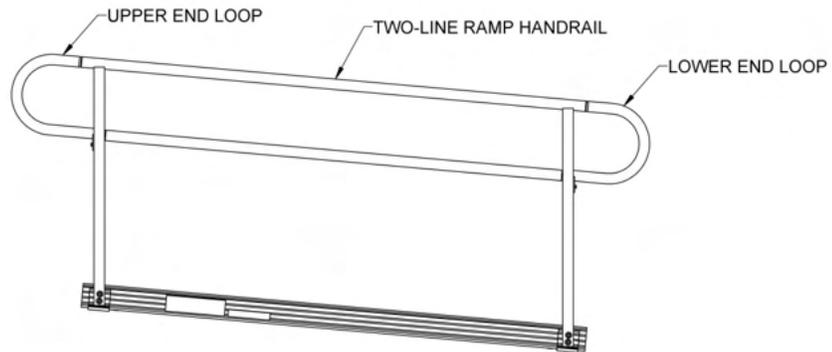


FIG. 6.5


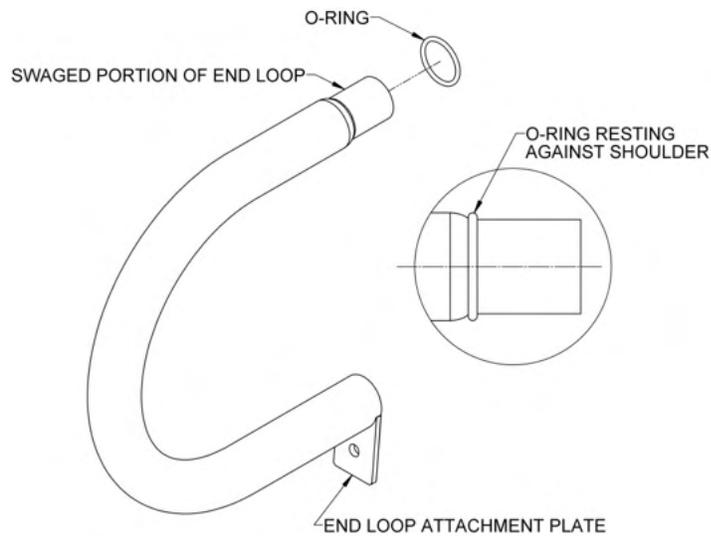


FIG. 6.6

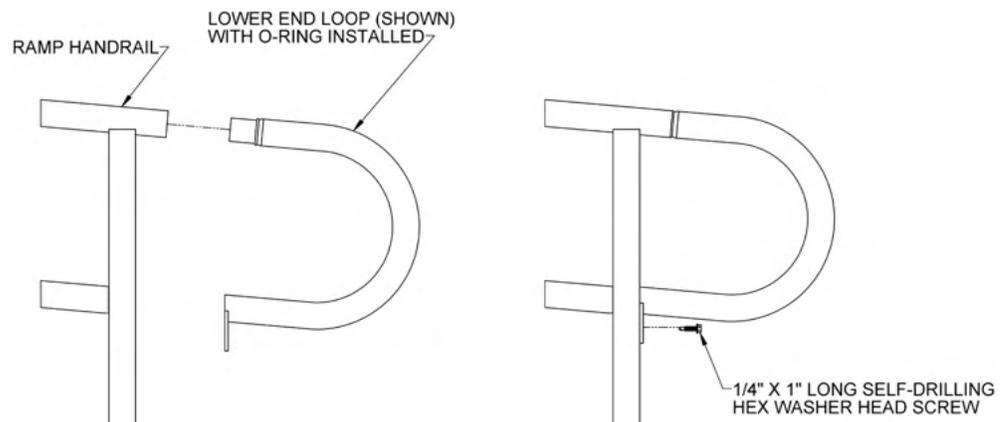

6.3. INSTALL RAMP HANDRAIL END CAPS

- 6.3.1. Use plastic end caps when there are any remaining open ends on the handrails (FIG. 6.7). Use a rubber mallet or similar tool to fully seat as needed. If necessary, use construction adhesive to bond the cap to the ramp handrail.

6.4. INSTALL RAMP CORNER PROTECTORS




- 6.4.1. Install protective caps over side rail corners by placing one cap on each side at both the top and bottom of the ramp or ramp run (FIG. 6.8). If necessary, use construction adhesive to bond the cap to the ramp.

6.5. TOUCH-UP ARCHITECTURALLY FINISHED HANDRAILS

- 6.5.1. As needed, use sandpaper (180 grit or equivalent) for blending scratches on architecturally finished handrails. Sand in direction of the grain as shown (FIG. 6.9).
✎ Do not use on painted or powder coated surfaces.

6.6. FINAL CHECKS

- 6.6.1. Ensure that all fasteners are in place and fastened securely.
- 6.6.2. Walk on the assembled system, checking for any undue movement.
⚠ Use the assembled system only after system stability has been confirmed.
- 6.6.3. Remove any metal chips and other assembly debris.
- 6.6.4. Ensure that system level and slope has not shifted during installation.
- 6.6.5. Ensure that all handrail ends are covered (either with loops or end caps).

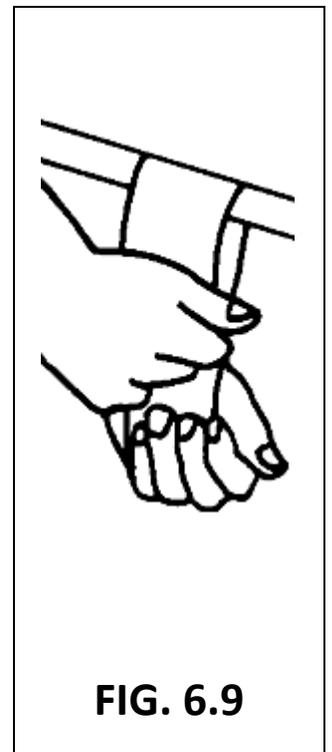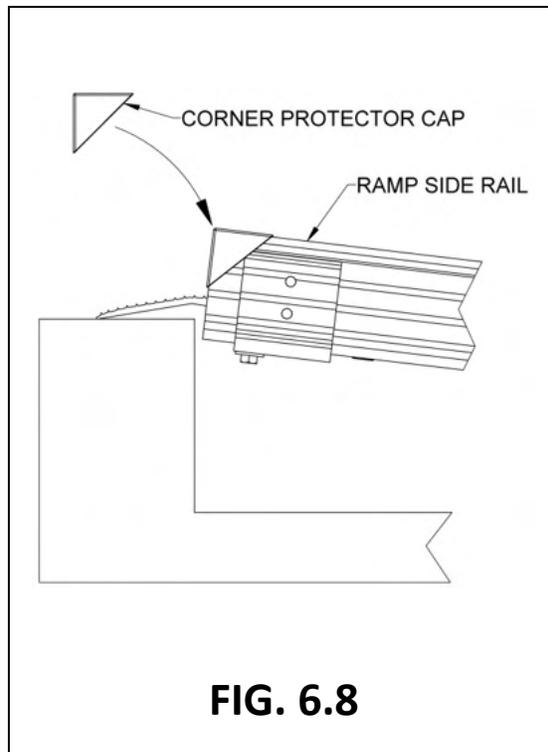
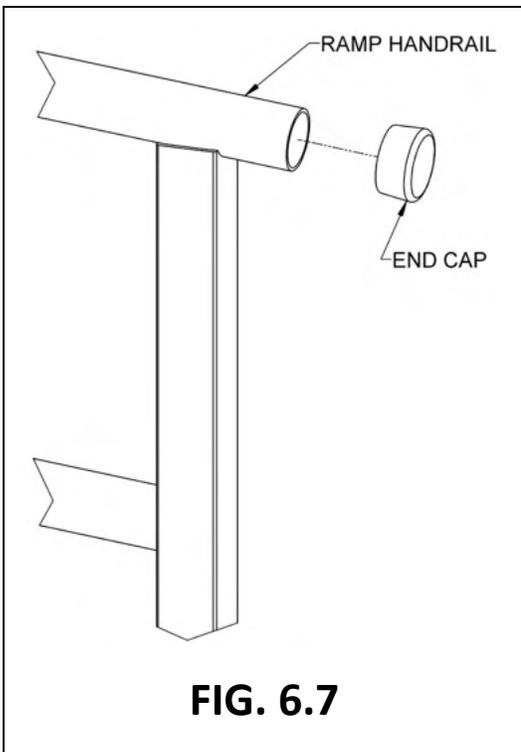


7. OPTIONAL EQUIPMENT

7.1. RAMP SUPPORT TOP

The PRST (RAMP SUPPORT TOP) provides supplemental support at the upper (or lower) end of the ramp. When used, the PRST (RAMP SUPPORT TOP) replaces the PRHBPR (RAMP HANDRAIL END BRACKET PAIR).

- 7.1.1. Attach top support brackets with two 5/16"-18 x 1-1/2" hex bolts and each 5/16" flat washers (FIG. 7.1).
 - ✎ There is a "left" and "right" top support bracket, but they can be installed on either side of the ramp depending on whether they are used at the upper or lower end of the ramp or ramp run. The two longer studs must be oriented toward the end of the ramp regardless of the side where they are being installed.
- 7.1.2. If used with a transition plate (upper or lower), the following steps are completed after the ramp is resting on a supporting surface and transition plate is installed.
- 7.1.3. Install and level Support Leg Brackets on the two shorter studs of the top support bracket in the same manner described in SECTION 3.3 (FIG. 7.2).
- 7.1.4. Locate the appropriate PRLxxPR (RAMP LEG PAIR where xx denotes the leg length) for the location and install in the same manner described in SECTION 3.3 (FIG. 7.2).
 - ✎ If installing on soft soil it may be necessary to set the foot on a concrete pad.
- 7.1.5. Insert plugs into tops of the ramp legs.
- 7.1.6. Refer to previous sections for anchoring upper and lower transitions.

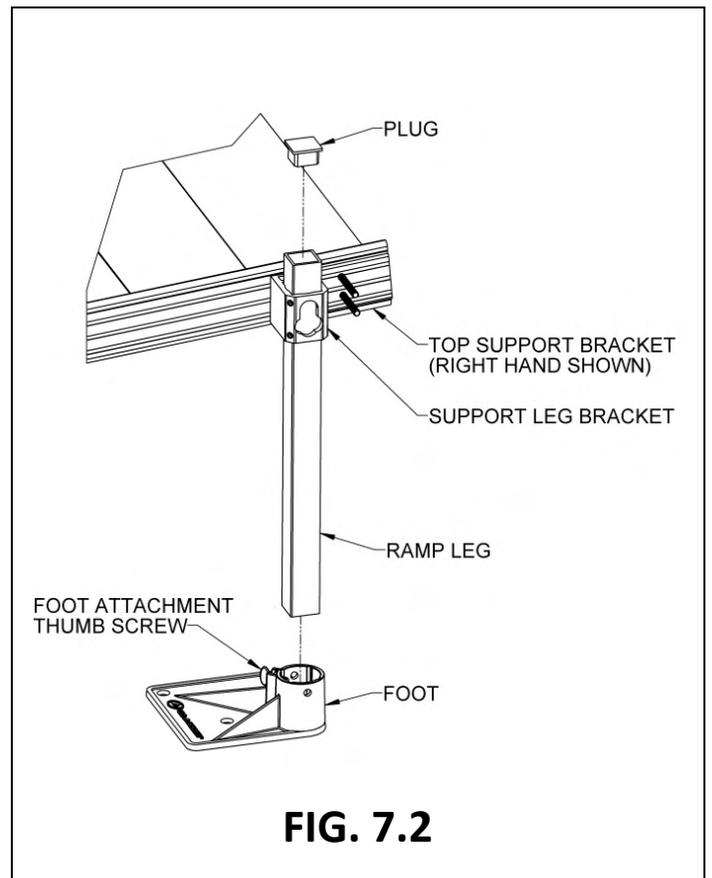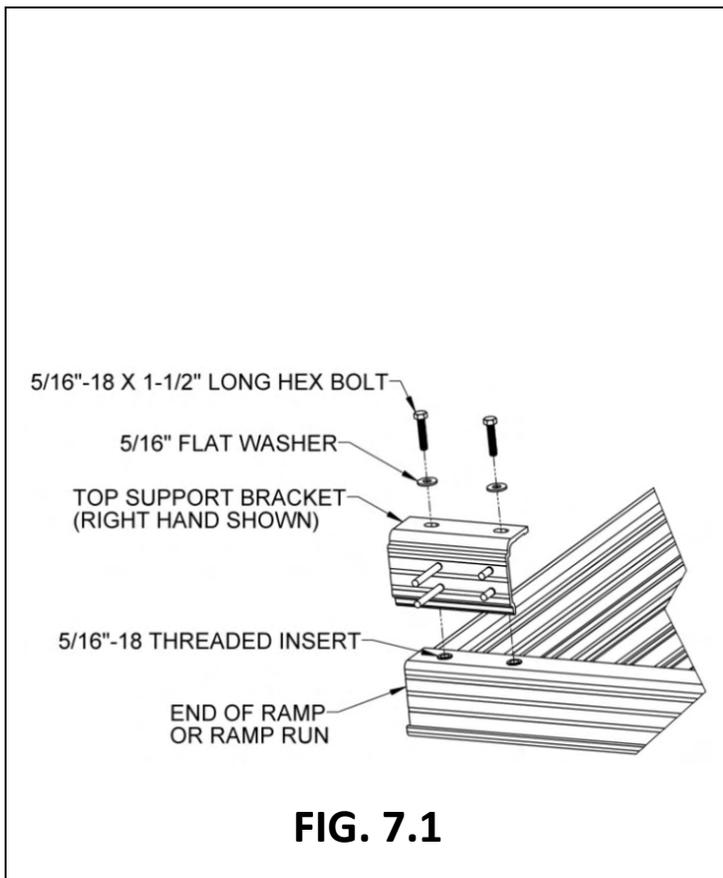

7.2. RAMP LOWER TRANSITION

7.2.1. The lower transition, in combination with an PRST (RAMP SUPPORT TOP) is commonly used to span wider gaps or accommodate larger angular misalignment than can be achieved with an upper transition. It can also be used in place of the ground transition in some situations. Despite being called a lower transition, it can be used at either end of a ramp or ramp run.

✎ The lower transition is the larger of the two transitions.

7.2.2. Lift the end of the ramp and install the lower transition as shown (FIG. 7.3).

7.2.3. If the lower transition is resting on the ground, anchoring is optional.

7.2.4. If a lower transition is resting on any type of raised area (i.e., a platform, deck, or porch), it must be anchored using the same procedures as used in 'ANCHOR RAMP UPPER TRANSITION.'

7.3. SINGLE BRIDGE PLATE

7.3.1. Securing to WOOD SURFACE OR PLATFORM:

7.3.1.1. To secure to a wooden deck or platform, use the four supplied 1/4" x 1" self-drilling self-tapping screws.

7.3.2. Securing to CONCRETE:

7.3.2.1. To secure to concrete, drill a 1/4" diameter hole at least 1 1/4" deep. Ensure that all debris from the hole is removed using a shop vacuum, blower, or other suitable type of equipment.

7.3.2.2. Insert the four supplied pin head mushroom anchors and secure by using a hammer to drive the pin in flush with the mushroom.

- ⚠ Use PBPxx (BRIDGE PLATE) in the horizontal (flat) position only.
- ⚠ It is intended to be used to bridge gaps up to a maximum of 6" between a platform and a porch or deck. IT IS NOT INTENDED TO BE USED AS A RAMP OR ON AN INCLINE.
- ⚠ Ensure that at least 1" on each of the supporting edges of the plate is supported on a good, sound construction surface that is free from defects (FIG 7.4).

FIG. 7.3


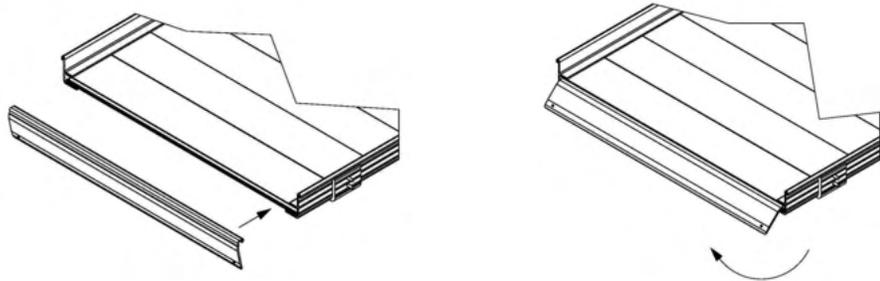


FIG. 7.4

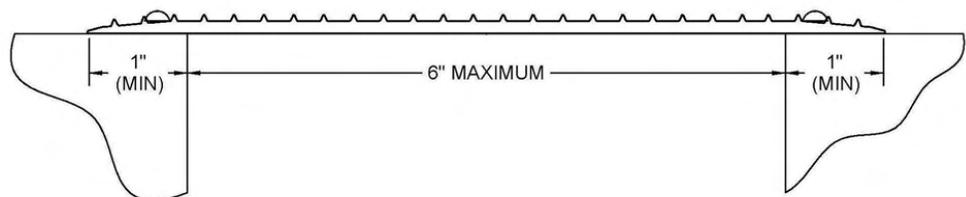

7.4. LANDING PAD

- 7.4.1. The PLP (LANDING PAD) is used at the bottom of a ramp or ramp run to assist mobility on soft ground. Contour the ground to remove any high or low areas which would prevent portions of the Landing Pad from contacting the ground.
- ⚠ The underside of the Landing Pad must be fully supported by the ground. It should never be used in an elevated position like a ramp or a platform.
- 7.4.2. Slide the bottom plate into one of the three available slots (FIG. 7.5).
- ⚠ The ramp must be installed on the side marked for ramp attachment.
- 7.4.3. After installing the bottom plate, install #8-32 hex washer head thread cutting screws into the screw slots on both sides (FIG. 7.6).

FIG. 7.5


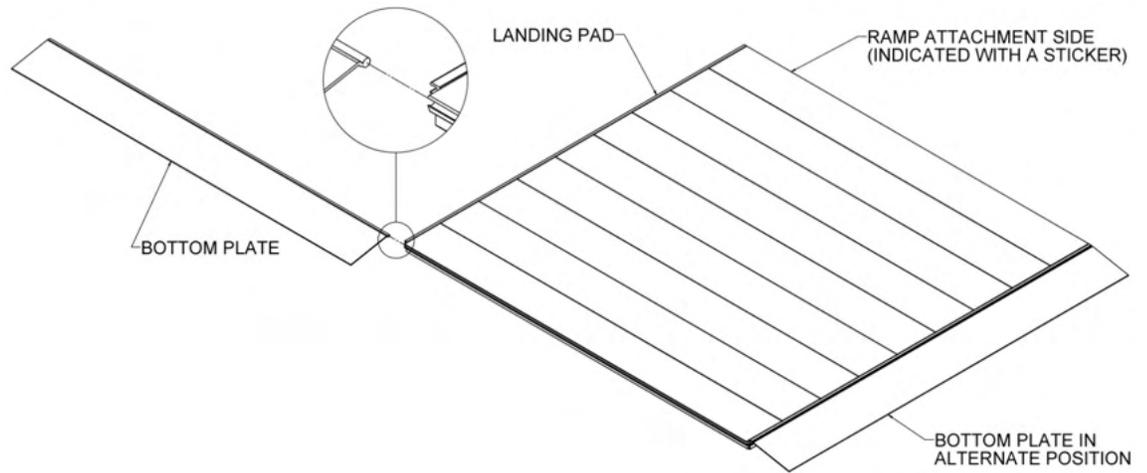




FIG. 7.6

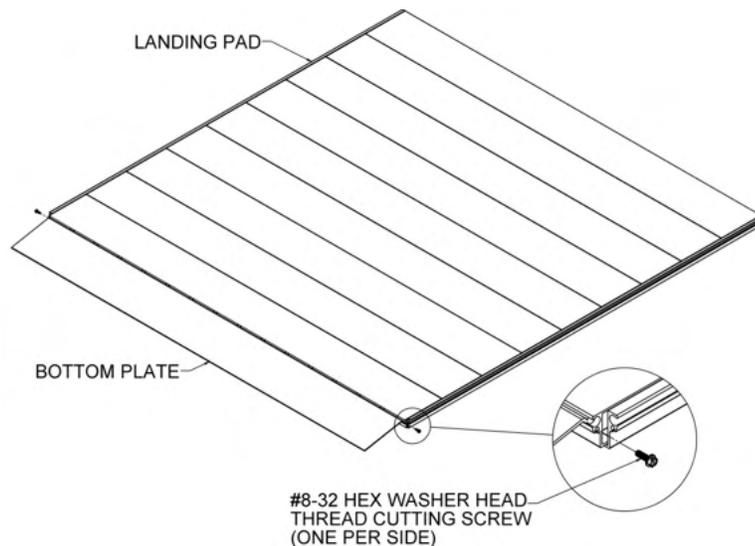

- 7.4.4. Lift the lower end of the ramp and install lower transition as described (see 'RAMP LOWER TRANSITION'), then slide the pad underneath. Make sure the ramp is on the side marked for ramp attachment and ensure that the lower transition extends fully onto the pad.
- 7.4.5. Attach lower transition to the pad using two provided 1/4" self-drilling screws (FIG. 7.7).

7.5. PLATFORM TIE STRAPS

- 7.5.1. The Platform Tie Strap ('strap') is intended to attach a platform to an existing porch, deck, threshold, or platform where there is little or no gap (1/2" maximum if being installed per ADA Guidelines).
- 7.5.2. Position straps next to the platform corner pockets, extending equally onto the platform and the existing surface (FIG. 7.8).
- 7.5.3. Using the strap as a template, mark and drill 1/8" pilot holes.
- 7.5.4. Secure strap to the platform and existing structure using the supplied 1/4" x 1" self-drilling self-tapping screws.

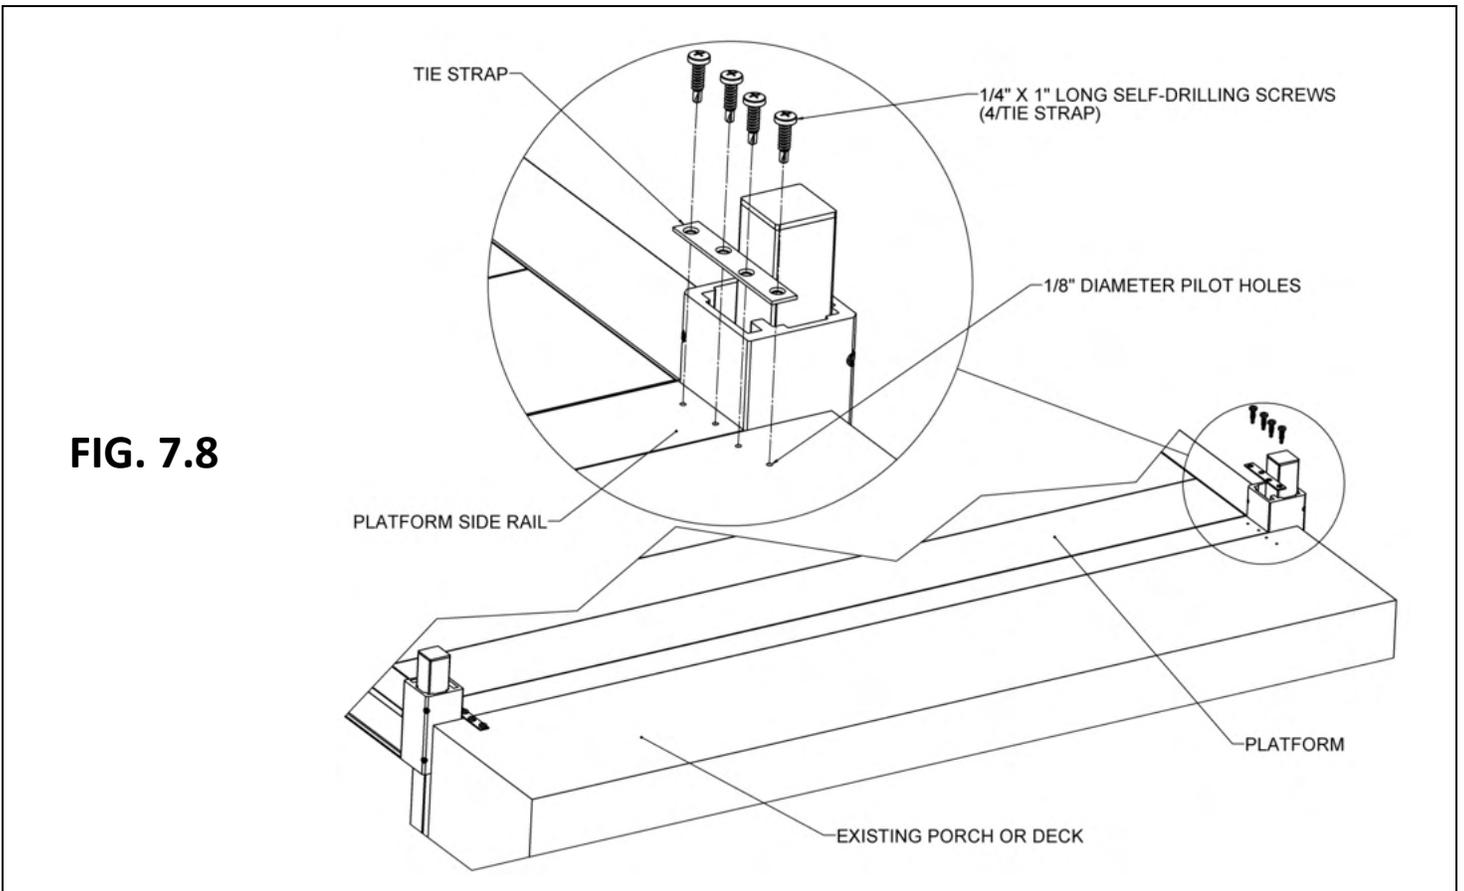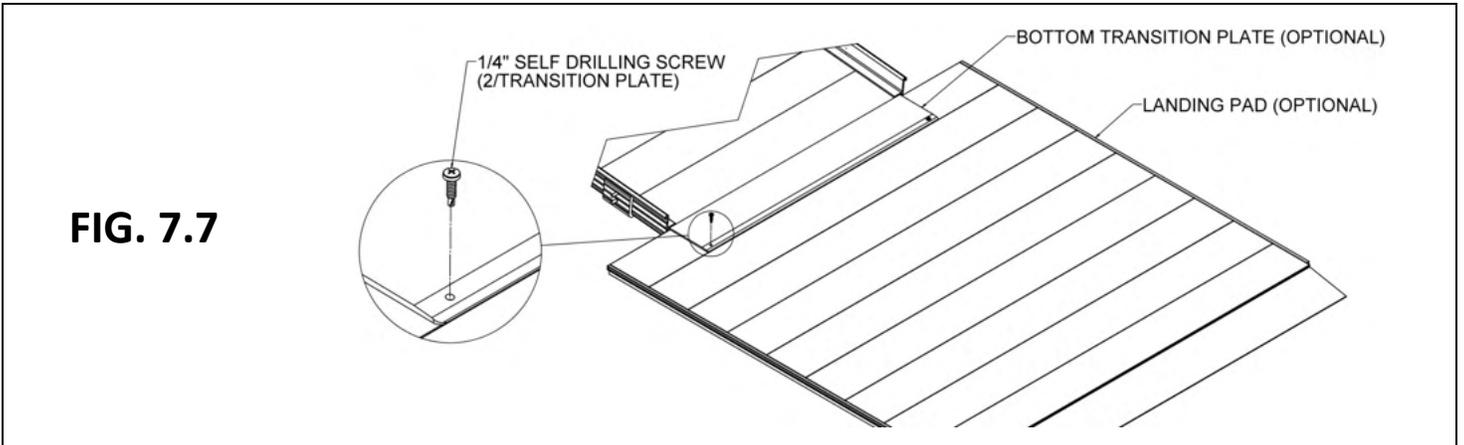

7.6. LIGHTNING GROUND ROD

Because aluminum can conduct electricity, the PLGRK (LIGHTNING GROUND ROD KIT) is available and provides the components needed to ground a ramp system.

⚠ Prior to installing, ensure that any underground electrical conductors, natural gas lines, water/drain lines, and/or other interferences are located and will not hinder the installation.

- 7.6.1. Drive the grounding rod straight into the ground as close as possible (within 1 1/2 feet maximum) to one of the support tubes leaving approximately 2" exposed.
- 7.6.2. Install the brace band around support tube. Place the #8 copper wire under the brace band on the corner as shown (FIG. 7.9).
- 7.6.3. Install the 5/16"-18 carriage bolt nut and flat washer and tighten so that wire is in good contact with support tube.
- 7.6.4. Install 5/8" grounding rod clamp to grounding rod. Place #8 wire between clamp and rod then tighten the clamp.

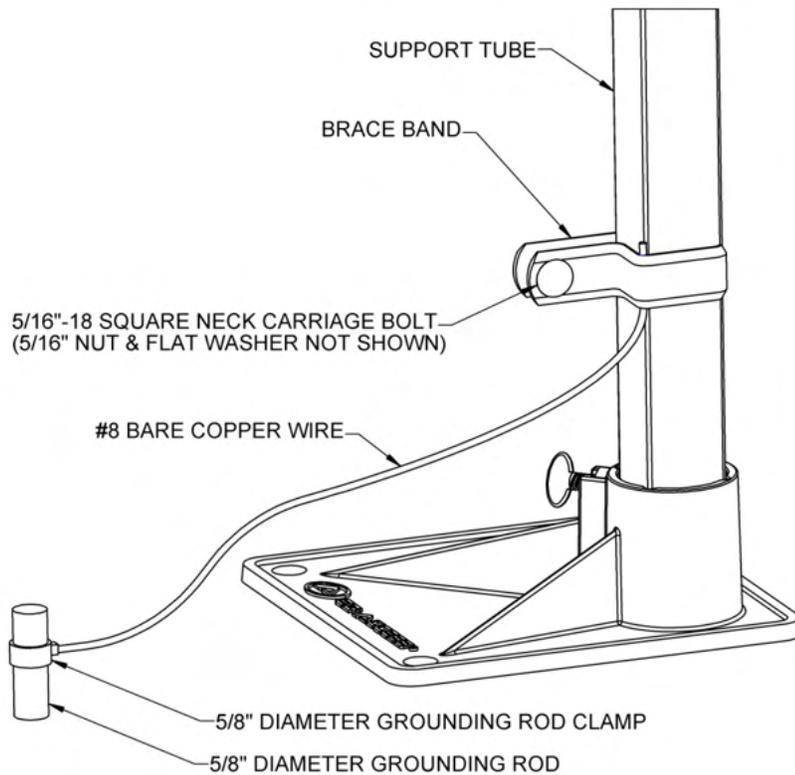


FIG. 7.9

7.7. TIE DOWN

The Tie Down Kit ('tie down') includes a pair of auger style anchors for mounting the system in soil or through asphalt, plus wire rope and hardware needed to attach the ramp or platform to the anchor. The tie down is designed to anchor the system to resist seismic loading and hurricane strength winds but is not rated for specific soil conditions or seismic zones. Compliance with local building codes usually requires anchoring calculations for the specific location, ground condition, and system stamped by a professional engineer. Consult your sales representative if site specific stamped calculations are required.

- ⚠️ Prior to installing the auger anchors into the ground, ensure that any underground electrical conductors, natural gas lines, water/drain lines, and/or other interferences are located and will not hinder the installation.
- ⚠️ Inspect installation regularly for any loose wire ropes, fasteners, auger anchors, etc.
- ⚠️ Do not use concrete anchors in asphalt. Asphalt is not usually considered a suitable surface for anchoring. Create holes in the asphalt and anchor the system to the ground using auger style anchors.

- 7.7.1. The installer, based on field conditions, will determine the exact location of the tie downs. As a general rule, they should be positioned opposite one another as shown (FIG. 7.10).
- 7.7.2. Install the PATHWAY 3G Modular Access System to establish layout and locations. It may be necessary to temporarily reposition components to install the anchors.



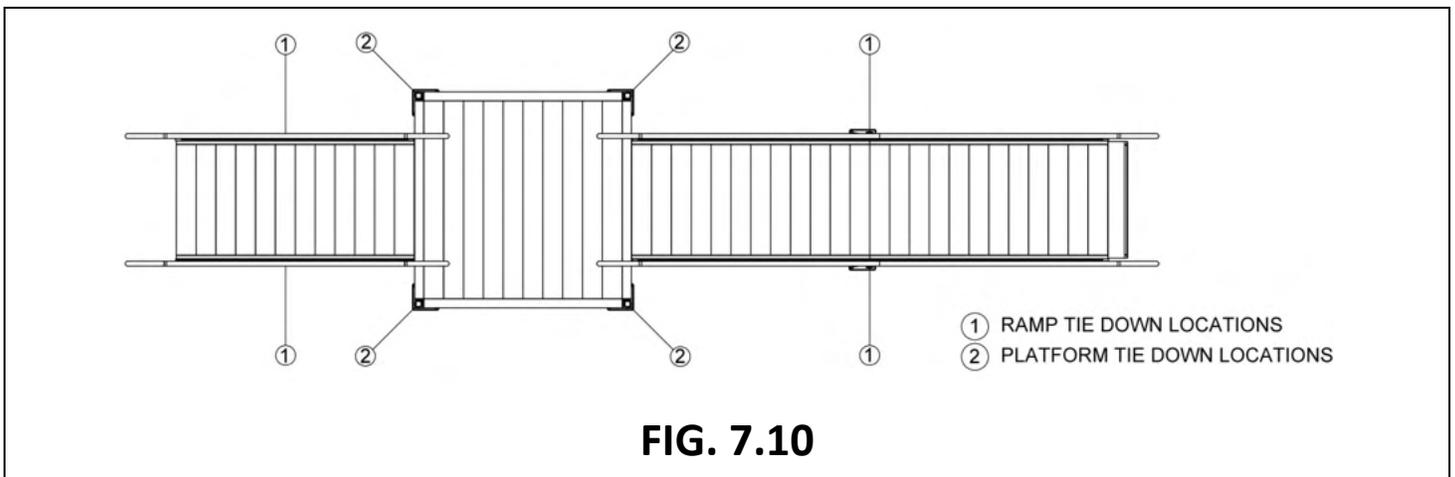


FIG. 7.10

- 7.7.3. For platforms, install one tie down at each corner where a support tube is installed (FIG 7.11).
- 7.7.4. Place a brace band around the support tube approximately 2" below either the corner pocket of a platform and secure using the 5/16" square neck carriage bolt 5/16" nut, and 3/8" washer.
- 7.7.5. Place one end of the wire rope between the legs of the brace band and around the square neck carriage bolt then secure the wire rope together using the supplied 3/16" wire rope clamp.
- 7.7.6. If using the auger style tie downs (soil and asphalt), install the auger into the ground in line with the brace band. Install as close to vertical as possible, 10-degree angle maximum. Use a 1/2" steel rod (or similar item) through the eye of the auger anchor to turn the auger anchor into the ground. Keep turning the auger until only the eye is exposed.
- 7.7.7. For concrete anchors, install per manufacturer's instructions, and then install a 5/16" eyebolt.
- 7.7.8. Place the other end of the wire rope either through the eye of the auger anchor or through the eyebolt in the concrete anchor and secure the wire rope together using the supplied 3/16" wire rope clamps.
 - ⚠️ Ensure that the wire rope has been pulled taut and all slack has been removed prior to securing it with the wire rope clamps.
- 7.7.9. Cut the excess wire rope as required using a cable cutter or other appropriate tool. Wrap the cut ends with vinyl tape (or equivalent) to keep the wire rope from fraying.
- 7.7.10. Repeat for all support tubes.
- 7.7.11. If used on a single ramp, install tie downs approx. in the center using eyebolts (FIG. 7.10).

- 7.7.12. If there are support tubes in the ramp run, the same method as described above for platforms can be used. Otherwise, drill a 5/16" hole below the tread surface (approximately 3/4" above the bottom of the side rail) and between the ribs underneath the treads in each of the side rails at the desired location.
- 7.7.13. Install one of the 5/16" eyebolts and secure to the ramp using one 5/16" flat washer and one 5/16" nut in each hole (FIG. 7.12).
- 7.7.14. Secure one end of the wire rope to the eyebolts using the supplied 3/16" wire rope clamps.
- 7.7.15. Repeat for all locations.

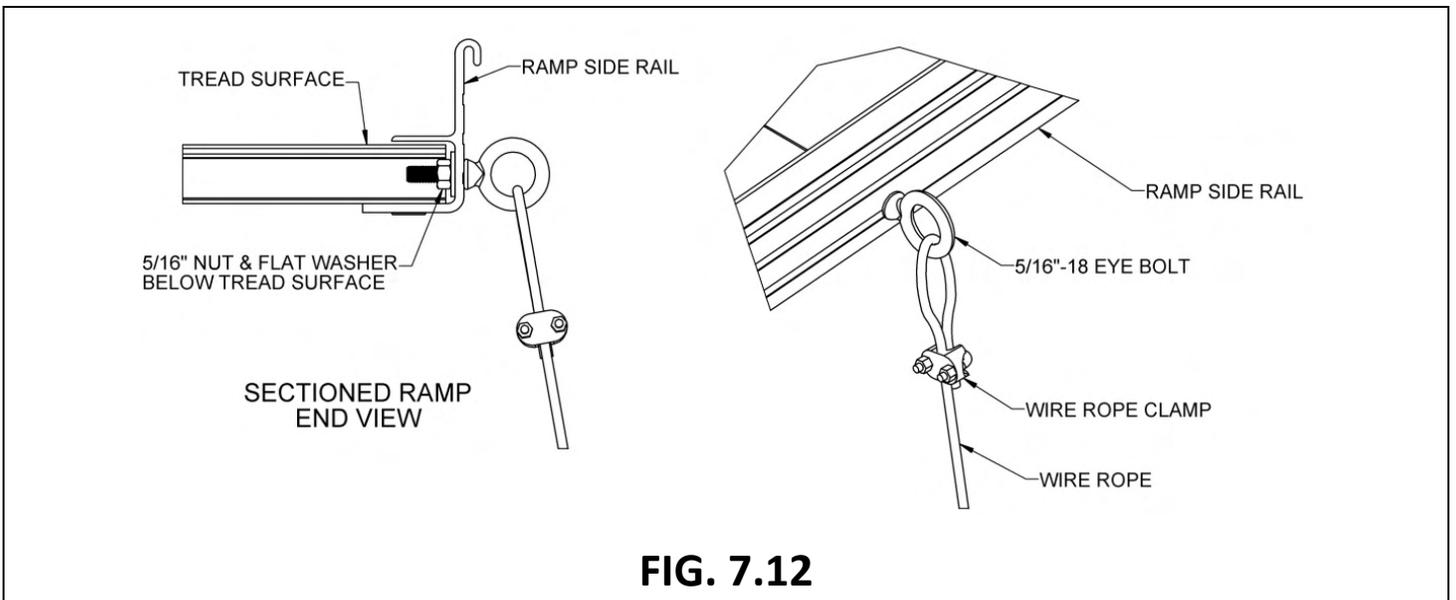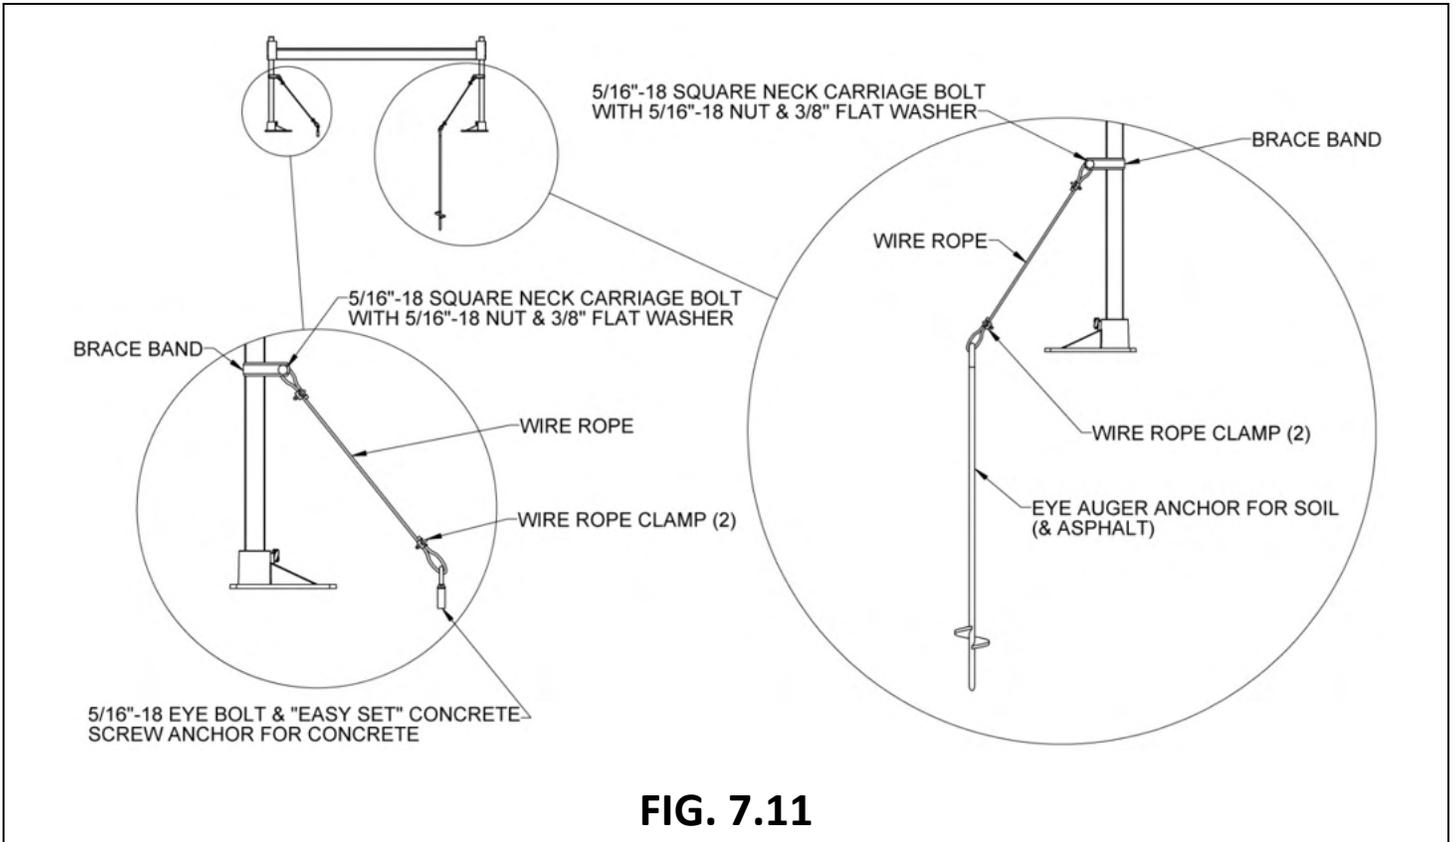

7.8. GATE

7.8.1. The MODULAR GATE 36" ('gate') can be installed to swing either direction. Determine which side the hinge should be on and the direction the gate should swing before starting installation (FIG. 7.13).

7.8.2. Using a rubber mallet, tap the provided round tube plugs into the tubing ends (FIG. 7.14).

FIG. 7.13


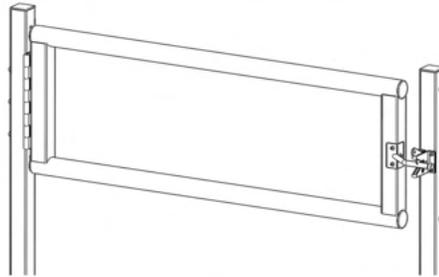


FIG. 7.14

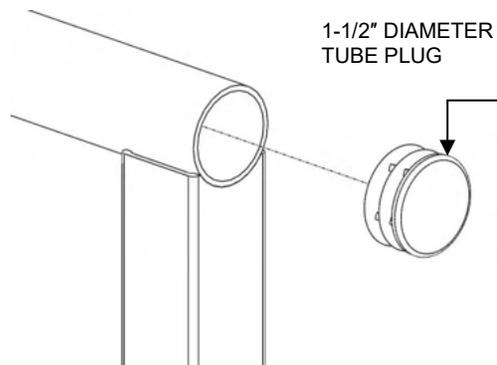

7.8.3. Position the gate hinge against the vertical handrail post. Position the hinge vertically so the top of the gate is even with the top of the handrail and so that the edge of the hinge is flush with the edge of the vertical handrail post.

7.8.4. Using the holes in the hinge as a template, mark locations with a pencil, then drill three 5/16" holes through both sides of the vertical handrail tube (FIG. 7.15). Install fasteners through hinge and vertical handrail tube and secure as shown (FIG. 7.16).

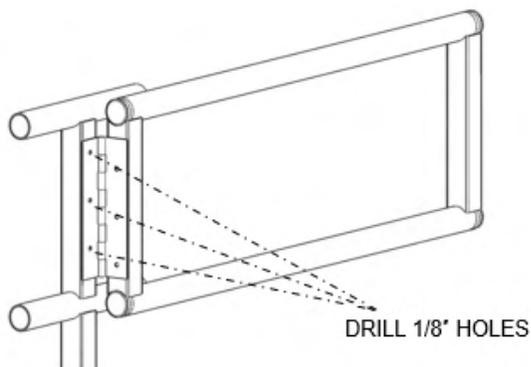


FIG. 7.15

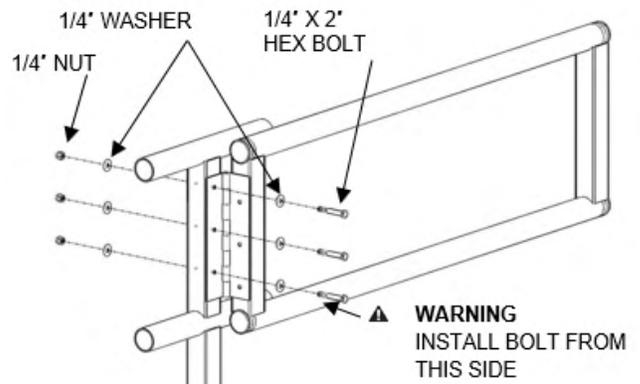




FIG. 7.16

7.8.5. Remove gravity latch and finger catch from bag.

7.8.5.1. **IMPORTANT!** Discard the screws included in the same bag as the gravity latch and finger catch, as they will not be used. Instead, use the screws included in the separate hardware bag for the following steps.



7.8.6. Center the finger catch on the gate square tube opposite the hinge and mark center of holes with a pencil. Drill three 1/8" holes through one side of the vertical handrail tube (FIG. 7.17).

7.8.7. Use 1/4" nut driver to secure catch with screws (FIG. 7.18).

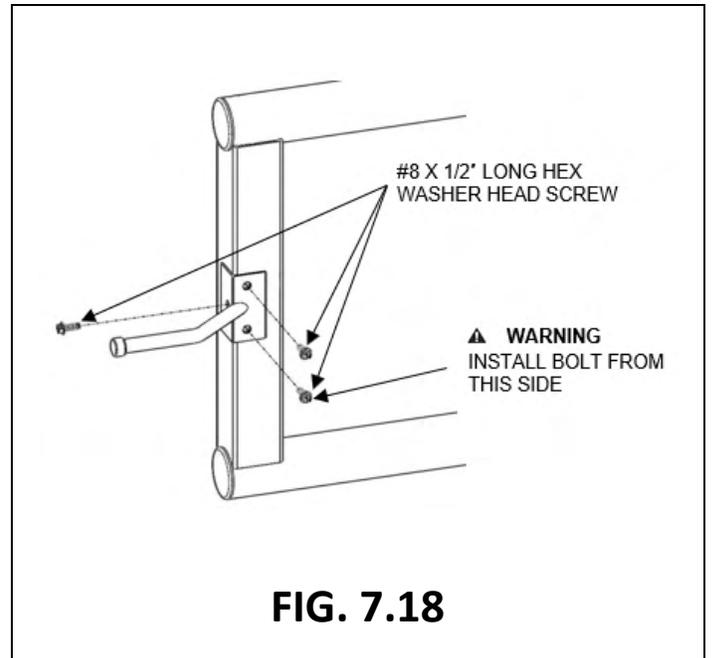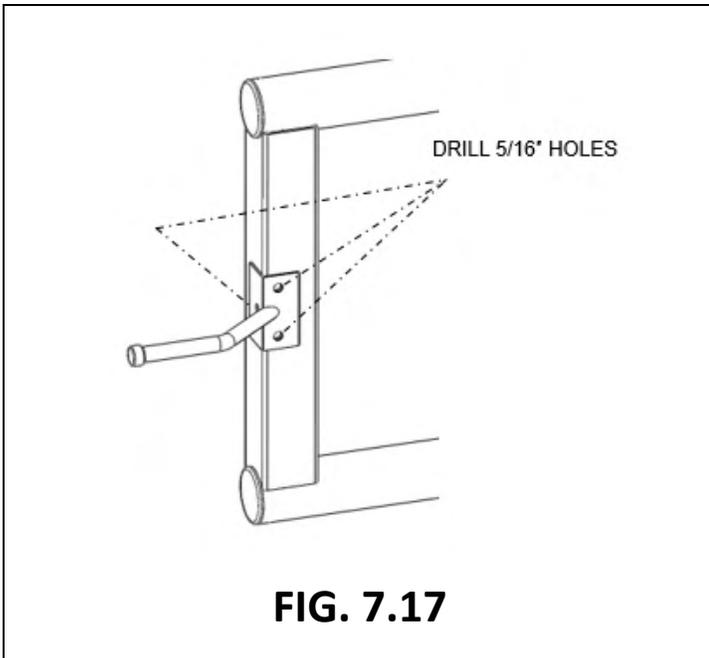

7.8.8. Clip the latch to the finger catch and center on the step or ramp vertical square tube. Mark center of the holes with pencil, then drill four 1/8" holes through one side of the vertical handrail tube (FIG. 7.19).


7.8.9. Use 1/4" nut driver to secure latch using screws (FIG. 7.20).

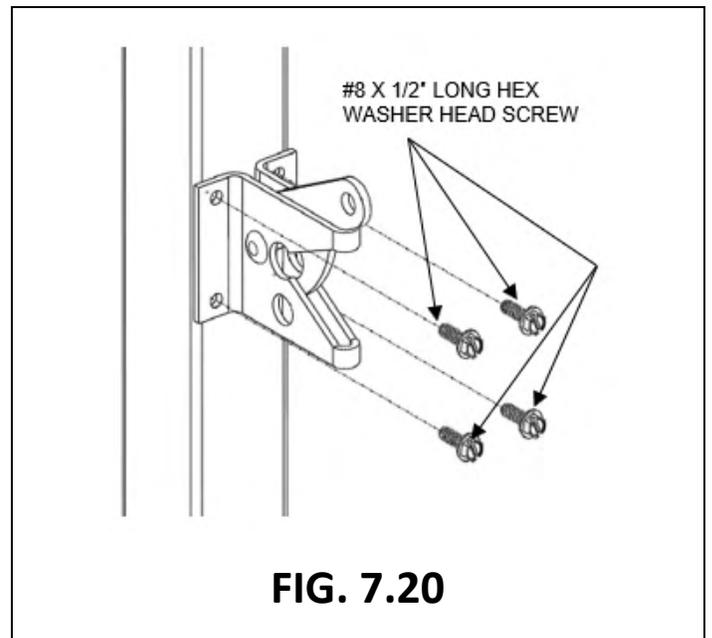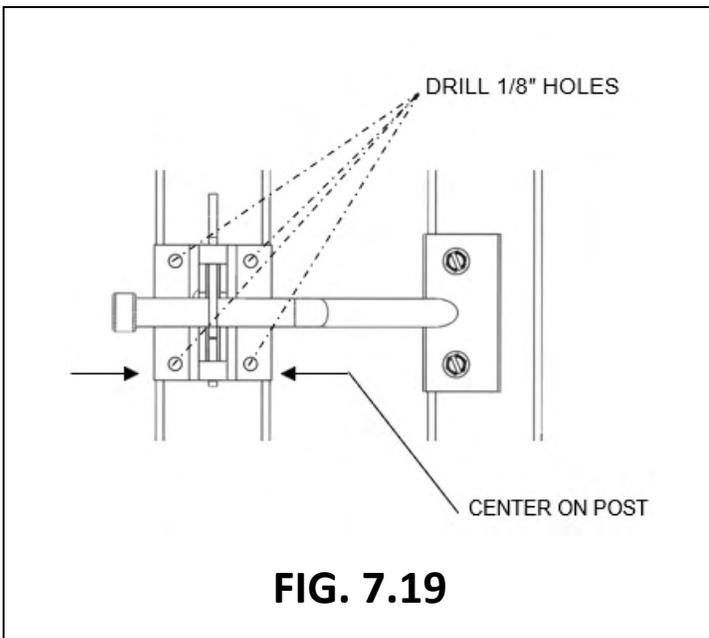

7.9. CONNECT 45-DEGREE ANGLE PLATFORM WITH TWO-LINE RAILS TO STANDARD PLATFORM

- 7.9.1. The 45-degree Angle Platform can also be connected to a standard square or rectangular platform. Install support tubes in both platforms and set at the desired height. Refer to SECTION 2.2 for installing support tubes and feet in the standard platform and SECTION 2.4 for installing support tubes and feet in the 45-degree Angle Platform.
 - ✎ The 45-degree Angle Platform can be connected to platform sides up to 6'. Additional components are needed if the attempting to connect the 45-degree Angle Platform to a platform side over 6'.
- 7.9.2. Confirm the platforms are set at the same elevation then set the 45-degree Angle Platform adjacent to the standard platform approximately 3" to 4" in from one side (FIG. 7.21).
- 7.9.3. Install two 2" x 2" Angle Posts in the corner pockets of the 45-degree Angle Platform adjacent to the standard platform. Refer to SECTION 4.5 for installing the 2" x 2" Angle Posts (FIG. 7.21).
- 7.9.4. Install a Bridge Plate at the connection between the 45-degree Angle Platform and the standard platform. Refer to SECTION 7.3 for Bridge Plate installation (FIG. 7.21).

FIG. 7.21

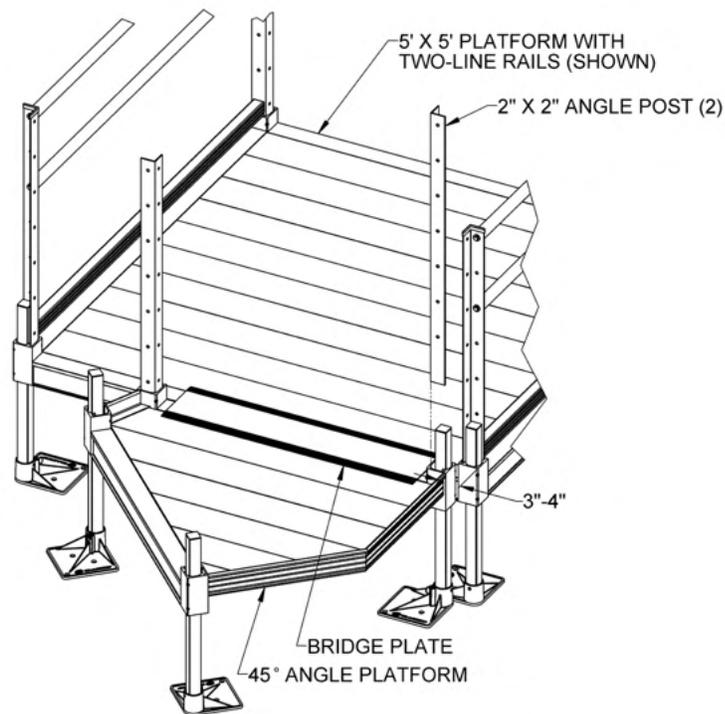

- 7.9.5. Assemble a ramp to the side of the 45-degree Angle Platform opposite the standard platform and install the ramp handrails. Refer to SECTIONs 3.2 and 3.3 for ramp installation and SECTION 4.2 for ramp handrail attachment (FIG. 7.22).
 - ⚠ Installation cannot be completed until ramp and ramp handrails are installed.
- 7.9.6. Install the Bolt-On Stub Rail, the welded handrail extension and the adjustable elbows to the ramp handrails as described in SECTION 4.6 (FIG. 7.22).
- 7.9.7. Attach two closure elbows per 2" x 2" angle post with 5/16"-18 x 3/4" hex cap screws using the holes shown (the uppermost and the third from the top). Tighten enough to hold the elbows in place but still allow them to rotate (FIG. 7.22).

- 7.9.8. The procedure for installing the 1-1/2" diameter upper and lower tubes is the same as described in SECTION 4.6 except the connection is between an adjustable elbow and a closure elbow instead of between two adjustable elbows. Align the opposing round faces, measure the upper and lower gaps separately, trim and install the upper and lower tubes and reassemble the elbows as described in SECTION 4.6 (FIG. 7.23).

FIG. 7.22



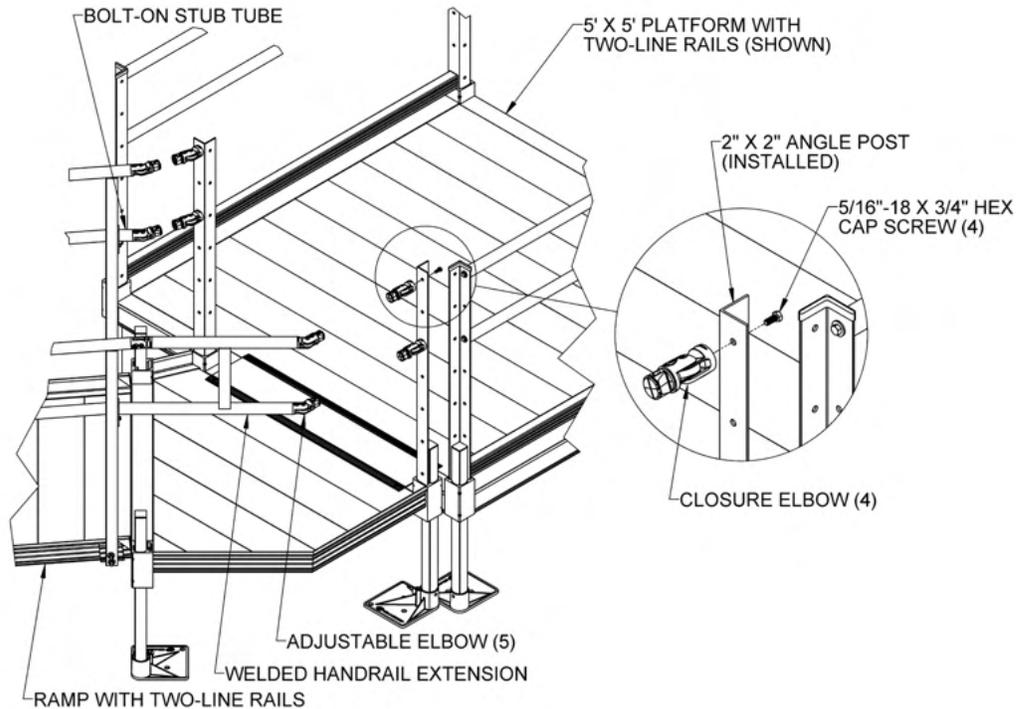


FIG. 7.23

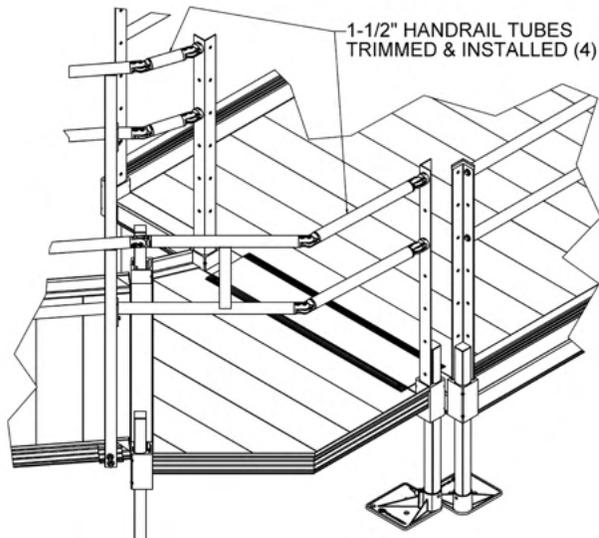

- 7.9.9. Locate the closure bracket and screw to the platform side rail using a 1/4" self-drilling, self-tapping pan head Phillips screw and 1/4" flat washer.
- 7.9.10. Center the long leg of the closure bracket with respect to the 2" x 2" angle post and align the short leg (approximately) with the 45-degree Angle Platform corner pocket, then screw short leg to the platform side rail using a 1/4" self-drilling, self-tapping pan head Phillips screw and 1/4" flat washer (FIG. 7.24).
- 7.9.11. Measure the gap between the long leg of the closure bracket and the 2" x 2" angle post, then cut the 1-1/2" x 2" curb to the measured gap length less 1/8" to account for the threaded inserts which will be installed after cutting (FIG. 7.24).
- 7.9.12. Debur all sharp edges from cutting the curb and insert 1-1/2" square, 5/16"-18 threaded inserts in the ends. Use a rubber mallet or similar tool to fully seat the threaded inserts (FIG. 7.24).
- 7.9.13. Attach the 1-1/2" x 2" curb to the closure bracket and the 2" x 2" angle post using 5/16"-18 x 1" hex cap screws (FIG. 7.24).
 - ✎ It may be necessary to temporarily remove or reposition the platform leg to attach the curb.

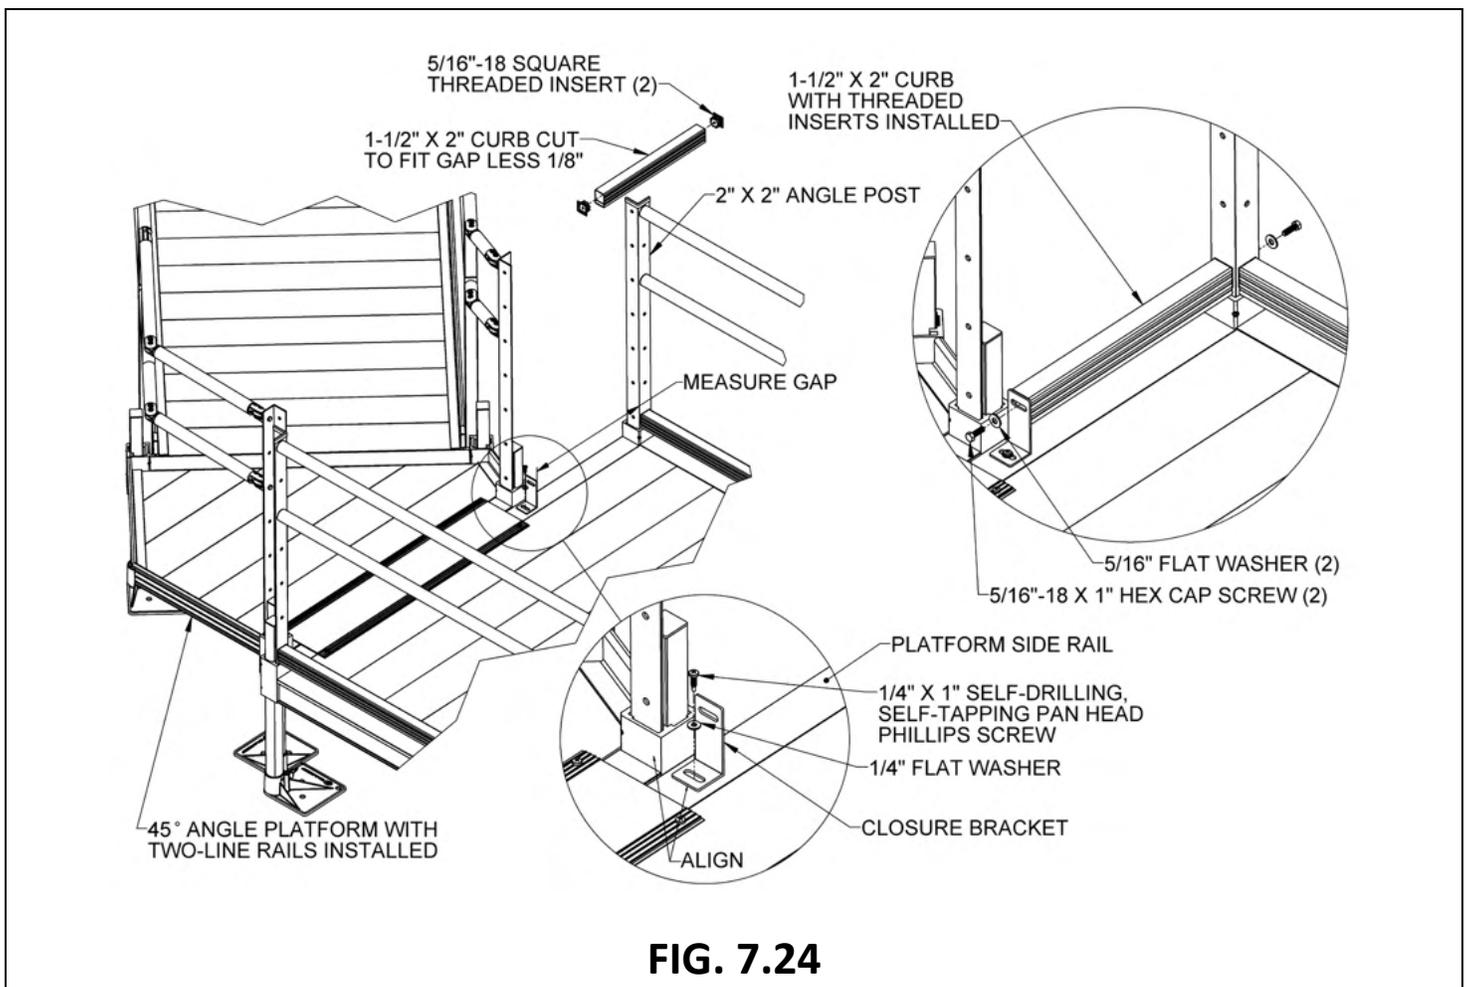

- 7.9.14. Attach two more closure elbows to the 2" x 2" angle post in the 45-degree Angle Platform and two to the angle post where the closure will connect with 5/16"-18 x 3/4" hex cap screws. Use the holes shown (the uppermost and the third from the top). Tighten enough to hold the elbows in place but still allow them to rotate (FIG. 7.25).
- 7.9.15. The procedure for installing the 1-1/2" diameter upper and lower tubes at the closure is the same as described in SECTION 4.6 except the connection is between an adjustable elbow and a closure elbow instead of between two adjustable elbows. Align the opposing round faces, measure the upper and lower gaps, trim and install the upper and lower tubes, then reassemble the elbows as described in SECTION 4.6 (FIG. 7.26).
- 7.9.16. Install an angle cap on top of each handrail post. Use construction adhesive to bond the cap in place (FIG. 7.26).

FIG. 7.25


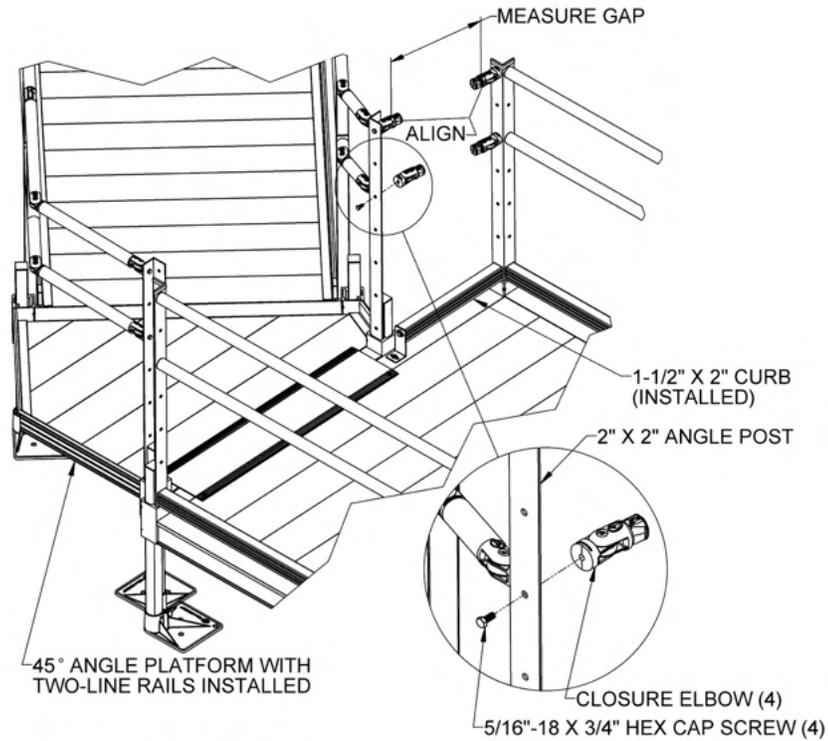


FIG. 7.26

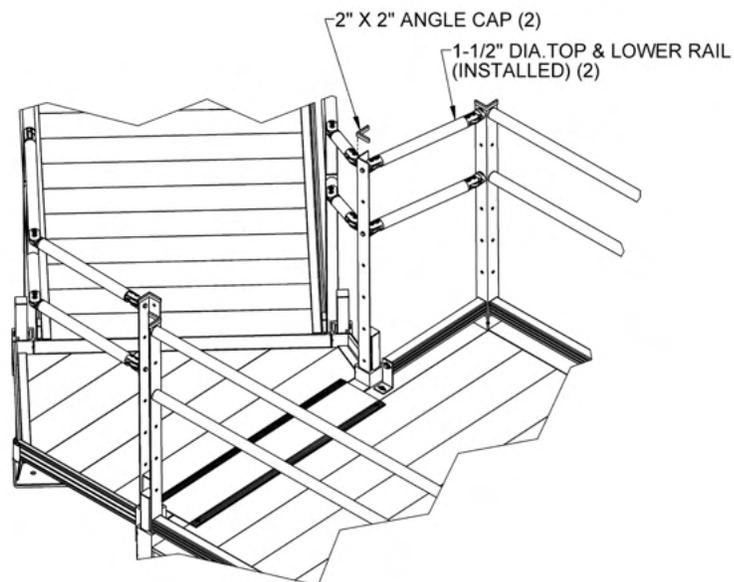

8. MAINTENANCE & SAFETY

8.1. PERIODIC MAINTENANCE AND SAFETY

- 8.1.1. Caution should be always used. Proper maintenance and upkeep to the ramp surface is vital.
- 8.1.2. Only use the system with a qualified helper.
- 8.1.3. Always use a lap belt if using the system with mobility equipment.
- 8.1.4. Before use with mobility equipment, refer to your mobility equipment's owner guide for acceptable ramp usage, including proper slope/incline, chair direction, etc.; never exceed its recommendations.
- 8.1.5. Before each use, check the system for worn, loose, or damaged parts. If you find any of these conditions, do not use the system and contact your dealer for service or repairs; failure to do so may result in serious injury.
- 8.1.6. At all times, keep the system clear of dirt, leaves, and other debris that may accumulate on the surface. Simply sweeping the ramp or using a garden hose will usually suffice, but, if needed, a damp cloth or soft brush with soap and water can be used (avoid use of alkaline detergents).
- 8.1.7. If tread surface is covered with ice and/or snow, remove ice and/or snow before use. Snow accumulation should be shoveled and the tread surface swept clean. Magnesium Chloride may be used to melt snow or ice accumulation on the ramp; however, after the snow and/or ice threat has cleared, be sure to clean the tread surface with soap and water (avoiding alkaloid detergents) to remove Magnesium Chloride residue. See DEICING below for additional information.
- 8.1.8. Keep the system clear of debris and clutter. Do not use if walking surface is unsafe.
- 8.1.9. Do not run, jump, or play on or around the system, including climbing on or between the handrails.
- 8.1.10. Do not use any part of the system to support planters, lights, decorations, etc.
- 8.1.11. The system may be slippery in wet conditions; use caution as traction may be reduced.

9. DEICING

- ⚠ For the safety of all users, it is important to keep your system clear of snow, ice, and other debris.
- ⚠ Always follow the deicing agent manufacturer's directions.
- ⚠ EZ-ACCESS® will not be held responsible for any injuries or damages that arise from the information provided. ALWAYS check with the deicing product's manufacturer or your local supplier to determine which method is best for your situation.
- ⚠ After the snow and/or ice threat has cleared, be sure to clean the tread surface with mild soap and water (avoid alkaline detergents) to remove deicing residue.
 - ✋ Sodium Chloride (salt) and Calcium Chloride are particularly damaging to newly poured concrete. In addition, these chemicals should not be applied to brick and stone surfaces.
 - ✋ While care has been taken to ensure that the table below is accurate, the information shown is not all-inclusive. Manufacturers of deicing products may make changes to their products as well as recommended functions and usage requirements. The deicing method you choose should be researched with your deicer supplier so you can determine which method is best for your situation.
 - ✋ The information below is taken from Fact Sheet 707, Cooperative Extension Service, University of Maryland at College Park, University of Maryland Eastern Shore and was up to date at the time of this manual's publication.

PRODUCT	MIN. WORKING TEMP (°F)	SPEED OF ACTION	DAMAGES CONCRETE & METAL	HARMFUL TO PLANTS
MAGNESIUM CHLORIDE	-13	VERY FAST	NO	MODERATE
CALCIUM CHLORIDE	5	FAST	YES	YES
SODIUM CHLORIDE (SALT)	18	MODERATE	YES	YES
POTASSIUM CHLORIDE	25	SLOW	OK ON OLD CONCRETE	MODERATE
CALCIUM MAGNESIUM ACETATE (CMA)	25	SLOW	NO	NO

Thank you for choosing EZ-ACCESS[®]
for your accessibility needs.



EZ-ACCESS[®]

www.ezaccess.com