



DUAL CHIAVARI CHAIR CART

INSTRUCTION MANUAL



67286

CONTENTS

Specs	3
Parts Diagram	4
Assembly	5

TOOLS NEEDED

- Needle Nose Pliers
- Box Cutters / Utility Knife
- Wrenches: 1/2" & 3/4"
- Sockets: 1/2" & 3/4"

STANDARD ON ALL AMERICAN CART PRODUCTS

Made in the USA

Hand crafted at our Ohio plant.

Heavy-duty comes standard

American Carts are all built to heavy duty specs

Flat-free tires

10 inch closed-cell tires that will never go flat

Powder coated finish

Protects the steel and provides a lasting finish

D-Brackets

One piece design holds the axle in place and supports the load

Steel construction

Built from American sourced steel

Easy to operate

Designed to get work done with less muscle strain and simple operation


WARRANTY

3 Year Limited Warranty. Carts, excluding any finishes, casters and wheels are warranted for three (3) years from date of original purchase. Casters and wheels are warranted for 90 days from date of original purchase. We will repair, without charge, any defect due to faulty material or workmanship. These warranties do not cover failures due to abuse, misuse, improper installation, accidental damage or when repairs or modifications have been made or attempted to be made by anyone other than Granite Industries. Any defective products that meet warranty specifications and Granite Industries approval, may be returned to the factory to be repaired or replaced free of charge. (Granite Industries will pay to ship replacement item(s) to the customer; however the customer is responsible for shipment of products to the factory.) This remedy is the sole remedy in contract, tort or otherwise, and Granite Industries is not liable for incidental, consequential or special damages. These warranties give you specific legal rights, and you may have other rights which vary from state to state. Should you have any questions, contact Granite Industries (Proof of purchase may be required).



Customer Service
877-447-2648
M-F, 8am - 5pm EST


SPECS

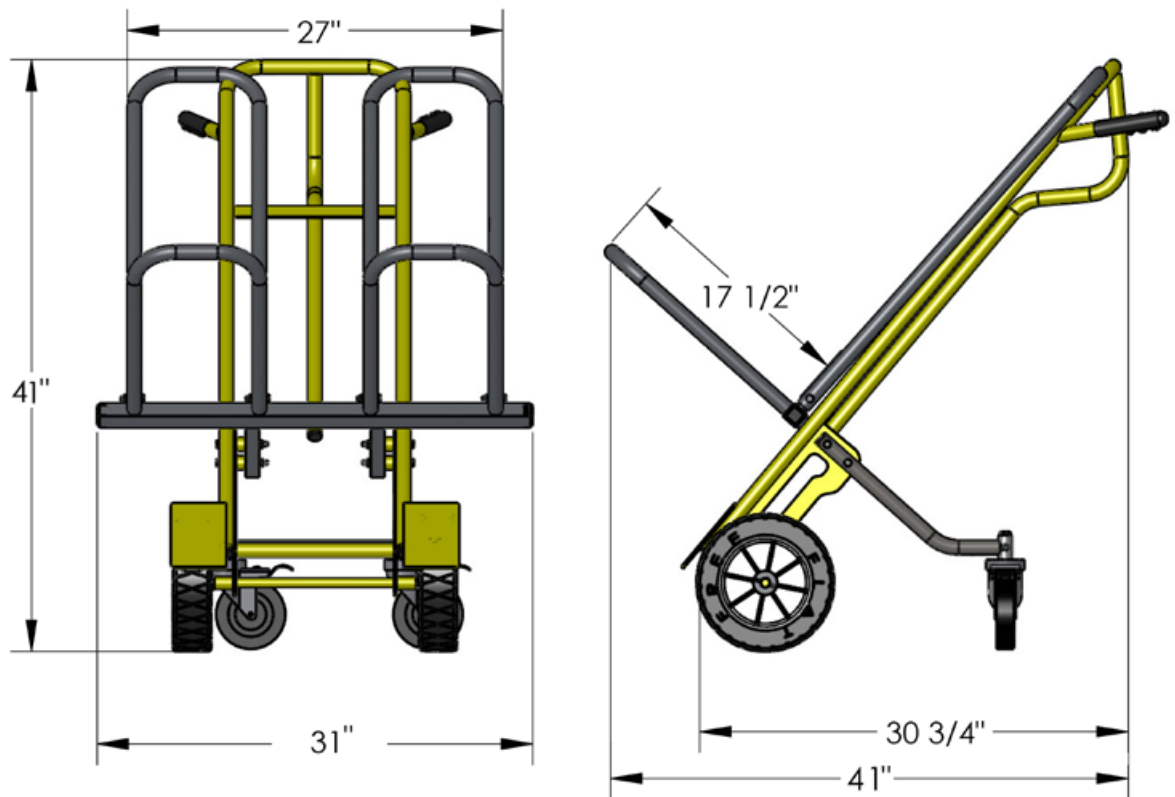

Overall Dimensions:	W: 31"	D: 41"	H: 41"
Weight:	54 lbs.	Capacity:	500 lbs.

*Measurements taken on 4 wheels

PARTS DIAGRAM

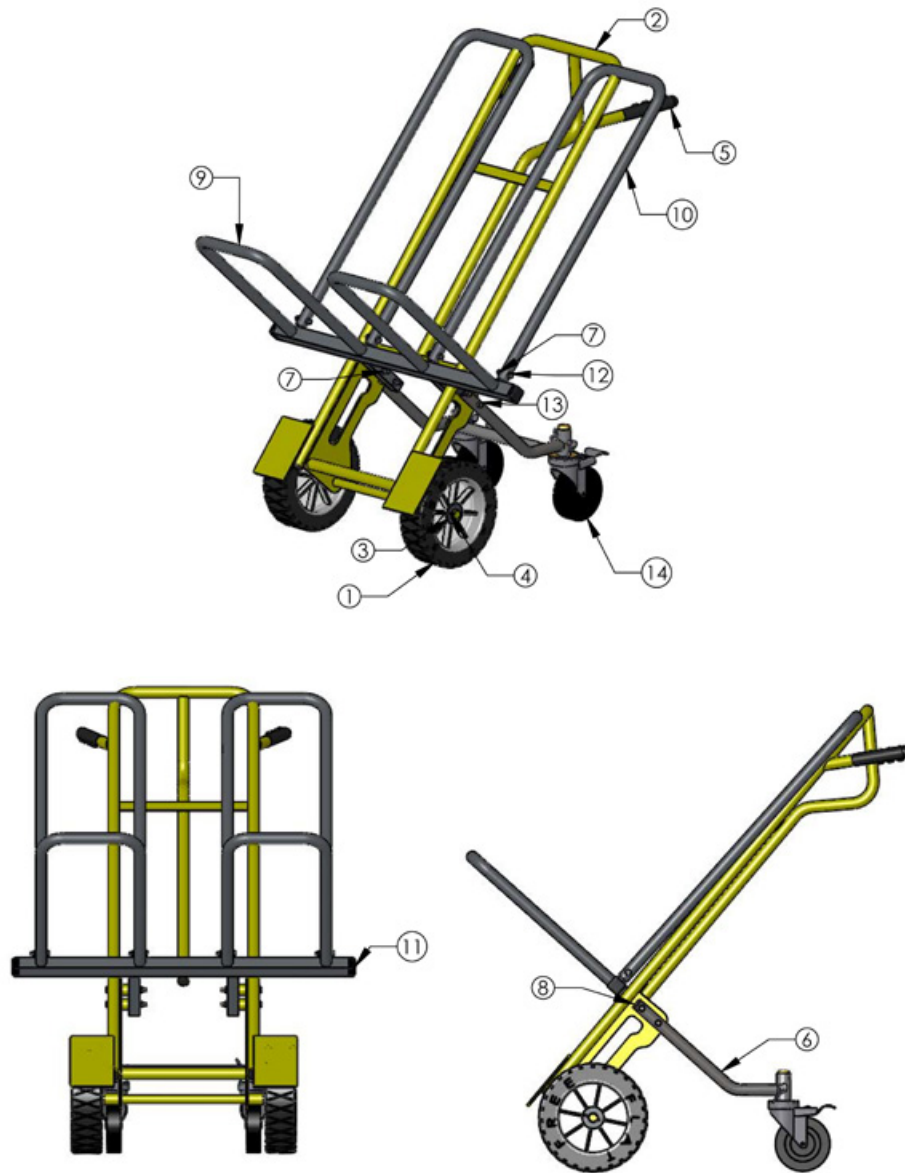

ITEM NO	QTY	PART NO	DESCRIPTION	
1	2	PI-06-0124	10" Wheel with plastic hub	
2	1	MI-12-4841	Cart Body	
3	2	PI-01-0451	3/4" Washer	
4	2	PI-01-0226	1-1/4" Cotter Pin	
5	2	PI-04-0109	Hand Grip	
6	1	MI-12-4842	Rear caster assembly	
7	8	PI-01-0017	5/16" Locknut	
8	5	PI-04-0035	1" Round Cap Plug	
9	1	MI-12-4873	Front Chair Bar	
10	2	MI-01-5878	Rear Chair Bar	
11	2	PI-04-0108	1-1/4" Square Cap Plug	
12	4	PI-01-0201	5/16" Hex Head Bolt (1-1/2" L)	Use 1/2" Wrench/Socket
13	4	PI-01-0531	5/16" Hex Head Bolt (3-1/2" L)	Use 1/2" Wrench/Socket
14	2	38057 SP-C5FL	5" Caster	

STEP 1: FRONT WHEEL ASSEMBLY

COMPONENTS		
ITEM NO	QTY	DESCRIPTION
1	2	10" Wheel with plastic hubs
2	1	Cart Body
3	2	3/4" Washer
4	2	1-1/4" Cotter Pin

TOOLS		
Needle Nose Pliers		



1

Slide the wheel onto the axle, making sure the offset side is facing inwards, toward the body of the cart.



2

Slide a washer onto the axle.



3

Then insert the cotter pin into the hole provided. Bend the cotter pin outward with a **needle nosed pilers**.

STEP 2: REAR CASTER ASSEMBLY

COMPONENTS		
ITEM NO	QTY	DESCRIPTION
6	1	Rear caster assembly
13	4	5/16" Hex Head Bolt (3-1/2" L)
14	2	5" Caster



1

Insert the caster into the rear wheel assembly.



2

Align the holes and insert the snap pin to lock the caster into place. Repeat on the other side.



3

Align the rear wheel assembly over the holes on the back of the cart.



4

Insert two bolts 5/16" bolts (3-1/2"L) through the rear wheel assembly and cart frame. Repeat on other side. DO NOT install the nuts at this time.

STEP 3: FRONT CHAIR BAR

ITEM NO	QTY	DESCRIPTION
9	1	Front Chair Bar
7	4	5/16" Lock Nut

TOOLS

1/2" Wrench

1/2" Socket



1

Turn your cart upright.




2

Slide the 5/16" bolts out slightly, so their ends are flush with the cart body. Do not pull them all the way out.



3

Slide the chair bar into place, aligning the holes on the chair bar with the holes on the cart body.

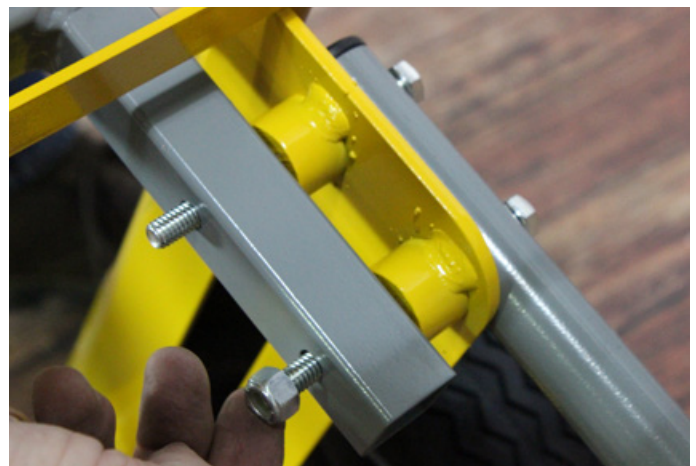

4

Slide the bolts through the holes on the chair bar and install the nuts using a **1/2" wrench and socket**.

STEP 4: REAR CHAIR BAR

STEP 1 REQUIRED COMPONENTS

ITEM NO	QTY	DESCRIPTION
7	4	5/16" Locknut
6	1	Rear Caster Assembly
12	4	5/16" Hex Head Bolt (1-1/2" L)

TOOLS

1/2" Wrench

1/2" Socket



1

Slide one of the rear chair bars onto the posts of front chair bar. Repeat for the other side.



2

Insert a 5/16" Hex Head Bolt (1-1/2" L) through the holes on both the front and rear chair bar.



3

Screw a 5/16" nut onto the bolt and tighten down with a **1/2" wrench and socket**. Repeat for the other three bars.



Your Dual Chiavari Chair Cart is now fully assembled.